

# **SINGER**

**121W and 122W**

1.21 w f

FORM 1223W  
REVISED  
SEPTEMBER, 1918

## INDEX

---

|                               | PAGE |
|-------------------------------|------|
| ACCESSORIES .....             | 54   |
| BOBBIN WINDER .....           | 54   |
| FOLDER .....                  | 61   |
| KNEE LIFTER .....             | 55   |
| LAP SEAM EDGE GUIDE .....     | 59   |
| " " FELLER .....              | 59   |
| MACHINE NO. 121w1 .....       | 7    |
| " " 121w2 .....               | 15   |
| " " 121w3 .....               | 22   |
| " " 121w4 .....               | 29   |
| " " 122w1 .....               | 37   |
| " " 122w2 .....               | 46   |
| NUMERICAL LIST OF PARTS ..... | 63   |
| OBSOLETE PARTS .....          | 61   |
| PRESSER FEET .....            | 57   |
| ROLLER WELT GAUGE .....       | 60   |
| THROAT PLATES .....           | 58   |

# PRICE LIST

OF

# PARTS



# MACHINES

OF

## CLASSES 121w and 122w

---

THE SINGER MANUFACTURING COMPANY

# Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

202001 and upward are numbers of Machine Parts.

 
The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (\*) are furnished only when repairs are made at the factory.

## LIST OF PARTS COMPLETE

FOR

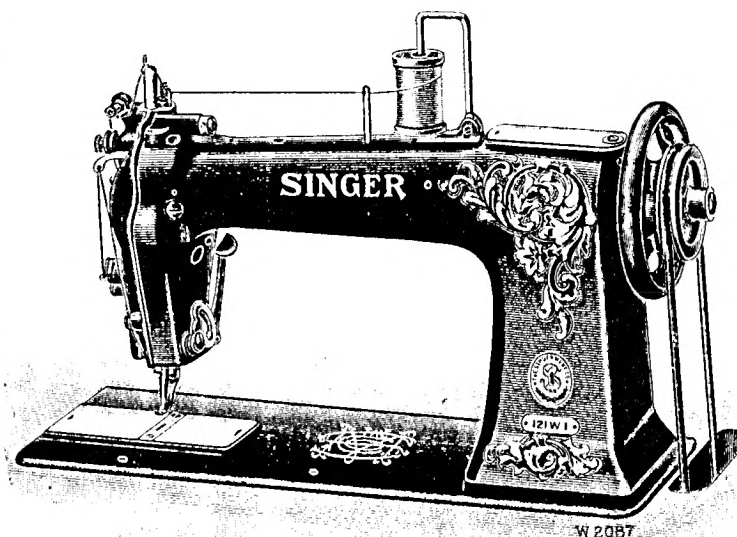

## MACHINE No. 121w1

NEEDLE FEED. ALTERNATING PRESSERS.

For Sewing Rough, Uneven or Sticky Goods.

| No.     | Plate | Name                           | Each |
|---------|-------|--------------------------------|------|
| *213451 | —     | Arm .....                      | \$ — |
| 202247  | 11055 | " Cap .....                    | 35   |
| 200278u | 12311 | " " Screw .....                | 05   |
| 202248  | 11701 | " " Washer .....               | 05   |
| 204235  | 11701 | " Position Pin (2) .....       | 02   |
| 200004e | 11063 | " Screw (3) .....              | 08   |
| 202005  | 11701 | " " Washer (3) .....           | 01   |
| 213491  | 11183 | " Shaft .....                  | 1 75 |
| 202243  | 11055 | " " Bushing (back) with        |      |
|         |       | 202244 .....                   | 75   |
| 202244  | —     | Arm Shaft Bushing (hack) Oil   |      |
|         |       | Packing (wick) .....           | 02   |
| 200338c | 11701 | Arm Shaft Bushing (back) Set   |      |
|         |       | Screw .....                    | 04   |
| 213452  | 11055 | Arm Shaft Bushing (front) with |      |
|         |       | 202260 .....                   | 35   |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 202260  | —     | Arm Shaft Bushing (front) Oil Packing (wick) .....   | \$ 01 |
| 200352c | 11701 | Arm Shaft Bushing (front) Set Screw .....  | 03    |
| 213453  | 11055 | Arm Shaft Connection Belt .....  | 1 00  |
| 213454  | 11055 | " " " " Pulley with 200363c, 200396c and two 213455 .....  | 1 25  |
| 200396c | 11701 | Arm Shaft Connection Belt Pulley Position Screw .....  | 03    |
| 200363c | 11701 | Arm Shaft Connection Belt Pulley Set Screw .....   | 03    |
| 213455  | 11063 | Arm Shaft Connection Belt Pulley Spring Flange .....   | 20    |
| 213492  | 11055 | Arm Shaft Counter Balance with 200347c .....   | 25    |
| 200347c | 11063 | Arm Shaft Counter Balance Set Screw .....  | 03    |
| 213471  | 11183 | Balance Wheel (belt groove 2 3/4 in. diam.) with two 200335c .....                                   | 1 00  |
| 200062u | 12311 | Balance Wheel Adjusting Screw ..   | 07    |
| 200335c | 12311 | " " Set Screw .....  | 04    |
| *213468 | —     | Bed .....  | —     |
| 202258  | 12153 | " Hinge Connection (2) .....   | 08    |
| 200570F | 12311 | " " " Screw (4) ....   | 05    |
| 213477  | 11055 | " Slide (back) with 213478 and 213479 .....  | 60    |
| 213476  | 11055 | Bed Slide (front) with 213478 and 213479 .....   | 60    |
| 213478  | 11063 | Bed Slide Friction Slide .....   | 10    |
| 213479  | 11063 | " " " Spring ...   | 02    |
| 213783  | 11064 | Bobbin .....   | 08    |
| *213444 | —     | " Case .....   | —     |
| 203648  | 11703 | " " Latch .....  | 10    |
| *202056 | 11703 | " " " Pin .....  | —     |
| 213932  | 11703 | " " " Plunger .....  | 10    |
| 203474  | 11703 | " " " Spring .....   | 01    |
| 213446  | 11064 | " " Lever .....  | 1 00  |
| 213447  | 11064 | " " " Arm with 200099u ..  | 30    |
| 200099u | 11703 | " " " " Pinch Screw ..   | 02    |
| 213445  | 11064 | " " Tension Spring .....   | 10    |
| 200984c | 11703 | " " " " Regulat- ing Screw .....   | 04    |
| 200594c | 11703 | Bobbin Case Tension Spring Screw ..  | 02    |
| 213689  | 11064 | Bobbin Case complete, Nos. 200594c, 200984c, 202056, 203474, 203648, 213444, 213445 and 213932 ..... | 1 00  |
| 221580  | —     | Face Plate with 200368u, 200739F, 202087, 202090, 213691 and four 200397u .....                      | 1 50  |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200053c | 12311 | Face Plate Screw (2) .....   | \$ 04 |
| 200739F | 11063 | " " Thread Guide Screw ..  | 08    |
| 221581  | 11183 | Face Plate complete, Nos. 200577u, 202088, 204272, 204280, 210957, 210958, 210992, 210993, 213500, 213690, 221580 and two 200309c ..   | 3 25  |
| 213464  | 11063 | Feed Cam .....   | 75    |
| 213692  | 11066 | " " Position Pin (2) .....   | 02    |
| 201827  | 11063 | " " Roller .....   | 12    |
| 201821  | —     | " " " 201827 with 200818c ..   | 30    |
| 200818c | 11066 | " " " Screw Stud .....   | 15    |
| 201522E | 11701 | " " " " " Nut ..   | 03    |
| 200035E | 11066 | " " Screw .....  | 05    |
| 213465  | 11066 | " Connection .....   | 40    |
| 213466  | 11066 | " " Link .....   | 50    |
| 213467  | 11066 | " " " Lever .....  | 50    |
| 200101u | 11066 | " " Stop Screw .....   | 04    |
| 213463  | 11066 | " Eccentric Connection with 200094F .....  | 1 00  |
| 200094F | 11701 | Feed Eccentric Connection Pinch Screw .....  | 02    |
| 213460  | 11702 | Feed and Needle Carrying Frame with 213711 .....   | 1 50  |
| 221569  | —     | Feed and Needle Carrying Frame 213460 with 200101u, 201522E, 201821, 213461, 213463 to 213467, 213473 to 213475, 213481, 213483, 213485 to 213488, 213673 and two 213484 ..... | 15 75 |
| 213711  | 11701 | Feed and Needle Carrying Frame Bushing .....   | 10    |
| 213639  | 11078 | Feed and Needle Carrying Frame Collar with 200380c .....   | 15    |
| 200380c | 12319 | Feed and Needle Carrying Frame Collar Set Screw .....  | 02    |
| 213461  | 11067 | Feed and Needle Carrying Frame Link .....  | 75    |
| 213494  | 11067 | Feed Regulating Lever .....  | 60    |
| 213696  | 11067 | " " " Friction Washer .....  | 10    |
| 200095B | 11067 | Feed Regulating Lever Screw ....   | 04    |
| 213496  | 11067 | " " " Segment ....   | 25    |
| 201183u | 11063 | " " " Screw .....  | 04    |
| 200681c | 11067 | " " " Stop Screw ..  | 04    |
| *221550 | —     | Hook (sewing) .....  | —     |
| 221551  | 11703 | " 221550 with 200088F, 213438 and 213644 .....   | 5 00  |
| 221554  | —     | Hook and Bobbin Case complete, Nos. 213689 and 221551 .....  | 6 00  |

| No.     | Plate | Name                               | Each  |
|---------|-------|------------------------------------|-------|
| 213440  | 11064 | Hook Bushing (lower) .....         | \$ 25 |
| 213439  | 11064 | " " (upper) .....                  | 25    |
| 200378c | 12311 | " " Set Screw .....                | 02    |
| 213441  | 11064 | " Driving Gear with two 200383c    | 1 00  |
| 200383c | 12311 | " " " Set Screw .....              | 02    |
| 213493  | 11707 | " " Shaft .....                    | 1 00  |
| 213469  | 11702 | " " " Bearing with                 |       |
|         |       | 200027E .....                      | 35    |
| 213470  | 11064 | Hook Driving Shaft Bearing Bush-   |       |
|         |       | ing .....                          | 25    |
| 200027E | 11703 | Hook Driving Shaft Bearing Bush-   |       |
|         |       | ing Clamp Screw .....              | 04    |
| 200019E | 11064 | Hook Driving Shaft Bearing Screw   |       |
|         |       | (2) .....                          | 06    |
| 213443  | 11064 | Hook Driving Shaft Bushing .....   | 25    |
| 200027E | 11703 | " " " " Clamp                      |       |
|         |       | Screw .....                        | 04    |
| 202574  | 11703 | Hook Driving Shaft Collar with     |       |
|         |       | 200380c .....                      | 15    |
| 200380c | 12319 | Hook Driving Shaft Collar Set      |       |
|         |       | Screw .....                        | 02    |
| 221576  | 11069 | Hook Driving Shaft Connection      |       |
|         |       | Belt Pulley with 202324 and two    |       |
|         |       | 201421c .....                      | 75    |
| 201421c | 11063 | Hook Driving Shaft Connection      |       |
|         |       | Belt Pulley Set Screw .....        | 04    |
| 202324  | 11063 | Hook Driving Shaft Connection      |       |
|         |       | Belt Pulley Spring Flange .....    | 08    |
| 221552  | 11703 | Hook Gear with 200397c .....       | 1 00  |
| 221553  | 11703 | " " Key .....                      | 10    |
| 200397c | 12349 | " " Set Screw .....                | 02    |
| *213438 | —     | " Glb .....                        | —     |
| *213644 | —     | " " Hinge Pin .....                | —     |
| 200088f | 11064 | " " Screw .....                    | 02    |
| 213442  | 11069 | " Saddle with 200027E and two      |       |
|         |       | 200378c .....                      | 2 50  |
| 200019E | 11064 | Hook Saddle Screw (2) .....        | 06    |
| 202622  | 11703 | " " " Washer (2) ...               | 01    |
| 221555  | 11704 | Hook Saddle complete, Nos. 213439, |       |
|         |       | 213440, 213442, 213446, 213447 and |       |
|         |       | 221552 to 221554 .....             | 11 00 |
| 202445  | 11707 | Knee Lifter Connection Lever with  |       |
|         |       | 202446 .....                       | 07    |
| 213871  | —     | Knee Lifter Connection Lever       |       |
|         |       | 202445 with 200224u, 200262u,      |       |
|         |       | 213869 and 213870 .....            | 55    |
| 200224u | 11701 | Knee Lifter Connection Lever Hinge |       |
|         |       | Screw .....                        | 12    |
| 213870  | 11707 | Knee Lifter Connection Lever Lift- |       |
|         |       | ing Rod with 202302 .....          | 08    |

| No.     | Plate | Name                                 | Each  |
|---------|-------|--------------------------------------|-------|
| 202302  | 11063 | Knee Lifter Connction Lever Lift-    |       |
|         |       | ing Rod Cotter Pin .....             | \$ 01 |
| 202446  | 11701 | Knee Lifter Connection Lever Pin     | 03    |
| 213869  | 11707 | " " Lifting Lever .....              | 20    |
| 200262u | 11701 | " " " " Hinge Screw                  | 10    |
| 213480  | 11185 | Lifting Presser Bar with 200074r..   | 85    |
| 213481  | 11070 | " " " Collar with                    |       |
|         |       | 200572F and two 200386c .....        | 1 00  |
| 200386c | 11701 | Lifting Presser Bar Collar Set Screw | 02    |
| 200572F | 11070 | " " " " SHide Ad-                    |       |
|         |       | justing Screw .....                  | 04    |
| 200490B | 11070 | Lifting Presser Bar Sleeve Screw     |       |
|         |       | and Nut .....                        | 35    |
| 213482  | 11070 | Lifting Presser Bar Spring .....     | 10    |
| 200635B | 11070 | " " " " Follower                     |       |
|         |       | Screw .....                          | 25    |
| 200613F | 11701 | Lifting Presser Bar Spring Follower  |       |
|         |       | Screw Position Screw .....           | 03    |
| 214057  | —     | Lifting Presser Bar Vibrating Lever  | 1 10  |
| 213483  | 11070 | " " " " " "                          |       |
|         |       | 214057 with 200230F and 201525E      | 1 25  |
| 200230F | 11070 | Lifting Presser Bar Vibrating Lever  |       |
|         |       | Hinge Screw .....                    | 10    |
| 201525E | 11701 | Lifting Presser Bar Vibrating Lever  |       |
|         |       | Hinge Screw Nut .....                | 03    |
| 213485  | 11071 | Lifting Presser Bar Vibrating Lever  |       |
|         |       | Rocker Arm .....                     | 1 00  |
| 213486  | 11071 | Lifting Presser Bar Vibrating Lever  |       |
|         |       | Rocker Arm Link .....                | 75    |
| 213484  | 11071 | Lifting Presser Bar Vibrating Lever  |       |
|         |       | Slide Block .....                    | 25    |
| 229755  | 11080 | Lifting Presser Foot .....           | 1 00  |
| 200074F | 11701 | " " " " Screw ....                   | 03    |
| 213473  | 11185 | Needle Bar (hollow) with 200125F     | 1 00  |
| 213474  | 11071 | " " Collar with 200049F and          |       |
|         |       | 200572F .....                        | 50    |
| 200049F | 11071 | Needle Bar Collar Set Screw .....    | 03    |
| 200572F | 11070 | " " " Slide Adjusting                |       |
|         |       | Screw .....                          | 04    |
| 213475  | 11071 | Needle Bar Connecting Link .....     | 75    |
| 200125F | 11701 | " Set Screw .....                    | 02    |
| 202554  | 11701 | Presser Bar Lifter .....             | 25    |
| 200026u | 11071 | " " " Hinge Screw ..                 | 04    |
| 213490  | 11071 | " " " Shoe and Ten-                  |       |
|         |       | sion Release Stud .....              | 40    |
| 202068  | 12153 | Spool Holder Base .....              | 15    |
| 200575u | 12311 | " " " Screw .....                    | 05    |
| 204296  | 12153 | " " Wire .....                       | 10    |
| 200079u | 12311 | " " " Hinge Screw ....               | 02    |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 204297  | 12153 | Spool Holder complete, Nos. 200079u, 202068 and 204296 .....                               | \$ 25 |
| 213673  | 11702 | Take-up Cam with 200335c, 200383c and 200430c .....  | 2 25  |
| 200430c | 12311 | Take-up Cam Position Screw .....   | 08    |
| 200383c | 12311 | " " " Check Screw .....  | 02    |
| 200335c | 12311 | Take-up Cam Set Screw .....  | 04    |
| 213498  | 11705 | " Lever .....  | 1 00  |
| 221572  | —     | " " 213498 with 213697 ..  | 1 15  |
| 213697  | 11071 | " " Bearing with 204264..  | 15    |
| 204264  | 11705 | " " " Position Pin ..  | 01    |
| 200042F | 12311 | " " " Screw .....  | 05    |
| 201816  | 11705 | " " Roller .....   | 12    |
| 213499  | 11705 | Take-up Lever complete, Nos. 200042F, 201816 and 221572 .....                              | 1 25  |
| 202402  | 12349 | Tension Disc .....   | 05    |
| 202090  | 12349 | " " Position Pin .....   | 01    |
| 213500  | 11072 | " Release Lever .....  | 10    |
| 200309u | 12349 | " " " Screw .....  | 04    |
| 202075  | 12349 | " " Plunger .....  | 03    |
| 202407  | 12349 | " Spring .....   | 05    |
| 200632u | 12349 | " Stud .....   | 20    |
| 200397u | 12349 | " " Set Screw .....  | 02    |
| 201572u | 12349 | " Thumb Nut .....  | 04    |
| 204271  | 12349 | " Washer .....   | 05    |
| 204272  | 12349 | Tension complete, Nos. 200632u, 201572u, 202075, 202107, 204271 and two 202402 .....       | 50    |
| 204274  | 12349 | Thread Controller Plate .....  | 12    |
| 200577u | 12311 | " " " Screw ....   | 02    |
| 202098  | 12349 | " " Roller .....   | 05    |
| 204275  | 12349 | " " " Guard .....  | 10    |
| 202084  | 12349 | " " " " Washer .....   | 01    |
| 200300c | 12349 | " " " Screw .....  | 04    |
| 204276  | 12349 | " " Spring .....   | 03    |
| 204333  | 12349 | " " " Guard .....  | 08    |
| 200581u | 12349 | " " " " Screw..  | 02    |
| 202087  | 12349 | " " " Stop .....   | 03    |
| 202088  | 12349 | " " " Stud with 204925 .....   | 10    |
| 200368u | 12349 | Thread Controller Spring Stud Set Screw .....  | 02    |
| 204925  | 11703 | Thread Controller Spring Stud Washer .....   | 01    |
| 205987  | 12349 | Thread Controller complete, Nos. 200300c, 200581u, 202098, 204274, 204275 and 204333 ..... | 42    |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 204280  | 12349 | Thread Controller and Spring complete, Nos. 204276 and 205987 ...            | \$ 45 |
| 213448  | 11072 | Thread Draw .....  | 15    |
| 213614  | 11072 | " " Driving Fork Lever with 200389u .....                                    | 60    |
| 213501  | 11072 | Thread Draw Driving Fork Lever Eccentric with 200366u .....                  | 75    |
| 200366u | 12349 | Thread Draw Driving Fork Lever Eccentric Set Screw .....                     | 02    |
| 200389u | 11701 | Thread Draw Driving Fork Lever Set Screw ....                                | 02    |
| 213450  | 11072 | Thread Draw Driving Shaft .....  | 15    |
| 213613  | 11071 | " " " " Collar with 200389u .....  | 10    |
| 200389u | 11701 | Thread Draw Driving Shaft Collar Set Screw .....                             | 02    |
| 213449  | 11073 | Thread Draw Lever with two each 200355u and 200397u .....                    | 75    |
| 200355u | 12319 | Thread Draw Lever Adjusting Screw .....                                      | 03    |
| 200397u | 12349 | Thread Draw Lever Set Screw ....   | 02    |
| 200397u | 12349 | " " Set Screw .....  | 02    |
| 202412  | 11703 | " Guide .....  | 06    |
| 213489  | 11073 | " " .....  | 10    |
| 200389c | 11701 | " " Set Screw .....  | 02    |
| 202482  | 12319 | " Retainer Disc .....  | 02    |
| 213691  | 11072 | " " Guide Wire .....   | 05    |
| 200397u | 12349 | " " " " Set Screw .....  | 02    |
| 210993  | 11063 | " " Sleeve .....   | 05    |
| 202483  | 12319 | " " Spring (brass) .....   | 01    |
| 210992  | 11063 | " " " .....  | 01    |
| 200631u | 11072 | " " Stud .....   | 10    |
| 210957  | 11063 | " " " .....  | 12    |
| 210958  | 11063 | " " " Collar .....   | 08    |
| 201574u | 11072 | " " " Nut .....  | 03    |
| 200397u | 12349 | " " " Set Screw ....   | 02    |
| 213690  | 11072 | Thread Retainer complete, Nos. 200631u, 201574u, 202483 and two 202482 ..... | 20    |
| 212841  | 11074 | Throat Plate, 53 needle hole, for needle sizes 10 to 20 .....                | 80    |
| 200577u | 12311 | Throat Plate Screw (2) .....   | 02    |
| 213487  | 11185 | Vibrating Presser Bar with 200389c .....                                     | 60    |
| 213488  | 11073 | " " " Collar with 200386c and 200572F .....                                  | 40    |
| 200386c | 11701 | Vibrating Presser Bar Collar Set Screw .....                                 | 02    |
| 200572F | 11070 | Vibrating Presser Bar Collar Slide Adjusting Screw .....                     | 04    |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 213484  | 11071 | Vibrating Presser Bar Collar Slide Block .....             | \$ 25 |
| 213489  | 11073 | Vibrating Presser Bar Thread Guide                         | 10    |
| 200389c | 11701 | " " " " " " Set Screw .....                                | 02    |
| 229751  | 11079 | Vibrating Presser Foot, 46 needle hole, with 200941c ..... | 1 25  |
| 200941c | 11701 | Vibrating Presser Foot Pinch Screw                         | 03    |

## LIST OF PARTS COMPLETE

FOR

## MACHINE No. 121w2

NEEDLE FEED. ALTERNATING PRESSERS.

For Sewing and Binding Mackintoshes, Rubber Overcoats,  
etc.

| No.     | Plate | Name   | Each |
|---------|-------|--|------|
| *213451 | —     | Arm .....  | \$ — |
| 202247  | 11055 | " Cap .....  | 35   |
| 200278u | 12311 | " " Screw .....  | 05   |
| 202248  | 11701 | " " " Washer .....   | 05   |
| 204235  | 11701 | " Position Pin (2) .....   | 02   |
| 200004E | 11063 | " Screw (3) .....  | 08   |
| 202005  | 11701 | " " Washer (3) .....   | 01   |
| 213491  | 11183 | " Shaft .....  | 1 75 |
| 202243  | 11055 | " " Bushing (back) with 202244 .....                               | 75   |
| 202244  | —     | Arm Shaft Bushing (back) Oil Packing (wick) .....                  | 02   |
| 200338c | 11701 | Arm Shaft Bushing (back) Set Screw .....                           | 04   |
| 213452  | 11055 | Arm Shaft Bushing (front) with 202260 .....                        | 35   |
| 202260  | —     | Arm Shaft Bushing (front) Oil Packing (wick) .....                 | 01   |
| 200352c | 11701 | Arm Shaft Bushing (front) Set Screw .....                          | 03   |
| 213453  | 11055 | Arm Shaft Connection Belt .....                                    | 1 00 |
| 213454  | 11055 | " " " " Pulley with 200363c, 200396c and two 213455 .....          | 1 25 |
| 200396c | 11701 | Arm Shaft Connection Belt Pulley Position Screw .....              | 03   |
| 200363c | 11701 | Arm Shaft Connection Belt Pulley Set Screw .....                   | 03   |
| 213455  | 11063 | Arm Shaft Connection Belt Pulley Spring Flange .....               | 20   |
| 213492  | 11055 | Arm Shaft Counter Balance with 200347c .....                       | 25   |
| 200347c | 11063 | Arm Shaft Counter Balance Set Screw .....                          | 03   |
| 213471  | 11183 | Balance Wheel (belt groove 2 3/4 in. diam.) with two 200335c ..... | 1 00 |





| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 200027E | 11703 | Hook Driving Shaft Bearing Bush-<br>ing Clamp Screw .....   | \$ 04 |
| 200019E | 11064 | Hook Driving Shaft Bearing Screw<br>(2) .....   | 06    |
| 213443  | 11064 | Hook Driving Shaft Bushing .....  | 25    |
| 200027E | 11703 | " " " " Clamp<br>Screw .....  | 04    |
| 202574  | 11703 | Hook Driving Shaft Collar with<br>200380c .....   | 15    |
| 200380c | 12319 | Hook Driving Shaft Collar Set<br>Screw .....  | 02    |
| 221576  | 11069 | Hook Driving Shaft Connection Belt<br>Pulley with 202324 and two<br>201421c .....                 | 75    |
| 201421c | 11063 | Hook Driving Shaft Connection Belt<br>Pulley Set Screw .....                                      | 04    |
| 202324  | 11063 | Hook Driving Shaft Connection Belt<br>Pulley Spring Flange .....                                  | 08    |
| 221552  | 11703 | Hook Gear with 200397c .....  | 1 00  |
| 221553  | 11703 | " " Key .....   | 10    |
| 200397c | 12349 | " " Set Screw .....   | 02    |
| *213438 | —     | " Gb .....  | —     |
| *213644 | —     | " " Hinge Pin .....   | —     |
| 200088F | 11064 | " " Screw .....   | 02    |
| 213442  | 11069 | " Saddle with 200027E and two<br>200378c .....  | 2 50  |
| 200019E | 11064 | Hook Saddle Screw (2) .....   | 06    |
| 202622  | 11703 | " " " Washer (2) ..   | 01    |
| 221555  | 11704 | Hook Saddle complete, Nos 213439,<br>213440, 213442, 213446, 213447 and<br>221552 to 221554 ..... | 11 00 |
| 202445  | 11707 | Knee Lifter Connection Lever with<br>202446 .....   | 07    |
| 221567  | —     | Knee Lifter Connection Lever<br>202445 with 200217H, 200224H,<br>213869 and 213870 .....          | 60    |
| 200224H | 11701 | Knee Lifter Connection Lever<br>Hinge Screw .....   | 12    |
| 213870  | 11707 | Knee Lifter Connection Lever Lift-<br>ing Rod with 202302 .....                                   | 08    |
| 202302  | 11063 | Knee Lifter Connection Lever Lift-<br>ing Rod Cotter Pin .....                                    | 01    |
| 202446  | 11701 | Knee Lifter Connection Lever Pin  | 03    |
| 213869  | 11707 | " " Lifting Lever .....   | 20    |
| 213480  | 11185 | Lifting Presser Bar with 200074F ..   | 85    |
| 213481  | 11070 | " " " Collar with<br>200572F and two 200385c .....  | 1 00  |
| 200386c | 11701 | Lifting Presser Bar Collar Set<br>Screw .....   | 02    |

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 200572F | 11070 | Lifting Presser Bar Collar Slide<br>Adjusting Screw .....         | \$ 04 |
| 200490B | 11070 | Lifting Presser Bar Sleeve Screw<br>and Nut .....                 | 35    |
| 213482  | 11070 | Lifting Presser Bar Spring .....                                  | 10    |
| 200635B | 11070 | " " " " Follower<br>Screw .....                                   | 25    |
| 200613F | 11701 | Lifting Presser Bar Spring Follower<br>Screw Position Screw ..... | 03    |
| 214057  | —     | Lifting Presser Bar Vibrating Lever                               | 1 10  |
| 213483  | 11070 | " " " " " "   |       |
|         |       | 214057 with 200230F and 201525E                                   | 1 25  |
| 200230F | 11070 | Lifting Presser Bar Vibrating Lever<br>Hinge Screw .....          | 10    |
| 201525E | 11701 | Lifting Presser Bar Vibrating Lever<br>Hinge Screw Nut .....      | 03    |
| 213485  | 11071 | Lifting Presser Bar Vibrating Lever<br>Rocker Arm .....           | 1 00  |
| 213486  | 11071 | Lifting Presser Bar Vibrating Lever<br>Rocker Arm Link .....      | 75    |
| 213484  | 11071 | Lifting Presser Bar Vibrating Lever<br>Slide Block .....          | 25    |
| 229755  | 11080 | Lifting Presser Foot .....  | 1 00  |
| 200074F | 11701 | " " " Screw .....   | 03    |
| 213473  | 11185 | Needle Bar (hollow) with 200125F ..                               | 1 00  |
| 213474  | 11071 | " " Collar with 200049F and<br>200572F .....                      | 50    |
| 200049F | 11071 | Needle Bar Collar Set Screw .....                                 | 03    |
| 200572F | 11070 | " " " Slide Adjusting<br>Screw .....                              | 04    |
| 213475  | 11071 | Needle Bar Connecting Link .....                                  | 75    |
| 200125F | 11701 | " Set Screw .....   | 02    |
| 202554  | 11701 | Presser Bar Lifter .....  | 25    |
| 200026D | 11071 | " " " Hinge Screw ..  | 04    |
| 213490  | 11071 | " " " Shoe and Ten-<br>sion Release Stud .....                    | 40    |
| 202068  | 12153 | Spool Holder Base .....   | 15    |
| 200575H | 12311 | " " " Screw .....   | 05    |
| 204296  | 12153 | " " Wire .....  | 10    |
| 200079H | 12311 | " " " Hinge Screw ....  | 02    |
| 204297  | 12153 | Spool Holder complete, Nos.<br>200079H, 202068 and 204296 .....   | 25    |
| 213673  | 11702 | Take-up Cam with 200335c, 200383c<br>and 200430c .....            | 2 25  |
| 200430c | 12311 | Take-up Cam Position Screw .....                                  | 08    |
| 200383c | 12311 | " " " " Check<br>Screw .....                                      | 02    |
| 200335c | 12311 | Take-up Cam Set Screw .....                                       | 04    |
| 213498  | 11705 | " Lever .....   | 1 00  |
| 221572  | —     | " " 213498 with 213697 ..   | 1 15  |

## Parts for Machine No. 121w2

19

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200572F | 11070 | Lifting Presser Bar Collar Slide Adjusting Screw .....         | \$ 04 |
| 200490B | 11070 | Lifting Presser Bar Sleeve Screw and Nut .....                 | 35    |
| 213482  | 11070 | Lifting Presser Bar Spring .....                               | 10    |
| 200635B | 11070 | " " " " Follower Screw .....                                   | 25    |
| 200613F | 11701 | Lifting Presser Bar Spring Follower Screw Position Screw ..... | 03    |
| 214057  | —     | Lifting Presser Bar Vibrating Lever .....                      | 1 10  |
| 213483  | 11070 | " " " " " " 214057 with 200230F and 201525E .....              | 1 25  |
| 200230F | 11070 | Lifting Presser Bar Vibrating Lever Hinge Screw .....          | 10    |
| 201525E | 11701 | Lifting Presser Bar Vibrating Lever Hinge Screw Nut .....      | 03    |
| 213485  | 11071 | Lifting Presser Bar Vibrating Lever Rocker Arm .....           | 1 00  |
| 213486  | 11071 | Lifting Presser Bar Vibrating Lever Rocker Arm Link .....      | 75    |
| 213484  | 11071 | Lifting Presser Bar Vibrating Lever Slide Block .....          | 25    |
| 229755  | 11080 | Lifting Presser Foot .....                                     | 1 00  |
| 200074F | 11701 | " " " Screw .....  | 03    |
| 213473  | 11185 | Needle Bar (hollow) with 200125F .....                         | 1 00  |
| 213474  | 11071 | " " Collar with 200049F and 200572F .....                      | 50    |
| 200049F | 11071 | Needle Bar Collar Set Screw .....                              | 03    |
| 200572F | 11070 | " " " Slide Adjusting Screw .....                              | 04    |
| 213475  | 11071 | Needle Bar Connecting Link .....                               | 75    |
| 200125F | 11701 | " Set Screw .....  | 02    |
| 202554  | 11701 | Presser Bar Lifter .....                                       | 25    |
| 200026D | 11071 | " " " Hinge Screw .....  | 04    |
| 213490  | 11071 | " " " Shoe and Tension Release Stud .....                      | 40    |
| 202068  | 12153 | Spool Holder Base .....  | 15    |
| 200575H | 12311 | " " " Screw .....  | 05    |
| 204296  | 12153 | " " Wire .....   | 10    |
| 200079H | 12311 | " " " Hinge Screw .....  | 02    |
| 204297  | 12153 | Spool Holder complete, Nos. 200079H, 202068 and 204296 .....   | 25    |
| 213673  | 11702 | Take-up Cam with 200335C, 200383C and 200430C .....            | 2 25  |
| 200430C | 12311 | Take-up Cam Position Screw .....                               | 08    |
| 200383C | 12311 | " " " " Cheek Screw .....                                      | 02    |
| 200335C | 12311 | Take-up Cam Set Screw .....                                    | 04    |
| 213498  | 11705 | " Lever .....  | 1 00  |
| 221572  | —     | " " 213498 with 213697 .....                                   | 1 15  |

## Parts for Machine No. 121v2

21

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 213613  | 11071 | Thread Draw Driving Shaft Collar with 200389H .....                          | \$ 10 |
| 200389H | 11701 | Thread Draw Driving Shaft Collar Set Screw .....                             | 02    |
| 213449  | 11073 | Thread Draw Lever with two each 200355H and 200397H .....                    | 75    |
| 200355H | 12319 | Thread Draw Lever Adjusting Screw .....                                      | 03    |
| 200397H | 12349 | Thread Draw Lever Set Screw .....  | 02    |
| 260397H | 12349 | " " Set Screw .....  | 02    |
| 202412  | 11703 | " Guide .....  | 06    |
| 213489  | 11073 | " " .....  | 10    |
| 200389C | 11701 | " " Set Screw .....  | 02    |
| 202482  | 12319 | " Retainer Disc .....  | 02    |
| 213691  | 11072 | " " Guide Wire .....   | 05    |
| 200397H | 12349 | " " " Set Screw .....  | 02    |
| 210993  | 11063 | " " Sleeve .....   | 05    |
| 202483  | 12319 | " " Spring (brass) .....   | 01    |
| 210992  | 11063 | " " " .....  | 01    |
| 200631E | 11072 | " " Stud .....   | 10    |
| 210957  | 11063 | " " " .....  | 12    |
| 210958  | 11063 | " " " Collar .....   | 08    |
| 201574D | 11072 | " " " Nut .....  | 03    |
| 200397H | 12349 | " " " Set Screw .....  | 02    |
| 213690  | 11072 | Thread Retainer complete, Nos. 200631E, 201574D, 202483 and two 202482 ..... | 20    |
| 212841  | 11074 | Throat Plate, 53 needle hole, for needle sizes 10 to 20 .....                | 80    |
| 200577H | 12311 | Throat Plate Screw (2) .....   | 02    |
| 213487  | 11185 | Vibrating Presser Bar with 200389C .....                                     | 60    |
| 213488  | 11073 | " " " Collar with 200386C and 200572F .....                                  | 40    |
| 200386C | 11701 | Vibrating Presser Bar Collar Set Screw .....                                 | 02    |
| 200572F | 11070 | Vibrating Presser Bar Collar Slide Adjusting Screw .....                     | 04    |
| 213484  | 11071 | Vibrating Presser Bar Collar Slide Block .....                               | 25    |
| 213489  | 11073 | Vibrating Presser Bar Thread Guide .....                                     | 10    |
| 200389C | 11701 | " " " " " " Set Screw .....  | 02    |
| 229751  | 11079 | Vibrating Presser Foot, 46 needle hole, with 200941C .....                   | 1 25  |
| 200941C | 11701 | Vibrating Presser Foot Pinch Screw .....                                     | 03    |

## LIST OF PARTS COMPLETE

FOR

## MACHINE No. 121w3

NEEDLE FEED. ALTERNATING PRESSERS.

For Pocket Books.

| No.     | Plate | Name  | Each |
|---------|-------|---|------|
| *213510 | —     | Arm   | \$ — |
| 202247  | 11055 | " Cap   | 35   |
| 200278H | 12311 | " " Screw   | 05   |
| 202248  | 11701 | " " " Washer  | 05   |
| 204235  | 11701 | " Position Pin (2)  | 02   |
| 200004E | 11063 | " Screw (3)   | 08   |
| 202005  | 11701 | " " Washer (3)  | 01   |
| 213491  | 11183 | " Shaft   | 1 75 |
| 202243  | 11055 | " " Bushing (back) with<br>202244                               | 75   |
| 202244  | —     | Arm Shaft Bushing (back) Oil<br>Packing (wick)                  | 02   |
| 200338C | 11701 | Arm Shaft Bushing (back) Set<br>Screw                           | 04   |
| 213452  | 11055 | Arm Shaft Bushing (front) with<br>202260                        | 35   |
| 202260  | —     | Arm Shaft Bushing (front) Oil<br>Packing (wick)                 | 01   |
| 200352C | 11701 | Arm Shaft Bushing (front) Set<br>Screw                          | 03   |
| 213453  | 11055 | Arm Shaft Connection Belt                                       | 1 00 |
| 213454  | 11055 | " " " " Pulley<br>with 200363C, 200396C and two<br>213455       | 1 25 |
| 200396C | 11701 | Arm Shaft Connection Belt Pulley<br>Position Screw              | 03   |
| 200363C | 11701 | Arm Shaft Connection Belt Pulley<br>Set Screw                   | 03   |
| 213455  | 11063 | Arm Shaft Connection Belt Pulley<br>Spring Flange               | 20   |
| 213492  | 11055 | Arm Shaft Counter Balance with<br>200347C                       | 25   |
| 200347C | 11063 | Arm Shaft Counter Balance Set<br>Screw                          | 03   |
| 213471  | 11183 | Balance Wheel (belt groove 2 3/4 in.<br>diam.) with two 200335C | 1 00 |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200062H | 12311 | Balance Wheel Adjusting Screw  | \$ 07 |
| 200335C | 12311 | " " Set Screw  | 04    |
| *213468 | —     | Bed  | —     |
| 202258  | 12153 | " Hinge Connection (2)   | 08    |
| 200570E | 12311 | " " " Screw (4)  | 05    |
| 213477  | 11055 | " Slide (back) with 213478 and<br>213479   | 60    |
| 213476  | 11055 | Bed Slide (front) with 213478 and<br>213479  | 60    |
| 213478  | 11063 | Bed Slide Friction Slide   | 10    |
| 213479  | 11063 | " " " " Spring   | 02    |
| 213783  | 11064 | Bobbin   | 08    |
| *213444 | —     | " Case   | —     |
| 203648  | 11703 | " " Latch  | 10    |
| *202056 | 11703 | " " " Pin  | —     |
| 213932  | 11703 | " " " Plunger  | 10    |
| 203474  | 11703 | " " " Spring   | 01    |
| 213446  | 11064 | " " Lever  | 1 00  |
| 213417  | 11064 | " " " Arm with 200099H   | 30    |
| 200099H | 11703 | " " " " Pinch Screw  | 02    |
| 213445  | 11064 | " " Tension Spring   | 10    |
| 200984C | 11703 | " " " " Regulat-<br>ing Screw  | 04    |
| 200594C | 11703 | Bobbin Case Tension Spring Screw   | 02    |
| 213689  | 11064 | Bobbin Case complete, Nos. 200594C,<br>200984C, 202056, 203474, 203648,<br>213444, 213445 and 213932                                       | 1 00  |
| 221580  | —     | Face Plate with 200363H, 200739F,<br>202087, 202090, 213691 and four<br>200397H  | 1 50  |
| 200053C | 12311 | Face Plate Screw (2)   | 04    |
| 200739F | 11063 | " " Thread Guide Screw   | 08    |
| 221581  | 11183 | Face Plate complete, Nos. 200577H,<br>202088, 204272, 204280, 210957,<br>210958, 210992, 210993, 213500,<br>213690, 221580 and two 200309E | 3 25  |
| 213464  | 11063 | Feed Cam   | 75    |
| 213692  | 11066 | " " Position Pin (2)   | 02    |
| 201827  | 11063 | " " Roller   | 12    |
| 201821  | —     | " " " 201827 with 200818C  | 30    |
| 200818C | 11066 | " " " Screw Stud   | 15    |
| 201522E | 11701 | " " " " " Nut  | 03    |
| 200035E | 11066 | " " Screw  | 05    |
| 213465  | 11066 | " Connection   | 40    |
| 213466  | 11066 | " " Link   | 50    |
| 213511  | 11078 | " " " Lever  | 50    |
| 200101D | 11066 | " " Stop Screw   | 04    |
| 213463  | 11066 | " Eccentric Connection with<br>200094F   | 1 00  |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200094F | 11701 | Feed Eccentric Connection Pinch Screw .....  | \$ 02 |
| 213460  | 11702 | Feed and Needle Carrying Frame with 213711 .....   | 1 50  |
| 221570  | —     | Feed and Needle Carrying Frame 213460 with 200101D, 201522E, 201821, 213461, 213463 to 213466, 213473 to 213475, 213481, 213483, 213485 to 213488, 213511, 213673 and two 213484 ..... | 15 75 |
| 213711  | 11701 | Feed and Needle Carrying Frame Bushing .....   | 10    |
| 213639  | 11078 | Feed and Needle Carrying Frame Collar with 200380C .....   | 15    |
| 200380C | 12319 | Feed and Needle Carrying Frame Collar Set Screw .....  | 02    |
| 213461  | 11067 | Feed and Needle Carrying Frame Link .....  | 75    |
| 213494  | 11067 | Feed Regulating Lever .....  | 60    |
| 213507  | 11073 | " " " Connection .....   | 20    |
| 213506  | 11073 | " " " " Pin (2) .....  | 05    |
| 213702  | 11073 | Feed Regulating Lever Packing Washer .....   | 01    |
| 200095B | 11067 | Feed Regulating Lever Screw ....   | 04    |
| 213508  | 11078 | " " " Segment, for forward feed .....  | 25    |
| 213509  | 11078 | Feed Regulating Lever Segment, for reverse feed .....  | 30    |
| 201183D | 11063 | Feed Regulating Lever Segment Screw .....  | 04    |
| 200162D | 11701 | Feed Regulating Lever Segment Set Screw .....  | 04    |
| 201231C | 11063 | Feed Regulating Lever Segment Stop Screw .....   | 05    |
| 213503  | 11077 | Feed Reversing Lever .....   | 40    |
| 200217H | 11073 | " " " Hinge Screw .....  | 15    |
| 213505  | 11073 | " " " Spring .....   | 25    |
| 200781D | 11073 | " " " " Stop Screw .....   | 08    |
| *221550 | —     | Hook (sewing) .....  | —     |
| 221551  | 11703 | " 221550 with 200088F, 213438 and 213644 .....   | 5 00  |
| 221554  | —     | Hook and Bobbin Case complete, Nos. 213689 and 221551 .....  | 6 00  |
| 213440  | 11064 | Hook Bushing (lower) .....   | 25    |
| 213439  | 11064 | " " (upper) .....  | 25    |
| 200378C | 12311 | " " Set Screw .....  | 02    |
| 213441  | 11064 | " Driving Gear with two 200383C .....  | 1 00  |
| 200383C | 12311 | " " " Set Screw ....   | 02    |

| No.     | Plate | Name   | Each   |
|---------|-------|--|--------|
| 213493  | 11707 | Hook Driving Shaft .....   | \$1 00 |
| 213469  | 11702 | " " " Bearing with 200027E .....   | 35     |
| 213470  | 11064 | Hook Driving Shaft Bearing Bushing .....   | 25     |
| 200027E | 11703 | Hook Driving Shaft Bearing Bushing Clamp Screw .....   | 04     |
| 200019E | 11064 | Hook Driving Shaft Bearing Screw (2) .....   | 06     |
| 213443  | 11064 | Hook Driving Shaft Bushing .....   | 25     |
| 200027E | 11703 | " " " " Clamp Screw .....  | 04     |
| 202571  | 11703 | Hook Driving Shaft Collar with 200380C .....   | 15     |
| 200380C | 12319 | Hook Driving Shaft Collar Set Screw .....  | 02     |
| 221576  | 11069 | Hook Driving Shaft Connection Belt Pulley with 202324 and two 201421C .....                  | 75     |
| 201421C | 11063 | Hook Driving Shaft Connection Belt Pulley Set Screw .....                                    | 04     |
| 202324  | 11063 | Hook Driving Shaft Connection Belt Pulley Spring Flange .....                                | 08     |
| 221552  | 11703 | Hook Gear with 200397C .....   | 1 00   |
| 221553  | 11703 | " " Key .....  | 10     |
| 200397C | 12349 | " " Set Screw .....  | 02     |
| *213438 | —     | " Gib .....  | —      |
| *213644 | —     | " " Hinge Pin .....  | —      |
| 200088F | 11064 | " " Screw .....  | 02     |
| 213442  | 11069 | " Saddle with 200027E and two 200378C .....  | 2 50   |
| 200019E | 11064 | Hook Saddle Screw (2) .....  | 06     |
| 202622  | 11703 | " " " Washer (2) ..  | 01     |
| 221555  | 11704 | Hook Saddle complete, Nos. 213439, 213440, 213442, 213446, 213447 and 221552 to 221554 ..... | 11 00  |
| 202445  | 11707 | Knee Lifter Connection Lever with 202446 .....   | 07     |
| 221567  | —     | Knee Lifter Connection Lever 202445 with 200217H, 200224H, 213869 and 213870 .....           | 60     |
| 200224H | 11701 | Knee Lifter Connection Lever Hinge Screw .....   | 12     |
| 213870  | 11707 | Knee Lifter Connection Lever Lifting Rod with 202302 .....                                   | 08     |
| 202302  | 11063 | Knee Lifter Connection Lever Lifting Rod Cotter Pin .....                                    | 01     |
| 202446  | 11701 | Knee Lifter Connection Lever Pin .....   | 03     |
| 213869  | 11707 | " " Lifting Lever .....  | 20     |
| 213480  | 11185 | Lifting Presser Bar with 200074F ..  | 85     |

| No.     | Plate | Name   | Each   |
|---------|-------|--|--------|
| 213481  | 11070 | Lifting Presser Bar Collar with 200572F and two 200386c .....  | \$1 00 |
| 200386c | 11701 | Lifting Presser Bar Collar Set Screw                           | 02     |
| 200572F | 11070 | " " " " Slide Adjusting Screw .....                            | 04     |
| 200490B | 11070 | Lifting Presser Bar Sleeve Screw and Nut .....                 | 35     |
| 213482  | 11070 | Lifting Presser Bar Spring .....                               | 10     |
| 200635B | 11070 | " " " " Follower Screw .....                                   | 25     |
| 200613F | 11701 | Lifting Presser Bar Spring Follower Screw Position Screw ..... | 03     |
| 214057  | —     | Lifting Presser Bar Vibrating Lever                            | 1 10   |
| 213483  | 11070 | " " " " " " 214057 with 200230F and 201525E .....              | 1 25   |
| 200230F | 11070 | Lifting Presser Bar Vibrating Lever Hinge Screw .....          | 10     |
| 201525E | 11701 | Lifting Presser Bar Vibrating Lever Hinge Screw Nut .....      | 03     |
| 213485  | 11071 | Lifting Presser Bar Vibrating Lever Rocker Arm .....           | 1 00   |
| 213486  | 11071 | Lifting Presser Bar Vibrating Lever Rocker Arm Link .....      | 75     |
| 213484  | 11071 | Lifting Presser Bar Vibrating Lever Slide Block .....          | 25     |
| 229754  | 11079 | Lifting Presser Foot .....                                     | 1 00   |
| 200074F | 11701 | " " " " Screw .....  | 03     |
| 213473  | 11185 | Needle Bar (hollow) with 200125F .....                         | 1 00   |
| 213474  | 11071 | " " Collar with 200049F and 200572F .....                      | 50     |
| 200049F | 11071 | Needle Bar Collar Set Screw .....                              | 03     |
| 200572F | 11070 | " " " " Slide Adjusting Screw .....                            | 04     |
| 213475  | 11071 | Needle Bar Connecting Link .....                               | 75     |
| 200125F | 11701 | " Set Screw .....  | 02     |
| 202554  | 11701 | Presser Bar Lifter .....                                       | 25     |
| 200026D | 11071 | " " " " Hinge Screw .....                                      | 04     |
| 213490  | 11071 | " " " " Shoe and Tension Release Stud .....                    | 40     |
| 202068  | 12153 | Spool Holder Base .....  | 15     |
| 200575H | 12311 | " " " " Screw .....  | 05     |
| 204296  | 12153 | " " " " Wire .....   | 10     |
| 200079H | 12311 | " " " " Hinge Screw .....                                      | 02     |
| 204297  | 12153 | Spool Holder complete, Nos. 200079H, 202068 and 204296 .....   | 25     |
| 213673  | 11702 | Take-up Cam with 200335c, 200383c and 200430c .....            | 2 25   |
| 200430c | 12311 | Take-up Cam Position Screw .....                               | 08     |
| 200383c | 12311 | " " " " Check Screw .....                                      | 02     |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200335c | 12311 | Take-up Cam Set Screw .....  | \$ 04 |
| 213498  | 11705 | " Lever .....  | 1 00  |
| 221572  | —     | " " 213498 with 213697 ..  | 1 15  |
| 213697  | 11071 | " " Bearing with 204264 ..   | 15    |
| 204264  | 11705 | " " " " Position Pin ..  | 01    |
| 200042F | 12311 | " " " " Screw .....  | 05    |
| 201816  | 11705 | " " Roller .....   | 12    |
| 213499  | 11705 | Take-up Lever complete, Nos. 200042F, 201816 and 221572 .....                                      | 1 25  |
| 202402  | 12349 | Tension Disc .....   | 05    |
| 202090  | 12349 | " " Position Pin .....   | 01    |
| 213500  | 11072 | " Release Lever .....  | 10    |
| 200309E | 12349 | " " " " Screw .....  | 04    |
| 202075  | 12349 | " " Plunger .....  | 03    |
| 202407  | 12349 | " Spring .....   | 05    |
| 200632B | 12349 | " Stud .....   | 20    |
| 200397H | 12349 | " " Set Screw .....  | 02    |
| 201572B | 12349 | " Thumb Nut .....  | 04    |
| 204271  | 12349 | " Washer .....   | 05    |
| 204272  | 12349 | Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402 .....               | 50    |
| 204274  | 12349 | Thread Controller Plate .....  | 12    |
| 200577H | 12311 | " " " " Screw .....  | 02    |
| 202098  | 12349 | " " Roller .....   | 05    |
| 204275  | 12349 | " " " " Guard .....  | 10    |
| 202084  | 12349 | " " " " Washer .....   | 01    |
| 200300c | 12349 | " " " " Screw .....  | 04    |
| 204276  | 12349 | " " Spring .....   | 03    |
| 204333  | 12349 | " " " " Guard .....  | 08    |
| 200581H | 12349 | " " " " Screw .....  | 02    |
| 202087  | 12349 | " " " " Stop .....   | 03    |
| 202088  | 12349 | " " " " Stud with 204925 .....   | 10    |
| 200368H | 12349 | Thread Controller Spring Stud Set Screw .....  | 02    |
| 204925  | 11703 | Thread Controller Spring Stud Washer .....   | 01    |
| 205987  | 12349 | Thread Controller complete, Nos. 200300c, 200581H, 202084, 202098, 204274, 204275 and 204333 ..... | 42    |
| 204280  | 12349 | Thread Controller and Spring complete, Nos. 204276 and 205987 ..                                   | 45    |
| 213448  | 11072 | Thread Draw .....  | 15    |
| 213614  | 11072 | " " Driving Fork Lever with 200389H .....  | 60    |
| 213501  | 11072 | Thread Draw Driving Fork Lever Eccentric with 200366H .....  | 75    |
| 200366H | 12349 | Thread Draw Driving Fork Lever Eccentric Set Screw .....   | 02    |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200389H | 11701 | Thread Draw Driving Fork Lever Set Screw .....                               | \$ 02 |
| 213450  | 11072 | Thread Draw Driving Shaft .....  | 15    |
| 213613  | 11071 | " " " " Collar with 200389H .....  | 10    |
| 200389H | 11701 | Thread Draw Driving Shaft Collar Set Screw .....                             | 02    |
| 213449  | 11073 | Thread Draw Lever with two each 200355H and 200397H .....                    | 75    |
| 200355H | 12319 | Thread Draw Lever Adjusting Screw .....                                      | 03    |
| 200397H | 12349 | Thread Draw Lever Set Screw ....   | 02    |
| 200397H | 12349 | " " Set Screw .....  | 02    |
| 202412  | 11703 | " Guide .....  | 06    |
| 213489  | 11073 | " " .....  | 10    |
| 200389C | 11701 | " " Set Screw .....  | 02    |
| 202482  | 12319 | " Retainer Disc .....  | 02    |
| 213691  | 11072 | " " Guide Wire .....   | 05    |
| 200397H | 12349 | " " " " Set Screw .....  | 02    |
| 210993  | 11063 | " " Sleeve .....   | 05    |
| 202483  | 12319 | " " Spring (brass) .....   | 01    |
| 210992  | 11063 | " " " .....  | 01    |
| 200631E | 11072 | " " Stud .....   | 10    |
| 210957  | 11063 | " " " .....  | 12    |
| 210958  | 11063 | " " " Collar .....   | 08    |
| 201574D | 11072 | " " " Nut .....  | 03    |
| 200397H | 12349 | " " " Set Screw ....   | 02    |
| 213690  | 11072 | Thread Retainer complete, Nos. 200631E, 201574D, 202483 and two 202482 ..... | 20    |
| 212616  | 11074 | Throat Plate, 50 needle hole, for needle sizes 16 to 22 .....                | 80    |
| 200577H | 12311 | Throat Plate Screw (2) .....   | 02    |
| 213487  | 11185 | Vibrating Presser Bar with 200389C .....                                     | 60    |
| 213488  | 11073 | " " " Collar with 200386C and 200572F .....                                  | 40    |
| 200386C | 11701 | Vibrating Presser Bar Collar Set Screw .....                                 | 02    |
| 200572F | 11070 | Vibrating Presser Bar Collar Slide Adjusting Screw .....                     | 04    |
| 213484  | 11071 | Vibrating Presser Bar Collar Slide Block .....                               | 25    |
| 213489  | 11073 | Vibrating Presser Bar Thread Guide .....                                     | 10    |
| 200389C | 11701 | " " " " " Set Screw .....  | 02    |
| 229753  | 11079 | Vibrating Presser Foot, 50 needle hole, with 200941C .....                   | 1 25  |
| 200941C | 11701 | Vibrating Presser Foot Pinch Screw .....                                     | 03    |

## LIST OF PARTS COMPLETE

FOR

## MACHINE No. 121w4

## NEEDLE FEED. ALTERNATING PRESSERS.

For Carpets, Rugs, etc.

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| *226826 | ---   | Arm .....  | \$ -- |
| 202247  | 11055 | " Cap .....  | 35    |
| 200278H | 12311 | " " Screw .....  | 05    |
| 202248  | 11701 | " " Washer .....   | 05    |
| 204235  | 11701 | " Position Pin (2) .....   | 02    |
| 200004E | 11063 | " Screw (3) .....  | 08    |
| 202005  | 11701 | " " Washer (3) .....   | 01    |
| 213491  | 11183 | " Shaft .....  | 1 75  |
| 202243  | 11055 | " " Bushing (back) with 202244 .....                               | 75    |
| 202244  | ---   | Arm Shaft Bushing (back) Oil Packing (wick) .....                  | 02    |
| 200338C | 11701 | Arm Shaft Bushing (back) Set Screw .....                           | 04    |
| 213452  | 11055 | Arm Shaft Bushing (front) with 202260 .....                        | 35    |
| 202260  | ---   | Arm Shaft Bushing (front) Oil Packing (wick) .....                 | 01    |
| 200352C | 11701 | Arm Shaft Bushing (front) Set Screw .....                          | 03    |
| 213453  | 11055 | Arm Shaft Connection Belt .....                                    | 1 00  |
| 213454  | 11055 | " " " " Pulley with 200363C, 200396C and two 213455 .....          | 1 25  |
| 200396C | 11701 | Arm Shaft Connection Belt Pulley Position Screw .....              | 03    |
| 200363C | 11701 | Arm Shaft Connection Belt Pulley Set Screw .....                   | 03    |
| 213455  | 11063 | Arm Shaft Connection Belt Pulley Spring Flange .....               | 20    |
| 213492  | 11055 | Arm Shaft Counter Balance with 200347C .....                       | 25    |
| 200347C | 11063 | Arm Shaft Counter Balance Set Screw .....                          | 03    |
| 213471  | 11183 | Balance Wheel (belt groove 2 1/4 in. diam.) with two 200335C ..... | 1 00  |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200062H | 12311 | Balance Wheel Adjusting Screw ..   | \$ 07 |
| 200335C | 12311 | " " Set Screw .....  | 04    |
| *226827 | —     | Bed .....  | —     |
| 202258  | 12153 | " Hinge Connection (2) .....   | 08    |
| 200570E | 12311 | " " " Screw (4) ....   | 05    |
| 213477  | 11055 | " Slide (back) with 213478 and 213479 .....  | 60    |
| 213476  | 11055 | Bed Slide (front) with 213478 and 213479 .....   | 60    |
| 213478  | 11063 | Bed Slide Friction Slide .....   | 10    |
| 213479  | 11063 | " " " Spring ..  | 02    |
| 213783  | 11064 | Bobbin .....   | 08    |
| *213444 | —     | " Case .....   | —     |
| 203648  | 11703 | " " Latch .....  | 10    |
| *202056 | 11703 | " " " Pin .....  | —     |
| 213932  | 11703 | " " " Plunger .....  | 10    |
| 203474  | 11703 | " " " Spring .....   | 01    |
| 213446  | 11064 | " " Lever .....  | 1 00  |
| 213447  | 11064 | " " " Arm with 200099H ..  | 30    |
| 200099H | 11703 | " " " " Pinch Screw ..   | 02    |
| 213445  | 11064 | " " Tension Spring .....   | 10    |
| 200984C | 11703 | " " " " Regulat- ing Screw .....   | 04    |
| 200594C | 11703 | Bobbin Case Tension Spring Screw ..  | 02    |
| 213689  | 11064 | Bobbin Case complete, Nos. 200594C, 200984C, 202056, 203474, 203648, 213444, 213445 and 213932 ..... | 1 00  |
| 226841  | 11711 | Edge Guide .....   | 1 50  |
| 200077F | 11710 | " " Screw .....  | 03    |
| 226828  | 11707 | Face Plate with 200368H, 200739F, 202087, 202090, 213691 and three 200397H .....                     | 1 50  |
| 200053C | 12311 | Face Plate Screw (2) .....   | 04    |
| 200739F | 11063 | " " Thread Guide Screw ..  | 08    |
| 226829  | 11707 | Face Plate complete, Nos. 200577H, 202088, 204272, 204280, 213500, 213690, 226828 and two 200309E .. | 3 00  |
| 213464  | 11063 | Feed Cam .....   | 75    |
| 213692  | 11066 | " " Position Pin (2) .....   | 02    |
| 201827  | 11063 | " " Roller .....   | 12    |
| 201821  | —     | " " " 201827 with 200818C ..   | 30    |
| 200818C | 11066 | " " " Screw Stud .....   | 15    |
| 201522E | 11701 | " " " " Nut ..   | 03    |
| 200035E | 11066 | " " Screw .....  | 05    |
| 213465  | 11066 | " Connection .....   | 40    |
| 213466  | 11066 | " Link .....   | 50    |
| 213467  | 11066 | " " Lever .....  | 50    |
| 200101D | 11066 | " " Stop Screw .....   | 04    |
| 213463  | 11066 | " Eccentric Connection with 200094F .....  | 1 00  |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200094F | 11701 | Feed Eccentric Connection Pinch Screw .....  | \$ 02 |
| 213460  | 11702 | Feed and Needle Carrying Frame with 213711 .....   | 1 50  |
| 221569  | —     | Feed and Needle Carrying Frame 213460 with 200101D, 201522E, 201821, 213461, 213463 to 213467, 213473 to 213475, 213481, 213483, 213485 to 213488, 213673 and two 213484 ..... | 15 75 |
| 213711  | 11701 | Feed and Needle Carrying Frame Bushing .....   | 10    |
| 213639  | 11078 | Feed and Needle Carrying Frame Collar with 200380C .....   | 15    |
| 200380C | 12319 | Feed and Needle Carrying Frame Collar Set Screw .....  | 02    |
| 213461  | 11067 | Feed and Needle Carrying Frame Link .....  | 75    |
| 213494  | 11067 | Feed Regulating Lever .....  | 60    |
| 213696  | 11067 | " " " Friction Washer .....  | 10    |
| 200095B | 11067 | Feed Regulating Lever Screw ....   | 04    |
| 213496  | 11067 | " " " Segment ..   | 25    |
| 201183D | 11063 | " " " " Screw ..   | 04    |
| 200681C | 11067 | " " " " Stop Screw .....   | 04    |
| *221550 | —     | Hook (sewing) .....  | —     |
| 221551  | 11703 | " 221550 with 200088F, 213438 and 213644 .....   | 5 00  |
| 221554  | —     | Hook and Bobbin Case complete, Nos. 213689 and 221551 .....  | 6 00  |
| 213440  | 11064 | Hook Bushing (lower) .....   | 25    |
| 213439  | 11064 | " " (upper) .....  | 25    |
| 200378C | 12311 | " " Set Screw .....  | 02    |
| 213441  | 11064 | " Driving Gear with two 200383C ..   | 1 00  |
| 200383C | 12311 | " " " Set Screw .....  | 02    |
| 213493  | 11707 | " " Shaft .....  | 1 00  |
| 213469  | 11702 | " " " Bearing with 200027E .....   | 35    |
| 213470  | 11064 | Hook Driving Shaft Bearing Bush- ing .....   | 25    |
| 200027E | 11703 | Hook Driving Shaft Bearing Bush- ing Clamp Screw .....   | 04    |
| 200019E | 11064 | Hook Driving Shaft Bearing Screw (2) .....   | 06    |
| 213443  | 11064 | Hook Driving Shaft Bushing .....   | 25    |
| 200027E | 11703 | " " " " Clamp Screw .....  | 04    |
| 202574  | 11703 | Hook Driving Shaft Collar with 200380C .....   | 15    |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200380c | 12319 | Hook Driving Shaft Collar Set Screw .....  | \$ 02 |
| 221576  | 11069 | Hook Driving Shaft Connection Belt Pulley with 202324 and two 201421c .....                  | 75    |
| 201421c | 11063 | Hook Driving Shaft Connection Belt Pulley Set Screw .....                                    | 04    |
| 202324  | 11063 | Hook Driving Shaft Connection Belt Pulley Spring Flange .....                                | 08    |
| 221552  | 11703 | Hook Gear with 200397c .....   | 1 00  |
| 221553  | 11703 | " " Key .....  | 10    |
| 200397c | 12349 | " " Set Screw .....  | 02    |
| *213438 | —     | " " Gib .....  | —     |
| *213644 | —     | " " Hinge Pin .....  | —     |
| 200088f | 11064 | " " Screw .....  | 02    |
| 213442  | 11069 | " Saddle with 200027k and two 200378c .....  | 2 50  |
| 200019f | 11064 | Hook Saddle Screw (2) .....  | 06    |
| 202622  | 11703 | " " " Washer (2) ..  | 01    |
| 221555  | 11704 | Hook Saddle complete, Nos. 213439, 213440, 213442, 213446, 213447 and 221552 to 221554 ..... | 11 00 |
| 226842  | 11710 | Knap Parting Guide .....   | 1 00  |
| 226846  | —     | " " " " 226842 with 200172u, 226843 to 226845, two each 200103b and 200164b .....            | 5 50  |
| 226849  | 11711 | Knap Parting Guide Arm Bracket with 204190 .....   | 1 75  |
| 200058k | 11710 | Knap Parting Guide Arm Bracket Screw .....   | 04    |
| 206216  | 11710 | Knap Parting Guide Arm Bracket Screw Washer .....  | 02    |
| 226843  | 11710 | Knap Parting Guide Bracket .....   | 1 25  |
| 200164b | 11710 | " " " " Screw ..   | 02    |
| 226844  | 11711 | " " " " Slide ..   | 2 00  |
| 226845  | 11710 | " " " " " " Handle .....   | 50    |
| 200172u | 11710 | Knap Parting Guide Bracket Slide Handle Screw .....  | 02    |
| 226848  | 11710 | Knap Parting Guide Bracket Slide Handle Spring .....   | 10    |
| 204190  | 11710 | Knap Parting Guide Bracket Slide Handle Spring Hook .....                                    | 01    |
| 226847  | 11710 | Knap Parting Guide Bracket Slide Latch Spring .....  | 10    |
| 200172u | 11710 | Knap Parting Guide Bracket Slide Latch Spring Screw .....                                    | 02    |
| 200281u | 11710 | Knap Parting Guide Bracket Slide Screw .....   | 05    |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 206216  | 11710 | Knap Parting Guide Bracket Slide Screw Washer .....  | \$ 02 |
| 200103b | 11710 | Knap Parting Guide Screw .....   | 02    |
| 226850  | —     | Knap Parting Guide complete, Nos. 200172u, 226846 to 226849, two each 200058k, 200281b and 206216 .. | 8 50  |
| 226851  | —     | Knap Parting Guide 226850 with 226841 and two 200077b .....  | 10 00 |
| 202445  | 11707 | Knee Lifter Connection Lever with 202446 .....   | 07    |
| 213871  | —     | Knee Lifter Connection Lever 202445 with 200224b, 200262u, 213869 and 213870 .....                   | 55    |
| 200224b | 11701 | Knee Lifter Connection Lever Hinge Screw .....   | 12    |
| 213870  | 11707 | Knee Lifter Connection Lever Lifting Rod with 202302 .....   | 08    |
| 202302  | 11063 | Knee Lifter Connection Lever Lifting Rod Cotter Pin .....  | 01    |
| 202416  | 11701 | Knee Lifter Connection Lever Pin ..  | 03    |
| 213869  | 11707 | " " " " Lifting Lever .....  | 20    |
| 200262u | 11701 | " " " " Hinge Screw ..   | 10    |
| 213480  | 11185 | Lifting Presser Bar with 200074r ..  | 85    |
| 213481  | 11070 | " " " " Collar with 200572k and two 200386c .....  | 1 00  |
| 200386c | 11701 | Lifting Presser Bar Collar Set Screw ..  | 02    |
| 200572k | 11070 | " " " " Slide Adjusting Screw .....  | 04    |
| 200490u | 11070 | Lifting Presser Bar Sleeve Screw and Nut .....   | 35    |
| 213482  | 11070 | Lifting Presser Bar Spring .....   | 10    |
| 200635b | 11070 | " " " " Follower Screw .....   | 25    |
| 200613f | 11701 | Lifting Presser Bar Spring Follower Screw Position Screw .....                                       | 03    |
| 214057  | —     | Lifting Presser Bar Vibrating Lever ..   | 1 10  |
| 213483  | 11070 | " " " " " " 214057 with 200230f and 201525e ..   | 1 25  |
| 200230f | 11070 | Lifting Presser Bar Vibrating Lever Hinge Screw .....  | 10    |
| 201525e | 11701 | Lifting Presser Bar Vibrating Lever Hinge Screw Nut .....  | 03    |
| 213485  | 11071 | Lifting Presser Bar Vibrating Lever Rocker Arm .....   | 1 00  |
| 213486  | 11071 | Lifting Presser Bar Vibrating Lever Rocker Arm Link .....  | 75    |
| 213484  | 11071 | Lifting Presser Bar Vibrating Lever Slide Block .....  | 25    |
| 226852  | 11706 | Lifting Presser Foot .....   | 1 00  |
| 200074f | 11701 | " " " " Screw .....  | 03    |



 
| No.     | Plate | Name   | Each   |
|---------|-------|--|--------|
| 213473  | 11185 | Needle Bar (hollow) with 200125F   | \$1 00 |
| 213474  | 11071 | " " Collar with 200049F and 200572F .....  | 50     |
| 200049F | 11071 | Needle Bar Collar Set Screw .....  | 03     |
| 200572F | 11070 | " " Slide Adjusting Screw .....  | 04     |
| 213475  | 11071 | Needle Bar Connecting Link ....  | 75     |
| 200125F | 11701 | " Set Screw .....  | 02     |
| 202554  | 11701 | Presser Bar Lifter .....   | 25     |
| 200026D | 11071 | " " " Hinge Screw ...  | 04     |
| 213490  | 11071 | " " " Shoe and Tension Release Stud .....  | 40     |
| 202068  | 12153 | Spool Holder Base .....  | 15     |
| 200575H | 12311 | " " " Screw .....  | 05     |
| 204296  | 12153 | " " Wire .....   | 10     |
| 200079H | 12311 | " " " Hinge Screw ....   | 02     |
| 204297  | 12153 | Spool Holder complete, Nos. 200079H, 202068 and 204296 .....                         | 25     |
| 213673  | 11702 | Take-up Cam with 200335C, 200383C and 200430C .....                                  | 2 25   |
| 200430C | 12311 | Take-up Cam Position Screw ....  | 08     |
| 200383C | 12311 | " " " " Check Screw .....  | 02     |
| 200335C | 12311 | Take-up Cam Set Screw .....  | 04     |
| 213498  | 11705 | " Lever .....  | 1 00   |
| 221572  | —     | " " 213498 with 213697 ..  | 1 15   |
| 213697  | 11071 | " " Bearing with 204264..  | 15     |
| 204264  | 11705 | " " " Position Pin ..  | 01     |
| 200042F | 12311 | " " " Screw .....  | 05     |
| 201816  | 11705 | " " Roller .....   | 12     |
| 213499  | 11705 | Take-up Lever complete, Nos. 200042F, 201816 and 221572 .....                        | 1 25   |
| 202402  | 12349 | Tension Disc .....   | 05     |
| 202090  | 12349 | " " Position Pin .....   | 01     |
| 213500  | 11072 | " Release Lever .....  | 10     |
| 200309E | 12349 | " " " Screw .....  | 04     |
| 202075  | 12349 | " " Plunger .....  | 03     |
| 202407  | 12349 | " Spring .....   | 05     |
| 200632B | 12349 | " Stud .....   | 20     |
| 200397H | 12349 | " " Set Screw .....  | 02     |
| 201572B | 12349 | " Thumb Nut .....  | 04     |
| 204271  | 12349 | " Washer .....   | 05     |
| 204272  | 12349 | Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402 ..... | 50     |
| 204274  | 12349 | Thread Controller Plate .....  | 12     |
| 200577H | 12311 | " " " Screw ....   | 02     |
| 202098  | 12349 | " " Roller .....   | 05     |
| 204275  | 12349 | " " " Guard .....  | 10     |
| 202084  | 12349 | " " " " Washer   | 01     |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200300C | 12349 | Thread Controller Roller Screw ..  | \$ 04 |
| 204276  | 12349 | " " Spring .....   | 03    |
| 204333  | 12349 | " " " Guard .....  | 08    |
| 200581H | 12349 | " " " " Screw  | 02    |
| 202087  | 12349 | " " " Stop .....   | 03    |
| 202088  | 12349 | " " " Stud with 204925 .....   | 10    |
| 200368H | 12349 | Thread Controller Spring Stud Set Screw .....  | 02    |
| 204925  | 11703 | Thread Controller Spring Stud Washer .....   | 01    |
| 205987  | 12349 | Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333 ..... | 42    |
| 204280  | 12349 | Thread Controller and Spring complete, Nos. 204276 and 205987 ...                                  | 45    |
| 213448  | 11072 | Thread Draw .....  | 15    |
| 213614  | 11072 | " " Driving Fork Lever with 200389H .....  | 60    |
| 213501  | 11072 | Thread Draw Driving Fork Lever Eccentric with 200366H .....  | 75    |
| 200366H | 12349 | Thread Draw Driving Fork Lever Eccentric Set Screw .....   | 02    |
| 200389H | 11701 | Thread Draw Driving Fork Lever Set Screw .....   | 02    |
| 213450  | 11072 | Thread Draw Driving Shaft .....  | 15    |
| 213613  | 11071 | " " " " Collar with 200389H .....  | 10    |
| 200389H | 11701 | Thread Draw Driving Shaft Collar Set Screw .....   | 02    |
| 213449  | 11073 | Thread Draw Lever with two each 200355H and 200397H .....  | 75    |
| 200355H | 12319 | Thread Draw Lever Adjusting Screw .....  | 03    |
| 200397H | 12349 | Thread Draw Lever Set Screw ....   | 02    |
| 200397H | 12349 | " " Set Screw .....  | 02    |
| 202412  | 11703 | " Guide .....  | 06    |
| 213489  | 11703 | " " .....  | 10    |
| 200389C | 11701 | " " Set Screw .....  | 02    |
| 202482  | 12319 | " Retainer Disc .....  | 02    |
| 213691  | 11072 | " " Guide Wire .....   | 05    |
| 200397H | 12349 | " " " " Set Screw  | 02    |
| 202483  | 12319 | " " Spring (brass) .....   | 01    |
| 200631E | 11072 | " " Stud .....   | 10    |
| 201574D | 11072 | " " Nut .....  | 03    |
| 200397H | 12349 | " " " Set Screw ....   | 02    |
| 213690  | 11072 | Thread Retainer complete, Nos. 200631E, 201574D, 202483 and two 202482 .....                       | 20    |



## LIST OF PARTS COMPLETE

FOR

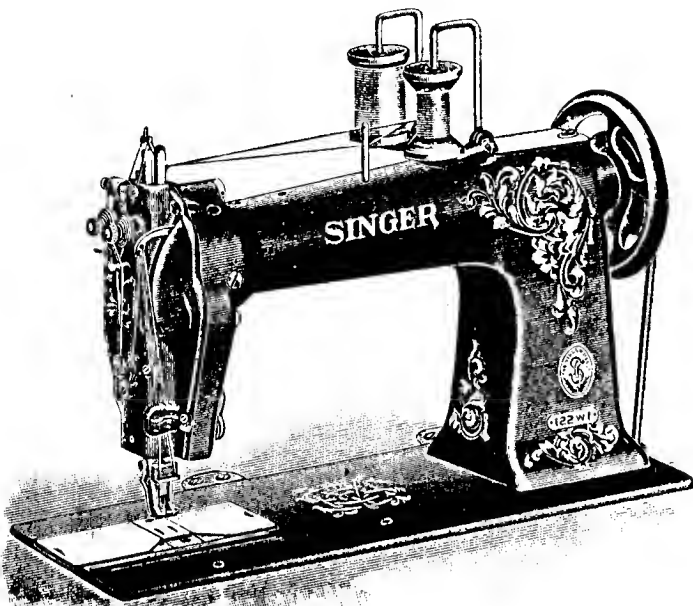

## MACHINE No. 122w1

NEEDLE FEED. ALTERNATING PRESSERS.

For Sewing Rough, Uneven or Sticky Goods.

In gauges from  $\frac{1}{8}$  to 1 inch.

| No.     | Plate | Name                                    | Each |
|---------|-------|---|------|
| *213451 | —     | Arm .....                               | \$ — |
| 202247  | 11055 | " Cap .....                             | 35   |
| 200278H | 12311 | " " Screw .....                         | 05   |
| 202248  | 11701 | " " Washer .....                        | 05   |
| 204235  | 11701 | " Position Pin (2) .....                | 02   |
| 200004C | 11063 | " Screw (3) .....                       | 08   |
| 202005  | 11701 | " " Washer (3) .....                    | 01   |
| 213491  | 11183 | " Shaft .....                           | 1 75 |
| 202243  | 11055 | " " Bushing (back) with<br>202244 ..... | 75   |

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 200594C | 11703 | Bobbin Case Tension Spring Screw  | \$ 02 |
| 213689  | 11064 | Bobbin Case (left) complete, Nos.<br>200594C, 200984C, 202056, 203474,<br>203648, 213444, 213445 and 213932   | 1 00  |
| 213703  | 11078 | Bobbin Case (right) complete, Nos.<br>200594C, 200984C, 202056, 203474,<br>203648, 213445, 213615 and 213932  | 1 00  |
| 213519  | 11707 | Face Plate with 200739F, 202087,<br>213502, 213517, 221546, two each<br>200368H, 202099 and four 200397H  | 1 75  |
| 200053C | 12311 | Face Plate Screw (2) .....  | 04    |
| 213502  | 11063 | " " Thread Guide .....  | 10    |
| 200739F | 11063 | " " " " Screw ..  | 08    |
| 200397H | 12349 | " " " " Set Screw   | 02    |
| 221546  | —     | " " " Oiling Felt .....   | 01    |
| 213520  | 11707 | Face Plate complete, Nos. 200577H,<br>202088, 204289, 213515, 213519,<br>213704, two each 200309E and<br>204272 .....   | 3 90  |
| 213464  | 11063 | Feed Cam .....  | 75    |
| 213692  | 11066 | " " Position Pin (2) .....  | 02    |
| 201827  | 11063 | " " Roller .....  | 12    |
| 201821  | —     | " " " 201827 with 200818C   | 30    |
| 200818C | 11066 | " " " Screw Stud .....  | 15    |
| 201522E | 11701 | " " " " " Nut ..  | 03    |
| 200035E | 11066 | " " Screw .....   | 05    |
| 213465  | 11066 | " Connection .....  | 40    |
| 213466  | 11066 | " " Link .....  | 50    |
| 213467  | 11066 | " " Lever .....   | 50    |
| 200101D | 11066 | " " Stop Screw .....  | 04    |
| 213463  | 11066 | " Eccentric Connection with<br>200094F .....  | 1 00  |
| 200094F | 11701 | Feed Eccentric Connection Pinch<br>Screw .....  | 02    |
| 213460  | 11702 | Feed and Needle Carrying Frame<br>with 213711 .....   | 1 50  |
| 221566  | —     | Feed and Needle Carrying Frame<br>213460 with 200101D, 201522E,<br>201821, 213461, 213463 to 213467,<br>213474, 213475, 213481, 213483,<br>213485, 213486, 213488, 213513,<br>213514, 221564 and two 213484 ... | 16 00 |
| 213711  | 11701 | Feed and Needle Carrying Frame<br>Bushings .....  | 10    |
| 213639  | 11078 | Feed and Needle Carrying Frame<br>Collar with 200380C .....   | 15    |
| 200380C | 12319 | Feed and Needle Carrying Frame<br>Collar Set Screw .....  | 02    |
| 213461  | 11067 | Feed and Needle Carrying Frame<br>Link .....  | 75    |

## 40 Parts for Machine No. 122w1

| No.     | Plate | Name  | Each  | No.     | Plate | Name   | Each    |
|---------|-------|---|-------|---------|-------|--|---------|
| 213494  | 11067 | Feed Regulating Lever .....   | \$ 60 | 213442  | 11069 | Hook Saddle (left) with 200027E<br>and two 200378c .....   | \$ 2 50 |
| 213696  | 11067 | " " Friction<br>Washer .....  | 10    | 213616  | 11069 | Hook Saddle (right) with 200027E<br>and two 200378c .....  | 2 50    |
| 200095B | 11067 | Feed Regulating Lever Serew ....  | 04    | 200019E | 11064 | Hook Saddle Screw (4) .....  | 06      |
| 213496  | 11067 | " " Segment ...   | 25    | 202622  | 11703 | " " Washer (4) ...   | 01      |
| 201183D | 11063 | " " " Serew   | 04    | 221555  | 11704 | Hook Saddle (left) complete, Nos.<br>213439, 213440, 213442, 213446,<br>213447 and 221552 to 221554 ....   | 11 00   |
| 200681c | 11067 | " " " Stop<br>Screw .....   | 04    | 221556  | 11704 | Hook Saddle (right) complete, Nos.<br>213439, 213440, 213446, 213447,<br>213616, 221552, 221553 and 221558 | 11 00   |
| *221550 | —     | Hook (sewing) .....   | —     | 221557  | —     | Hook Saddle Combination (left and<br>right) complete, Nos. 221555 and<br>221556 .....                      | 22 00   |
| 221551  | 11703 | " 221550 with 200038E, 213438<br>and 213644 .....                                 | 5 00  | 202445  | 11707 | Knee Lifter Connection Lever with<br>202446 .....  | 07      |
| 221554  | —     | Hook and Bobbin Case (left) com-<br>plete, Nos. 213689 and 221551 ..              | 6 00  | 213871  | —     | Knee Lifter Connection Lever<br>202445 with 200224n, 200262n,<br>213869 and 213870 .....                   | 55      |
| 221558  | —     | Hook and Bobbin Case (right) com-<br>plete, Nos. 213703 and 221551 ..             | 6 00  | 200224n | 11701 | Knee Lifter Connection Lever Hinge<br>Screw .....  | 12      |
| 213440  | 11064 | Hook Bushing (lower) .....  | 25    | 213870  | 11707 | Knee Lifter Connection Lever Lift-<br>ing Rod with 202302 .....  | 08      |
| 213439  | 11064 | " " (upper) .....   | 25    | 202302  | 11063 | Knee Lifter Connection Lever Lift-<br>ing Rod Cotter Pin .....   | 01      |
| 200378c | 12311 | " " Set Screw .....   | 02    | 202446  | 11701 | Knee Lifter Connection Lever Pin   | 03      |
| 213441  | 11064 | " Driving Gear with two 200383c<br>(2) .....                                      | 1 00  | 213869  | 11707 | " " Lifting Lever .....  | 20      |
| 200383c | 12311 | Hook Driving Gear Set Screw ....  | 02    | 200262n | 11701 | " " " Hinge<br>Screw .....   | 10      |
| 213493  | 11707 | " " Shaft .....   | 1 00  | 213480  | 11185 | Lifting Presser Bar with 200074F ..  | 85      |
| 213469  | 11702 | " " Bearing with<br>200027E .....   | 35    | 213481  | 11070 | " " " Collar with<br>200572E and two 200386c .....   | 1 00    |
| 213470  | 11064 | Hook Driving Shaft Bearing Bush-<br>ing .....                                     | 25    | 200386c | 11701 | Lifting Presser Bar Collar Set Screw   | 02      |
| 200027E | 11703 | Hook Driving Shaft Bearing Bush-<br>ing Clamp Screw .....                         | 04    | 200572E | 11070 | " " " Slide Ad-<br>justing Serew .....   | 04      |
| 200019E | 11064 | Hook Driving Shaft Bearing Serew<br>(2) .....                                     | 06    | 200490B | 11070 | Lifting Presser Bar Sleeve Screw<br>and Nut .....  | 35      |
| 213443  | 11064 | Hook Driving Shaft Bushing (2) ..   | 25    | 213482  | 11070 | Lifting Presser Bar Spring .....   | 10      |
| 200027E | 11703 | " " " Clamp<br>Screw .....  | 04    | 200635B | 11070 | " " " Follower<br>Screw .....  | 25      |
| 202574  | 11703 | Hook Driving Shaft Collar with<br>200380c .....                                   | 15    | 200613F | 11701 | Lifting Presser Bar Spring Follower<br>Screw Position Serew .....  | 03      |
| 200380c | 12319 | Hook Driving Shaft Collar Set<br>Screw .....                                      | 02    | 214057  | —     | Lifting Presser Bar Vibrating Lever  | 1 10    |
| 221576  | 11069 | Hook Driving Shaft Connection Belt<br>Pulley with 202324 and two<br>201421c ..... | 75    | 213483  | 11070 | " " " " "<br>214057 with 200230F and 201525E   | 1 25    |
| 201421c | 11063 | Hook Driving Shaft Connection Belt<br>Pulley Set Serew .....                      | 04    | 200230F | 11070 | Lifting Presser Bar Vibrating Lever<br>Hinge Serew .....   | 10      |
| 202324  | 11063 | Hook Driving Shaft Connection Belt<br>Pulley Spring Flange .....                  | 08    | 201525E | 11701 | Lifting Presser Bar Vibrating Lever<br>Hinge Screw Nut .....   | 03      |
| 221552  | 11703 | Hook Gear with 200397c .....  | 1 00  |         |       |  |         |
| 221553  | 11703 | " " Key .....   | 10    |         |       |  |         |
| 200397c | 12349 | " " Set Screw .....   | 02    |         |       |  |         |
| *213438 | —     | " Gib .....   | —     |         |       |  |         |
| *213644 | —     | " " Hinge Pin .....   | —     |         |       |  |         |
| 200088F | 11064 | " " Serew .....   | 02    |         |       |  |         |

| No.     | Plate | Name   | Each   |
|---------|-------|--|--------|
| 213485  | 11071 | Lifting Presser Bar Vibrating Lever<br>Rocker Arm .....  | \$1 00 |
| 213486  | 11071 | Lifting Presser Bar Vibrating Lever<br>Rocker Arm Link .....   | 75     |
| 213484  | 11071 | Lifting Presser Bar Vibrating Lever<br>Slide Block .....   | 25     |
| 229833  | 11706 | Lifting Presser Foot, for 229834, in<br>gauges $\frac{1}{8}$ , $\frac{3}{16}$ , $\frac{1}{4}$ and $\frac{5}{16}$ inch ...        | 1 00   |
| 229756  | 11080 | Lifting Presser Foot, for 229757, in<br>gauges from $\frac{1}{4}$ to $\frac{1}{2}$ in., in steps of<br>$\frac{1}{16}$ inch ..... | 1 25   |
| 229825  | 11706 | Lifting Presser Foot, for 229758, in<br>gauges from $\frac{1}{8}$ to 1 in., in steps<br>of $\frac{1}{16}$ inch .....             | 1 25   |
| 200074F | 11701 | Lifting Presser Foot Screw .....   | 03     |
| 213514  | 11702 | Needle Bar (hollow) .....  | 1 00   |
| 213474  | 11071 | " " Collar with 200049F<br>and 200572F .....   | 50     |
| 200049F | 11071 | Needle Bar Collar Set Screw .....  | 03     |
| 200572F | 11070 | " " Slide Adjusting<br>Screw .....   | 04     |
| 213475  | 11071 | Needle Bar Connecting Link .....   | 75     |
| 203712  | 11701 | " Holder, in gauges from $\frac{1}{8}$ to<br>1 in., in steps of $\frac{1}{16}$ in., with two<br>each 200389c and 200581u .....   | 1 50   |
| 200581u | 12349 | Needle Holder Screw .....  | 02     |
| 200389c | 11701 | " Set Screw .....  | 02     |
| 202554  | 11701 | Presser Bar Lifter .....   | 25     |
| 200026D | 11071 | " " Hinge Screw ...  | 04     |
| 213490  | 11071 | " " Shoe and Tension<br>Release Stud .....   | 40     |
| 202068  | 12153 | Spool Holder Base .....  | 15     |
| 204551  | 11702 | " " Bracket .....  | 15     |
| 200257D | 11701 | " " Screw ..   | 08     |
| 204552  | 11702 | Spool Holder Base Bracket com-<br>plete, Nos. 204551, two each<br>200575u and 204297 .....                                       | 75     |
| 200575u | 12311 | Spool Holder Base Screw .....  | 05     |
| 204296  | 12153 | " " Wire .....   | 10     |
| 200079u | 12311 | " " Hinge Screw ...  | 02     |
| 204297  | 12153 | Spool Holder complete, Nos.<br>200079u, 202068 and 204296 .....  | 25     |
| 221564  | 11185 | Take-up Cam with 200335c, 200383c<br>and 200430c .....   | 2 50   |
| 200430c | 12311 | Take-up Cam Position Screw .....   | 08     |
| 200383c | 12311 | " " Check<br>Screw .....   | 02     |
| 200335c | 12311 | Take-up Cam Set Screw .....  | 04     |
| 213705  | 11705 | " Lever .....  | 1 15   |
| 221573  | —     | " " 213705 with 213697..   | 1 30   |

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 213697  | 11071 | Take-up Lever Bearing with 204264   | \$ 15 |
| 204264  | 11705 | " " Position Pin  | 01    |
| 200042F | 12311 | " " Screw .....   | 05    |
| 201816  | 11705 | " " Roller .....  | 12    |
| 213516  | 11705 | Take-up Lever complete, Nos.<br>200042F, 201816 and 221573 .....  | 1 40  |
| 202402  | 12349 | Tension Disc .....  | 05    |
| 202090  | 12349 | " " Position Pin .....  | 01    |
| 213515  | 11078 | " Release Lever .....   | 15    |
| 200309E | 12349 | " " Screw .....   | 04    |
| 202075  | 12349 | " " Plunger .....   | 03    |
| 202407  | 12349 | " Spring .....  | 05    |
| 200632B | 12349 | " Stud .....  | 20    |
| 200397H | 12349 | " Set Screw .....   | 02    |
| 201572B | 12349 | " Thumb Nut .....   | 04    |
| 204271  | 12349 | " Washer .....  | 05    |
| 204272  | 12349 | Tension complete, Nos. 200632B,<br>201572B, 202075, 202407, 204271<br>and two 202402 .....                    | 50    |
| 204274  | 12349 | Thread Controller Plate .....   | 12    |
| 200577u | 12311 | " " Screw ...   | 02    |
| 202098  | 12349 | " " Roller .....  | 05    |
| 204275  | 12349 | " " Guard .....   | 10    |
| 202084  | 12349 | " " Washer  | 01    |
| 200300c | 12349 | " " Screw .....   | 04    |
| 204276  | 12349 | " Spring .....  | 03    |
| 204333  | 12349 | " " Guard .....   | 08    |
| 200581u | 12349 | " " Screw   | 02    |
| 202087  | 12349 | " " Stop .....  | 03    |
| 202088  | 12349 | " " Stud with<br>204925 .....   | 10    |
| 200368u | 12349 | Thread Controller Spring Stud Set<br>Screw .....  | 02    |
| 204925  | 11703 | Thread Controller Spring Stud<br>Washer .....   | 01    |
| 205987  | 12349 | Thread Controller complete, Nos.<br>200300c, 200581u, 202084, 202098,<br>204274, 204275 and 204333 .....      | 42    |
| 204280  | 12349 | Thread Controller and Spring com-<br>plete, Nos. 204276 and 205987 ....                                       | 45    |
| 213448  | 11072 | Thread Draw (left) .....  | 15    |
| 213617  | 11078 | " (right) .....   | 25    |
| 213619  | 11078 | " Driving Fork Lever<br>with 200389u, for gauges from $\frac{1}{8}$<br>to $\frac{5}{16}$ inch .....           | 75    |
| 221548  | 11703 | Thread Draw Driving Fork Lever<br>with 200389u, for gauges from $\frac{1}{8}$<br>to $\frac{5}{16}$ inch ..... | 75    |

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 213620  | 11703 | Thread Draw Driving Fork Lever with 200389u, for gauges from $\frac{3}{16}$ to 1 inch .....   | \$ 75 |
| 213501  | 11072 | Thread Draw Driving Fork Lever Eccentric with 200366u .....   | 75    |
| 200366u | 12349 | Thread Draw Driving Fork Lever Eccentric Set Screw .....  | 02    |
| 200389u | 11701 | Thread Draw Driving Fork Lever Set Screw .....  | 02    |
| 213618  | 11078 | Thread Draw Driving Shaft .....   | 20    |
| 213613  | 11071 | " " " " Collar with 200389u (2) .....   | 10    |
| 200389u | 11701 | Thread Draw Driving Shaft Collar Set Screw .....  | 02    |
| 213449  | 11073 | Thread Draw Lever with two each 200355u and 200397u (2) .....   | 75    |
| 200355u | 12319 | Thread Draw Lever Adjusting Screw .....   | 03    |
| 200397u | 12349 | Thread Draw Lever Set Screw .....   | 02    |
| 200397u | 12349 | " " Set Screw .....   | 02    |
| 203313  | 11703 | " Guide .....   | 10    |
| 213489  | 11073 | " " (left) .....  | 10    |
| 213706  | 11073 | " " (right) .....   | 10    |
| 200389c | 11701 | " " Set Screw .....   | 02    |
| 202482  | 12319 | " Retainer Disc .....   | 02    |
| 213517  | 11703 | " " Guide Wire .....  | 02    |
| 200397u | 12349 | " " " " Set Screw .....   | 02    |
| 202483  | 12319 | " " Spring (brass) .....  | 01    |
| 200624e | 11703 | " " Stud .....  | 12    |
| 201574d | 11072 | " " " Nut .....   | 03    |
| 200368u | 12349 | " " " Set Screw .....   | 02    |
| 213704  | 11703 | Thread Retainer complete, Nos. 200624e, two each 201574d, 202483 and four 202482 .....  | 25    |
| 212846  | 11074 | Throat Plate, 50 needle hole, for needle sizes 16 to 22, in gauges from $\frac{1}{4}$ to 1 in., in steps of $\frac{1}{32}$ inch ..... | 1 50  |
| 200577u | 12311 | Throat Plate Screw (2) .....  | 02    |
| 213513  | 11702 | Vibrating Presser Bar with 200389c .....  | 75    |
| 213488  | 11073 | " " " Collar with 200386c and 200572e .....   | 40    |
| 200386c | 11701 | Vibrating Presser Bar Collar Set Screw .....  | 02    |
| 200572e | 11070 | Vibrating Presser Bar Collar Slide Adjusting Screw .....  | 04    |
| 213484  | 11071 | Vibrating Presser Bar Collar Slide Block .....  | 25    |
| 213489  | 11073 | Vibrating Presser Bar Thread Guide (left) .....   | 10    |

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 213706  | 11073 | Vibrating Presser Bar Thread Guide (right) .....  | \$ 10 |
| 200389c | 11701 | Vibrating Presser Bar Thread Guide Set Screw .....  | 02    |
| 229834  | 11706 | Vibrating Presser Foot, 50 needle hole, in gauges $\frac{1}{4}$ , $\frac{3}{8}$ , $\frac{1}{2}$ and $\frac{3}{4}$ in., with 200941c, for 229833 ....      | 1 50  |
| 229757  | 11080 | Vibrating Presser Foot, 50 needle hole, in gauges from $\frac{1}{4}$ to $\frac{1}{2}$ in., in steps of $\frac{1}{32}$ in., with 200941c, for 229756 ..... | 1 80  |
| 229758  | 11080 | Vibrating Presser Foot, 50 needle hole, in gauges from $\frac{1}{4}$ to 1 in., in steps of $\frac{1}{32}$ in., with 200941c, for 229825 .....             | 2 00  |
| 200941c | 11701 | Vibrating Presser Foot Pinch Screw .....  | 03    |

## LIST OF PARTS COMPLETE

FOR

## MACHINE No. 122w2

NEEDLE FEED. ALTERNATING PRESSERS.

For Heavy Lap Seam Felling.

In gauges from  $\frac{1}{8}$  to 1 inch.

| No.     | Plate | Name  | Each |
|---------|-------|---|------|
| *213451 | —     | Arm .....   | \$ — |
| 202247  | 11055 | " Cap .....   | 35   |
| 200278H | 12311 | " " Screw .....   | 05   |
| 202248  | 11701 | " " Washer .....  | 05   |
| 204235  | 11701 | " Position Pin (2) .....  | 02   |
| 200004E | 11063 | " Screw (3) .....   | 08   |
| 202005  | 11701 | " Washer (3) .....  | 01   |
| 213491  | 11183 | " Shaft .....   | 1 75 |
| 202243  | 11055 | " Bushing (back) with<br>202244 .....                           | 75   |
| 202244  | —     | Arm Shaft Bushing (back) Oil<br>Packing (wick) .....            | 02   |
| 200338C | 11701 | Arm Shaft Bushing (back) Set<br>Screw .....                     | 04   |
| 213452  | 11055 | Arm Shaft Bushing (front) with<br>202260 .....                  | 35   |
| 202260  | —     | Arm Shaft Bushing (front) Oil<br>Packing (wick) .....           | 01   |
| 200352C | 11701 | Arm Shaft Bushing (front) Set<br>Screw .....                    | 03   |
| 213453  | 11055 | Arm Shaft Connection Belt .....                                 | 1 00 |
| 213454  | 11055 | " " " " Pulley<br>with 200363C, 200396C and two<br>213455 ..... | 1 25 |
| 200396C | 11701 | Arm Shaft Connection Belt Pulley<br>Position Screw .....        | 03   |
| 200363C | 11701 | Arm Shaft Connection Belt Pulley<br>Set Screw .....             | 03   |
| 213455  | 11063 | Arm Shaft Connection Belt Pulley<br>Spring Flange .....         | 20   |
| 213492  | 11055 | Arm Shaft Counter Balance with<br>200347C .....                 | 25   |
| 200347C | 11063 | Arm Shaft Counter Balance Set<br>Screw .....                    | 03   |

| No.     | Plate | Name  | Each   |
|---------|-------|---|--------|
| 213471  | 11183 | Balance Wheel (belt groove $2\frac{3}{4}$ in.<br>diam.) with two 200335C .....  | \$1 00 |
| 200062H | 12311 | Balance Wheel Adjusting Screw ..  | 07     |
| 200335C | 12311 | " " Set Screw .....   | 04     |
| *213512 | —     | Bed .....   | —      |
| 202258  | 12153 | " Hinge Connection (2) .....  | 08     |
| 200570E | 12311 | " " " Screw (4) ....  | 05     |
| 213522  | 11069 | " Slide (back) with 213478 and<br>213479 .....  | 60     |
| 213521  | 11069 | Bed Slide (front) with 213478 and<br>213479 .....   | 60     |
| 213478  | 11063 | Bed Slide Friction Slide .....  | 10     |
| 213479  | 11063 | " " " " Spring ....   | 02     |
| 213783  | 11064 | Bobbin .....  | 08     |
| *213444 | —     | " Case (left) .....   | —      |
| *213615 | —     | " " (right) .....   | —      |
| 203648  | 11703 | " " Latch .....   | 10     |
| *202056 | 11703 | " " " Pin .....   | —      |
| 213932  | 11703 | " " " Plunger .....   | 10     |
| 203474  | 11703 | " " " Spring .....  | 01     |
| 213446  | 11064 | " " Lever .....   | 1 00   |
| 213447  | 11064 | " " " Arm with 200099H  | 30     |
| 200099H | 11703 | " " " Pinch Screw   | 02     |
| 213445  | 11064 | " " Tension Spring .....  | 10     |
| 200984C | 11703 | " " " " Regulat-<br>ing Screw .....   | 04     |
| 200594C | 11703 | Bobbin Case Tension Spring Screw  | 02     |
| 213689  | 11064 | Bobbin Case (left) complete, Nos.<br>200594C, 200984C, 202056, 203474,<br>203648, 213444, 213445 and 213932           | 1 00   |
| 213703  | 11078 | Bobbin Case (right) complete, Nos.<br>200594C, 200984C, 202056, 203474,<br>203648, 213445, 213615 and 213932          | 1 00   |
| 213519  | 11707 | Face Plate with 200739F, 202087,<br>213502, 213517, 221546, two each<br>200368H, 202090 and four 200397H              | 1 75   |
| 200053C | 12311 | Face Plate Screw (2) .....  | 04     |
| 213502  | 11063 | " " Thread Guide .....  | 10     |
| 200739F | 11063 | " " " " Screw ...   | 08     |
| 200397H | 12349 | " " " " Set Screw   | 02     |
| 221546  | —     | " " " " Oiling Felt ....  | 01     |
| 213520  | 11707 | Face Plate complete, Nos. 200577H,<br>202088, 204280, 213515, 213519,<br>213704, two each 200309E and<br>204272 ..... | 3 90   |
| 213464  | 11063 | Feed Cam .....  | 75     |
| 213692  | 11066 | " " Position Pin (2) .....  | 02     |
| 201827  | 11063 | " " Roller .....  | 12     |
| 201821  | —     | " " " 201827 with 200818C   | 30     |
| 200818C | 11066 | " " " Screw Stud .....  | 15     |

| No.     | Plate  | Name   | Each  |
|---------|--------|--|-------|
| 201522E | 11701  | Feed Cam Roller Screw Stud Nut   | \$ 03 |
| 200035E | 11066  | " " Screw  | 05    |
| 213465  | 11066  | " Connection   | 40    |
| 213466  | 11066  | " " Link   | 50    |
| 213467  | 11066  | " " " Lever  | 50    |
| 200101D | 11066  | " " Stop Screw   | 04    |
| 213463  | 11066  | " Eccentric Connection with 200094F  | 1 00  |
| 200094F | 11701  | Feed Eccentric Connection Pinch Screw  | 02    |
| 213460  | 11702  | Feed and Needle Carrying Frame with 213711   | 1 50  |
| 221566  | —      | Feed and Needle Carrying Frame 213460 with 200101D, 201522E, 201821, 213461, 213463 to 213467, 213474, 213475, 213481, 213483, 213485, 213486, 213488, 213513, 213514, 221564 and two 213484 | 16 00 |
| 213711  | 11701  | Feed and Needle Carrying Frame Bushing   | 10    |
| 213639  | 11078  | Feed and Needle Carrying Frame Collar with 200380C   | 15    |
| 200380C | 12319  | Feed and Needle Carrying Frame Collar Set Screw  | 02    |
| 213461  | 11067  | Feed and Needle Carrying Frame Link  | 75    |
| 213494  | 11067  | Feed Regulating Lever  | 60    |
| 213696  | 11067  | " " " Friction Washer  | 10    |
| 200095N | 11067  | Feed Regulating Lever Screw  | 04    |
| 213496  | 11067  | " " " Segment  | 25    |
| 201183D | 11063  | " " " " Screw  | 04    |
| 200681C | 11067  | " " " " Stop Screw   | 04    |
| *221550 | —      | Hook (sewing)  | —     |
| 221551  | 11703  | " 221550 with 200088F, 213438 and 213644   | 5 00  |
| 221554  | 221587 | Hook and Bobbin Case (left) complete, Nos. 213689 and 221551   | 6 00  |
| 221556  | 221612 | Hook and Bobbin Case (right) complete, Nos. 213703 and 221551  | 6 00  |
| 213440  | 11064  | Hook Bushing (lower)   | 25    |
| 213439  | 11064  | " " (upper)  | 25    |
| 200378C | 12311  | " " Set Screw  | 02    |
| 213441  | 11064  | " Driving Gear with two 200383C (2)  | 1 00  |
| 200383C | 12311  | Hook Driving Gear Set Screw  | 02    |
| 213493  | 11707  | " " Shaft  | 1 00  |
| 213469  | 11702  | " " " Bearing with 200027E   | 35    |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 213470  | 11064 | Hook Driving Shaft Bearing Bushing   | \$ 25 |
| 200027E | 11703 | Hook Driving Shaft Bearing Bushing Clamp Screw   | 04    |
| 200019E | 11064 | Hook Driving Shaft Bearing Screw (2)   | 06    |
| 213443  | 11064 | Hook Driving Shaft Bushing (2)   | 25    |
| 200027E | 11703 | " " " " Clamp Screw  | 04    |
| 202574  | 11703 | Hook Driving Shaft Collar with 200380C   | 15    |
| 200380C | 12319 | Hook Driving Shaft Collar Set Screw  | 02    |
| 221576  | 11069 | Hook Driving Shaft Connection Belt Pulley with 202324 and two 201421C                                | 75    |
| 201421C | 11063 | Hook Driving Shaft Connection Belt Pulley Set Screw  | 04    |
| 202324  | 11063 | Hook Driving Shaft Connection Belt Pulley Spring Flange  | 08    |
| 221552  | 11703 | Hook Gear with 200397C   | 1 00  |
| 221553  | 11703 | " " Key  | 10    |
| 200397C | 12349 | " " Set Screw  | 02    |
| *213438 | —     | " Gib  | —     |
| *213644 | —     | " " Hinge Pin  | —     |
| 200088F | 11064 | " " Screw  | 02    |
| 213442  | 11069 | " Saddle (left) with 200027E and two 200378C   | 2 50  |
| 213616  | 11069 | Hook Saddle (right) with 200027E and two 200378C   | 2 50  |
| 200019E | 11064 | Hook Saddle Screw (4)  | 06    |
| 202622  | 11703 | " " " Washer (4)   | 01    |
| 221555  | 11704 | Hook Saddle (left) complete, Nos. 213439, 213440, 213442, 213446, 213447 and 221552 to 221554        | 11 00 |
| 221556  | 11704 | Hook Saddle (right) complete, Nos. 213439, 213440, 213446, 213447, 213616, 221552, 221553 and 221558 | 11 00 |
| 221557  | —     | Hook Saddle Combination (left and right) complete, Nos. 221555 and 221556                            | 22 00 |
| 202445  | 11707 | Knee Lifter Connection Lever with 202446   | 07    |
| 213871  | —     | Knee Lifter Connection Lever 202445 with 200224N, 200262N, 213869 and 213870                         | 55    |
| 200224N | 11701 | Knee Lifter Connection Lever Hinge Screw   | 12    |
| 213870  | 11707 | Knee Lifter Connection Lever Lifting Rod with 202302   | 08    |



| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 202302  | 11063 | Knee Lifter Connection Lever Lift-<br>ing Rod Cotter Pin .....   | \$ 01 |
| 202446  | 11701 | Knee Lifter Connection Lever Pin .....   | 03    |
| 213869  | 11707 | " " Lifting Lever .....  | 20    |
| 200262H | 11701 | " " " " Hinge<br>Screw .....   | 10    |
| 213480  | 11185 | Lifting Presser Bar with 200074r ..  | 85    |
| 213481  | 11070 | " " " Collar with<br>200572r and two 200386c .....   | 1 00  |
| 200386c | 11701 | Lifting Presser Bar Collar Set<br>Screw .....  | 02    |
| 200572r | 11070 | Lifting Presser Bar Collar Slide<br>Adjusting Screw .....  | 04    |
| 200490B | 11070 | Lifting Presser Bar Sleeve Screw<br>and Nut .....  | 35    |
| 213482  | 11070 | Lifting Presser Bar Spring .....   | 10    |
| 200635B | 11070 | " " " " Follower<br>Screw .....  | 25    |
| 200613F | 11701 | Lifting Presser Bar Spring Follower<br>Screw Position Screw .....  | 03    |
| 214057  | —     | Lifting Presser Bar Vibrating Lever ..   | 1 10  |
| 213483  | 11070 | " " " " " " "<br>214057 with 200230r and 201525r ..  | 1 25  |
| 200230r | 11070 | Lifting Presser Bar Vibrating Lever<br>Hinge Screw .....   | 10    |
| 201525r | 11701 | Lifting Presser Bar Vibrating Lever<br>Hinge Screw Nut .....   | 03    |
| 213485  | 11071 | Lifting Presser Bar Vibrating Lever<br>Rocker Arm .....  | 1 00  |
| 213486  | 11071 | Lifting Presser Bar Vibrating Lever<br>Rocker Arm Link .....   | 75    |
| 213484  | 11071 | Lifting Presser Bar Vibrating Lever<br>Slide Block .....   | 25    |
| 229833  | 11706 | Lifting Presser Foot, for 229834, in<br>gauges $\frac{1}{4}$ , $\frac{3}{8}$ , $\frac{1}{2}$ and $\frac{3}{4}$ inch ....         | 1 00  |
| 229756  | 11080 | Lifting Presser Foot, for 229757, in<br>gauges from $\frac{1}{4}$ to $\frac{1}{2}$ in., in steps of<br>$\frac{1}{32}$ inch ..... | 1 25  |
| 229825  | 11706 | Lifting Presser Foot, for 229758, in<br>gauges from $\frac{1}{4}$ to 1 in., in steps<br>of $\frac{1}{32}$ inch .....             | 1 25  |
| 200074r | 11701 | Lifting Presser Foot Screw .....   | 03    |
| 213514  | 11702 | Needle Bar (hollow) .....  | 1 00  |
| 213474  | 11071 | " " Collar with 200049r and<br>200572r .....   | 50    |
| 200049r | 11071 | Needle Bar Collar Set Screw .....  | 03    |
| 200572r | 11070 | " " " Slide Adjusting<br>Screw .....   | 04    |
| 213475  | 11071 | Needle Bar Connecting Link .....   | 75    |

| No.     | Plate | Name   | Each   |
|---------|-------|--|--------|
| 203712  | 11701 | Needle Holder, in gauges from $\frac{1}{4}$ to<br>1 in., in steps of $\frac{1}{8}$ in., with two<br>each 200389c and 200581r ..... | \$1 50 |
| 200581r | 12349 | Needle Holder Screw .....  | 02     |
| 200389c | 11701 | " Set Screw .....  | 02     |
| 202554  | 11701 | Presser Bar Lifter .....   | 25     |
| 200026D | 11071 | " " " Hinge Screw ....   | 04     |
| 213490  | 11071 | " " " Shoe and Tension<br>Release Stud .....   | 40     |
| 202068  | 12153 | Spool Holder Base .....  | 15     |
| 204551  | 11702 | " " " Bracket .....  | 15     |
| 200257D | 11701 | " " " " Screw ..   | 08     |
| 204552  | 11702 | Spool Holder Base Bracket com-<br>plete, Nos. 204551, two each<br>200575H and 204297 ....  | 75     |
| 200575H | 12311 | Spool Holder Base Screw .....  | 05     |
| 204296  | 12153 | " " Wire .....   | 10     |
| 200079H | 12311 | " " " Hinge Screw ....   | 02     |
| 204297  | 12153 | Spool Holder complete, Nos.<br>200079H, 202068 and 204296 ....   | 25     |
| 221564  | 11185 | Take-up Cam with 200335c, 200383c<br>and 200430c .....   | 2 50   |
| 200430c | 12311 | Take-up Cam Position Screw .....   | 08     |
| 200383c | 12311 | " " " " Check<br>Screw .....   | 02     |
| 200335c | 12311 | Take-up Cam Set Screw .....  | 04     |
| 213705  | 11705 | " Lever .....  | 1 15   |
| 221573  | —     | " " 213705 with 213697 ..  | 1 30   |
| 213697  | 11071 | " " Bearing with 204264 ..   | 15     |
| 204264  | 11705 | " " " Position Pin ...   | 01     |
| 200042r | 12311 | " " " Screw .....  | 05     |
| 201816  | 11705 | " " Roller .....   | 12     |
| 213516  | 11705 | Take-up Lever complete, Nos.<br>200042r, 201816 and 221573 ....  | 1 40   |
| 202402  | 12349 | Tension Disc .....   | 05     |
| 202090  | 12349 | " " Position Pin .....   | 01     |
| 213515  | 11078 | " Release Lever .....  | 15     |
| 200309E | 12349 | " " " Screw .....  | 04     |
| 202075  | 12349 | " " Plunger .....  | 03     |
| 202407  | 12349 | " Spring .....   | 05     |
| 200632B | 12349 | " Stud .....   | 20     |
| 200397H | 12349 | " " Set Screw .....  | 02     |
| 201572B | 12349 | " Thumb Nut .....  | 04     |
| 204271  | 12349 | " Washer .....   | 05     |
| 204272  | 12349 | Tension complete, Nos. 200632B,<br>201572B, 202075, 202407, 204271<br>and two 202402 .....   | 50     |
| 204274  | 12349 | Thread Controller Plate .....  | 12     |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200577H | 12311 | Thread Controller Plate Screw ....           | \$ 02 |
| 202098  | 12349 | " " Roller .....                             | 05    |
| 204275  | 12349 | " " " Guard .....                            | 10    |
| 202084  | 12349 | " " " Washer .....                           | 01    |
| 200300C | 12349 | " " " Screw .....                            | 04    |
| 204276  | 12349 | " " Spring .....                             | 03    |
| 204333  | 12349 | " " " Guard .....                            | 08    |
| 200581H | 12349 | " " " Screw .....                            | 02    |
| 202087  | 12349 | " " " Stop .....                             | 03    |
| 202088  | 12349 | " " " Stud with                              |       |
|         |       | 204925 .....                                 | 10    |
| 200368H | 12349 | Thread Controller Spring Stud Set            |       |
|         |       | Screw .....                                  | 02    |
| 204925  | 11703 | Thread Controller Spring Stud                |       |
|         |       | Washer .....                                 | 01    |
| 205987  | 12349 | Thread Controller complete, Nos.             |       |
|         |       | 200300C, 200581H, 202084, 202098,            |       |
|         |       | 204274, 204275 and 204333 .....              | 42    |
| 204280  | 12349 | Thread Controller and Spring com-            |       |
|         |       | plete, Nos. 204276 and 205987 ....           | 45    |
| 213448  | 11072 | Thread Draw (left) .....                     | 15    |
| 213617  | 11078 | " " (right) .....                            | 25    |
| 213619  | 11078 | " " Driving Fork Lever                       |       |
|         |       | with 200389H, for gauges from $\frac{1}{8}$  |       |
|         |       | to $\frac{3}{8}$ inch .....                  | 75    |
| 221548  | 11703 | Thread Draw Driving Fork Lever               |       |
|         |       | with 200389H, for gauges from $\frac{1}{4}$  |       |
|         |       | to $\frac{1}{2}$ inch .....                  | 75    |
| 213620  | 11703 | Thread Draw Driving Fork Lever               |       |
|         |       | with 200389H, for gauges from $\frac{3}{16}$ |       |
|         |       | to 1 inch .....                              | 75    |
| 213501  | 11072 | Thread Draw Driving Fork Lever               |       |
|         |       | Eccentric with 200366H .....                 | 75    |
| 200366H | 12349 | Thread Draw Driving Fork Lever               |       |
|         |       | Eccentric Set Screw .....                    | 02    |
| 200389H | 11701 | Thread Draw Driving Fork Lever               |       |
|         |       | Set Screw .....                              | 02    |
| 213618  | 11078 | Thread Draw Driving Shaft .....              | 20    |
| 213613  | 11071 | " " " " Collar                               |       |
|         |       | with 200389H (2) .....                       | 10    |
| 200389H | 11701 | Thread Draw Driving Shaft Collar             |       |
|         |       | Set Screw .....                              | 02    |
| 213449  | 11073 | Thread Draw Lever with two each              |       |
|         |       | 200355H and 200397H (2) .....                | 75    |
| 200355H | 12319 | Thread Draw Lever Adjusting                  |       |
|         |       | Screw .....                                  | 03    |
| 200397H | 12349 | Thread Draw Lever Set Screw ...              | 02    |
| 200397H | 12349 | " " Set Screw .....                          | 02    |
| 203313  | 11703 | " Guide .....                                | 10    |
| 213489  | 11073 | " " (left) .....                             | 10    |

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 213706  | 11073 | Thread Guide (right) .....  | \$ 10 |
| 200389C | 11701 | " " Set Screw .....   | 02    |
| 202482  | 12319 | " Retainer Disc .....   | 02    |
| 213517  | 11703 | " " Guide Wire .....  | 02    |
| 200397H | 12349 | " " " Set Screw .....   | 02    |
| 202483  | 12319 | " " Spring (brass) .....  | 01    |
| 200624E | 11703 | " " Stud .....  | 12    |
| 201574D | 11072 | " " " Nut .....   | 03    |
| 200368H | 12349 | " " " Set Screw ....  | 02    |
| 213704  | 11703 | Thread Retainer complete, Nos.  |       |
|         |       | 200624E, two each 201574D, 202483   |       |
|         |       | and four 202482 .....   | 25    |
| 212857  | 11074 | Throat Plate, 50 needle hole, for   |       |
|         |       | needle sizes 16 to 22, in gauges  |       |
|         |       | from $\frac{1}{8}$ to 1 in., in steps of $\frac{1}{16}$ inch                      | 1 50  |
| 200577H | 12311 | Throat Plate Screw (2) .....  | 02    |
| 213513  | 11702 | Vibrating Presser Bar with 200389C  | 75    |
| 213488  | 11073 | " " " Collar with   |       |
|         |       | 200386C and 200572F .....   | 40    |
| 200386C | 11701 | Vibrating Presser Bar Collar Set  |       |
|         |       | Screw .....   | 02    |
| 200572F | 11070 | Vibrating Presser Bar Collar Slide  |       |
|         |       | Adjusting Screw .....   | 04    |
| 213484  | 11071 | Vibrating Presser Bar Collar Slide  |       |
|         |       | Block .....   | 25    |
| 213489  | 11073 | Vibrating Presser Bar Thread Guide  |       |
|         |       | (left) .....  | 10    |
| 213706  | 11073 | Vibrating Presser Bar Thread Guide  |       |
|         |       | (right) .....   | 10    |
| 200389C | 11701 | Vibrating Presser Bar Thread Guide  |       |
|         |       | Set Screw .....   | 02    |
| 229834  | 11706 | Vibrating Presser Foot, 50 needle   |       |
|         |       | hole, in gauges $\frac{1}{8}$ , $\frac{5}{16}$ , $\frac{3}{8}$ and $\frac{7}{16}$ |       |
|         |       | in., with 200941C, for 229833 ....  | 1 50  |
| 229757  | 11080 | Vibrating Presser Foot, 50 needle   |       |
|         |       | hole, in gauges from $\frac{1}{4}$ to $\frac{1}{2}$ in.,                          |       |
|         |       | in steps of $\frac{1}{16}$ in., with 200941C,                                     |       |
|         |       | for 229756 .....  | 1 80  |
| 229758  | 11080 | Vibrating Presser Foot, 50 needle   |       |
|         |       | hole, in gauges from $\frac{1}{4}$ to 1 in.,                                      |       |
|         |       | in steps of $\frac{1}{16}$ in., with 200941C,                                     |       |
|         |       | for 229825 .....  | 2 00  |
| 200941C | 11701 | Vibrating Presser Foot Pinch Screw  | 03    |

## ACCESSORIES

### FOR MACHINES NOS. 121W1 AND 121W4

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 213783  | 11064 | Bobbin (5) .....  | \$ 08 |
| *225482 | —     | " Case Screw Driver Blade..   | —     |
| *225483 | —     | " " " " Handle  | —     |
| 225497  | 12153 | Bobbin Case Screw Driver complete, Nos. 225482 and 225483 ...               | 10    |
| 19 N1   | —     | Needles, two each, sizes 16, 18 and 20 .....                                | 30    |
| 225181  | —     | Drip Pan (long) with four wood screws $\frac{1}{2}$ in., No. 5 .....        | 35    |
| 41400   | 12153 | Machine Rest Pin (wood) .....   | 04    |
| 36578   | 12153 | Oiler with 36579 .....  | 10    |
| 36579   | 12153 | " Spout, 3 in. long .....   | 06    |
| *225484 | —     | Screw Driver Blade .....  | —     |
| *225485 | —     | " " Handle .....  | —     |
| 225498  | 12153 | Screw Driver complete (7 $\frac{1}{2}$ in. long), Nos. 225484 and 225485 .. | 15    |
| 225554  | 12153 | Wrench (steel) .....  | 10    |

### BOBBIN WINDER

#### Swing Automatic, Right Hand.

|         |       |  |    |
|---------|-------|--|----|
| 202470  | 12320 | Bobbin Winder Base .....                                   | 15 |
| 202471  | 12320 | " " Frame .....  | 15 |
| 200221D | 12319 | " " " Hinge Screw..  | 12 |
| 202472  | 12319 | " " " Spring .....   | 05 |
| 200161D | 12319 | " " " " Screw..  | 04 |
| 202473  | 12320 | " " Pulley with 200380C ..                                 | 20 |
| 200380C | 12319 | " " " Set Screw ....                                       | 02 |
| 202474  | 12320 | " " Spindle .....  | 15 |
| 227522  | 12319 | " " Stop Latch .....                                       | 10 |
| 200056E | 12319 | " " " " Screw..  | 03 |
| 202477  | 12319 | " " " " Thumb Lever .....                                  | 15 |
| 200299H | 12319 | Bobbin Winder Stop Latch Thumb Lever Hinge Screw .....     | 05 |
| 200299H | 12319 | Bobbin Winder Stop Latch Thumb Lever Joint Screw .....     | 05 |
| 201537H | 12319 | Bobbin Winder Stop Latch Thumb Lever Joint Screw Nut ..... | 03 |
| 202478  | 12319 | Bobbin Winder Stop Latch Trip Lever .....                  | 10 |

| No.     | Plate | Name   | Each  |
|---------|-------|--|-------|
| 200299H | 12319 | Bobbin Winder Stop Latch Trip Lever Hinge Screw .....  | \$ 05 |
| 227523  | 12320 | Bobbin Winder complete, Nos. 200056E, 200161D, 200221D, 201537H, 202470 to 202474, 202477, 202478, 227522, three 200299H and two wood screws $\frac{1}{2}$ in., No. 14, R.I.B. | 1 35  |
| 202480  | 12320 | Bobbin Winder Spool Holder Base with 200355H and 202484 .....  | 15    |
| 202481  | 12320 | Bobbin Winder Spool Holder Base Spool Pin .....  | 05    |
| 202482  | 12319 | Bobbin Winder Spool Holder Tension Disc (lower or upper) .....   | 02    |
| 200011E | 12319 | Bobbin Winder Spool Holder Tension Disc Screw .....  | 05    |
| 200355H | 12319 | Bobbin Winder Spool Holder Tension Disc Screw Set Screw .....  | 03    |
| 202483  | 12319 | Bobbin Winder Spool Holder Tension Disc Spring (brass) .....   | 01    |
| 202484  | 12319 | Bobbin Winder Spool Holder Tension Disc Thread Guide .....   | 01    |
| 202485  | 12320 | Bobbin Winder Spool Holder complete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw $\frac{1}{2}$ in., No. 13 .....                                       | 35    |
| 227524  | —     | Bobbin Winder and Spool Holder complete, Nos. 202485 and 227523  | 1 65  |

### KNEE LIFTER

|         |       |  |    |
|---------|-------|--|----|
| 227781  | 11707 | Knee Lifter Rock Lever with 200522C and 200529C .....                        | 35 |
| 227782  | —     | Knee Lifter Rock Lever 227781 with two each 202451 and 202452                | 50 |
| 227787  | —     | Knee Lifter Rock Lever 227782 with 202203 and 227784 .....                   | 90 |
| 202453  | 11707 | Knee Lifter Rock Lever Knee Plate with 200526C .....                         | 17 |
| 202203  | —     | Knee Lifter Rock Lever Knee Plate 202453 with 202454 .....                   | 30 |
| 202454  | 11707 | Knee Lifter Rock Lever Knee Plate Arm (long) .....                           | 12 |
| 200522C | 12319 | Knee Lifter Rock Lever Knee Plate Arm Set Screw .....                        | 06 |
| 200526C | 12319 | Knee Lifter Rock Lever Knee Plate Set Screw .....                            | 05 |
| 202451  | 11707 | Knee Lifter Rock Lever Lug with two wood screws $\frac{3}{8}$ in., No. 13H.. | 05 |
| 202452  | 12319 | Knee Lifter Rock Lever Lug Hinge Pin .....                                   | 02 |

| No.     | Plate | Name  | Each  |
|---------|-------|---|-------|
| 227784  | 11707 | Knee Lifter Rock Lever Rod, 3 in. long, with 227785 ..... | \$ 06 |
| *227785 | —     | Knee Lifter Rock Lever Rod Cap or Oil Guard .....         | —     |
| 200529C | 12319 | Knee Lifter Rock Lever Rod Set Screw .....                | 05    |

(Other Knee Lifter Parts are listed with parts of machine head).

#### FOR MACHINES NOS. 121W2 AND 121W3

Same as for No. 121w1 with the following exceptions:

|        |       |   |    |
|--------|-------|---|----|
| 227678 | 11704 | Feed Reversing Lever Chain, 48 in. long, with 202784 .....                | 25 |
| 202784 | 11701 | Feed Reversing Lever Chain Hook   | 02 |
| 213701 | 11077 | " " " " Lever with 213504, 213700 and two wood screws 1 in., No. 13 ..... | 50 |
| 213700 | 11073 | Feed Reversing Lever Chain Lever Hinge Pin .....                          | 05 |
| 213504 | 11077 | Feed Reversing Lever Chain Lever Lug .....                                | 15 |

#### FOR MACHINES NOS. 122W1 AND 122W2

Same as for No. 121w1 with the following exceptions:

|        |       |  |    |
|--------|-------|--|----|
| 213783 | 11064 | Bobbin (10), in place of (5) .....   | 08 |
| 19 N1  | —     | Needles, four each, sizes 16, 18 and 20, in place of two each, sizes 16, 18 and 20 ..... | 30 |

## PRESSER FEET

#### FOR MACHINES OF CLASS 121W

| No.     | Plate | Name  | Each   |
|---------|-------|---|--------|
| 229752  | 11079 | Lifting Presser Foot, for 229751 ..   | \$1 00 |
| 229754  | 11079 | " " " " 229753 ..   | 1 00   |
| 229760  | 11079 | " " " " 229751 ..   | 1 00   |
| 229762  | 11080 | " " " " 229761 ..   | 1 00   |
| 229755  | 11080 | " " " " 229751 ..   | 1 00   |
| 229945  | 11706 | " " " " 229946 ..   | 1 00   |
| 229947  | 11706 | " " " " 229948 ..   | 1 00   |
| 226852  | 11706 | " " " " 226853 ..   | 1 00   |
| 229818  | 11706 | " " " " 229751 ..   | 1 00   |
| 221578  | 11706 | " " " " 221579 ..   | 1 00   |
| 221579  | 11706 | Vibrating Presser Foot, 46 needle hole, with 200941c, for 221578 ..                               | 1 25   |
| 221582  | 11079 | Vibrating Presser Foot, 46 needle hole, with 200941c, for 221578 ..                               | 1 25   |
| 229751  | 11079 | Vibrating Presser Foot, 46 needle hole, with 200941c, for 229752, 229755, 229760 and 229818 ..... | 1 25   |
| 229753  | 11079 | Vibrating Presser Foot, 50 needle hole, with 200941c, for 229754 ..                               | 1 25   |
| 229761  | —     | Vibrating Presser Foot, 46 needle hole, with 200941c, for 229762 ..                               | 1 25   |
| 229946  | 11706 | Vibrating Presser Foot, 46 needle hole with 200941c, for 229945 ..                                | 1 25   |
| 229948  | 11706 | Vibrating Presser Foot, 40 needle hole, with 200941c, for 229947 ..                               | 1 25   |
| 226853  | 11706 | Vibrating Presser Foot, with 200941c, for 226852 .....  | 1 25   |
| 200941c | 11701 | Vibrating Presser Foot Pinch Screw  | 03     |

#### FOR MACHINES OF CLASS 122W

|        |       |   |      |
|--------|-------|---|------|
| 229756 | 11080 | Lifting Presser Foot, for 229757, in gauges from $\frac{1}{4}$ to $\frac{1}{2}$ in., in steps of $\frac{1}{32}$ inch .....      | 1 25 |
| 229759 | 11080 | Lifting Presser Foot, for 221611, 229757 and 229758, in gauges from $\frac{1}{4}$ to 1 in., in steps of $\frac{1}{32}$ inch ... | 2 75 |
| 229833 | 11706 | Lifting Presser Foot, for 229834, in gauges $\frac{1}{8}$ , $\frac{1}{32}$ , $\frac{3}{16}$ and $\frac{7}{32}$ inch ....        | 1 00 |

| No.    | Plate | Name   | Each   |
|--------|-------|--|--------|
| 229825 | 11706 | Lifting Presser Foot, for 221611 and 229758, in gauges from $\frac{1}{32}$ to 1 in., in steps of $\frac{1}{32}$ inch .....   | \$1 25 |
| 229757 | 11080 | Vibrating Presser Foot, 50 needle hole, in gauges from $\frac{1}{4}$ to $\frac{1}{2}$ in., in steps of $\frac{1}{32}$ in., with 200941c, for 229756 and 229759 ..... | 1 80   |
| 229758 | 11080 | Vibrating Presser Foot, 50 needle hole, in gauges from $\frac{1}{32}$ to 1 in., in steps of $\frac{1}{32}$ in., with 200941c, for 229759 and 229825 .....            | 2 00   |
| 229834 | 11706 | Vibrating Presser Foot, 50 needle hole, in gauges $\frac{1}{4}$ , $\frac{5}{16}$ , $\frac{3}{8}$ and $\frac{7}{8}$ in., with 200941c, for 229833 ..                  | 1 50   |
| 221611 | 11080 | Vibrating Presser Foot, 46 needle hole, in gauges from $\frac{1}{32}$ to 1 in., in steps of $\frac{1}{32}$ in., with 200941c, for 229759 and 229825 .....            | 2 00   |

## THROAT PLATES

### FOR MACHINES OF CLASS 121W

|        |       |   |    |
|--------|-------|---|----|
| 212841 | 11074 | Throat Plate, 53 needle hole, for needle sizes 10 to 20 ..... | 80 |
| 212842 | 11074 | Throat Plate, 46 needle hole, for needle sizes 20 to 24 ..... | 80 |
| 212856 | 11074 | Throat Plate, 50 needle hole, for needle sizes 16 to 22 ..... | 80 |
| 212616 | 11074 | Throat Plate, 50 needle hole, for needle sizes 16 to 22 ..... | 80 |

### FOR MACHINE NO. 122W1

|        |       |   |      |
|--------|-------|---|------|
| 212846 | 11074 | Throat Plate, 50 needle hole, for needle sizes 16 to 22, in gauges from $\frac{1}{4}$ to 1 in., in steps of $\frac{1}{32}$ inch ..... | 1 50 |
| 221542 | 11074 | Throat Plate, 46 needle hole, for needle sizes 20 to 24, in gauges from $\frac{1}{4}$ to 1 in., in steps of $\frac{1}{32}$ inch ..... | 1 50 |

| No. | Plate | Name | Each |
|-----|-------|------|------|
|-----|-------|------|------|

### FOR MACHINE NO. 122W2

|        |       |   |        |
|--------|-------|---|--------|
| 212847 | 11074 | Throat Plate, 53 needle hole, for needle sizes 10 to 20, in gauges from $\frac{1}{4}$ to 1 in., in steps of $\frac{1}{32}$ inch ..... | \$1 50 |
| 212857 | 11074 | Throat Plate, 50 needle hole, for needle sizes 16 to 22, in gauges from $\frac{1}{4}$ to 1 in., in steps of $\frac{1}{32}$ inch ..... | 1 50   |

## LAP SEAM EDGE GUIDE

(ADJUSTABLE)

### FOR MACHINES OF CLASS 122W

|         |       |   |      |
|---------|-------|---|------|
| 230708  | 11709 | Guide (adjustable) (lower) .....  | 1 75 |
| 230709  | 11708 | " " (upper) .....   | 1 75 |
| 230710  | 11709 | " Base .....  | 1 50 |
| 200170R | 11709 | " Screw .....   | 04   |
| 230455  | 11709 | Lap Seam Edge Guide (adjustable) complete, Nos. 230708 to 230710 and two 200170R, for L, M, H, MH, XII, XXII, XXXII or XXXXH material ..... | 5 00 |

## LAP SEAM FELLER

### FOR MACHINES OF CLASS 122W

|        |       |  |      |
|--------|-------|--|------|
| 230053 | 11708 | Lap Seam Feller (left hand), for $\frac{1}{4}$ to $\frac{3}{4}$ in. gauge, for L, M, MH, H, XH, XXH or XXXH material, has yielding spring .....  | 3 40 |
| 230054 | 11708 | Lap Seam Feller (right hand), for $\frac{1}{4}$ to $\frac{3}{4}$ in. gauge, for L, M, MH, H, XH, XXH or XXXH material, has yielding spring ..... | 3 40 |

## ROLLER WELT GAUGE

### FOR MACHINES OF CLASS 121W

| No.     | Plate | Name  | Each   |
|---------|-------|---|--------|
| 226261  | 10557 | Roller Welt Gauge with 201849 ...   | \$1 50 |
| 226259  | 10557 | " " " Frame with<br>226264 .....  | 85     |
| 226273  | —     | Roller Welt Gauge Frame 226259<br>with 200297E, 226261 to 226263,<br>two each 200056D and 202603 .... | 3 65   |
| 226824  | 11702 | Roller Welt Gauge Frame Base<br>Plate with 213478 and 213479 ..                                       | 65     |
| 213478  | 11063 | Roller Welt Gauge Frame Base<br>Plate Friction Slide .....  | 10     |
| 213479  | 11063 | Roller Welt Gauge Frame Base<br>Plate Friction Slide Spring ....                                      | 02     |
| 200056D | 12319 | Roller Welt Gauge Frame Screw   | 03     |
| 202603  | 10557 | " " " " "   |        |
|         |       | Washer .....  | 01     |
| 226262  | 10557 | Roller Welt Gauge Handle .....  | 1 00   |
| 226264  | 10557 | " " " " Cushion<br>(leather) .....  | 02     |
| 200297E | 10557 | Roller Welt Gauge Handle Hinge<br>Screw .....   | 05     |
| 201849  | 10557 | Roller Welt Gauge Roller 201836<br>with 206521 .....  | 20     |
| 206521  | 10557 | Roller Welt Gauge Roller Stud ....  | 05     |
| 226263  | 10557 | " " " Spring .....  | 10     |
| 226825  | 11702 | Roller Welt Gauge complete, Nos.<br>226273 and 226824 .....   | 4 30   |

## FOLDER

### FOR MACHINE NO. 121W1

For folding the edge of brim of soft felt hats.


| No.    | Plate | Name   | Each   |
|--------|-------|--|--------|
| 221577 | 11711 | Edge Folder on Shank, in gauges<br>from $\frac{1}{4}$ to $\frac{3}{4}$ in., in steps of $\frac{1}{16}$<br>inch .....                                     | \$3 75 |
| 221578 | 11706 | Lifting Presser Foot, for 221579 and<br>221582 .....   | 1 00   |
| 221582 | 11079 | Vibrating Presser Foot, 46 needle<br>hole, with 200941c, for 221578, for<br>use with 221577, in gauges from<br>$\frac{1}{4}$ to $\frac{3}{4}$ inch ..... | 1 25   |
| 221579 | 11706 | Vibrating Presser Foot, 46 needle<br>hole, with 200941c, for 221578, for<br>use with 221577, in gauges from<br>$\frac{1}{4}$ to $\frac{3}{4}$ inch ..... | 1 25   |

## OBSOLETE PARTS

|         |       |   |      |
|---------|-------|---|------|
| 213458  | 11183 | Face Plate with 200368H, 200739F,<br>202087, 202090, 213502, 213691,<br>221546 and four 200397H .....     | 1 50 |
| 213459  | 11183 | Face Plate complete, Nos. 200577H,<br>202088, 204272, 204280, 213458,<br>213500, 213690 and two 200309E.. | 3 00 |
| 213462  | 11066 | Feed Eccentric .....  | 1 00 |
| *213431 | —     | Hook (sewing) .....   | —    |
| 213694  | 11064 | " 213431 with 200088F, 213438<br>and 213644 .....   | 5 00 |
| 213497  | 11069 | Take-up Cam with 200335c, 200383c<br>and 200430c .....  | 1 50 |

PLATE 10557—FULL SIZE

 226259

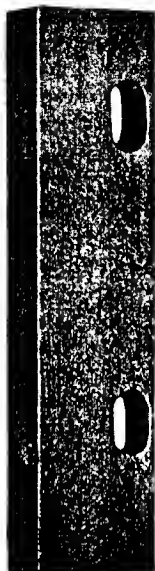

226261



226262



201849



226263



200056



226264



200297



206521



202603



PLATE 11055—ONE-HALF SIZE

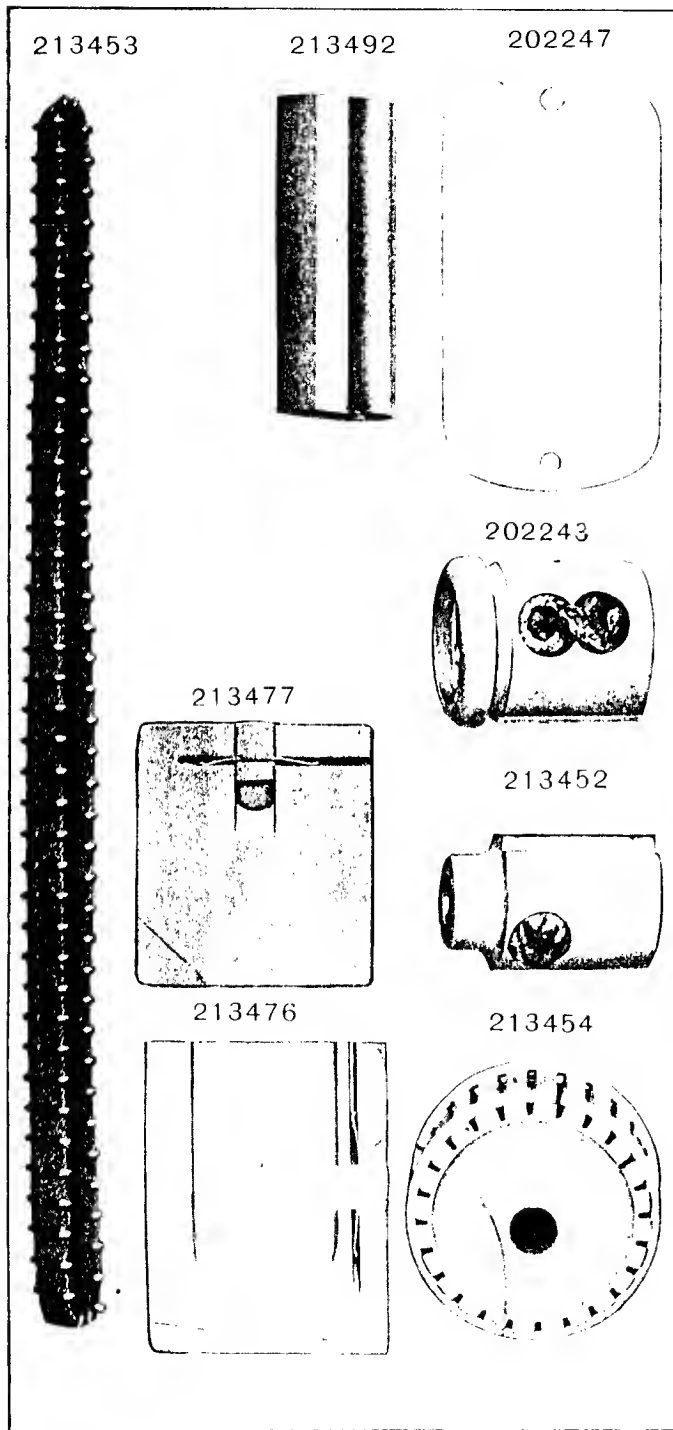 


PLATE 11063—FULL SIZE

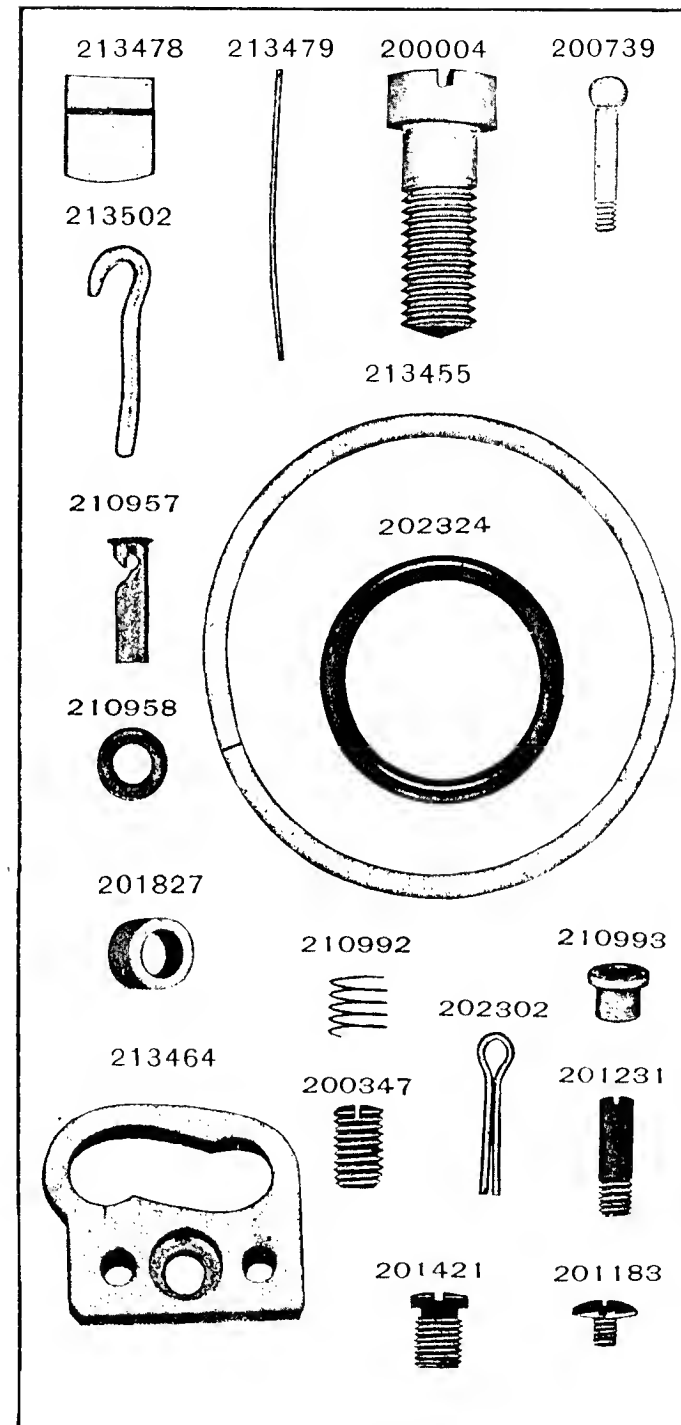




 PLATE 11064-FULL SIZE

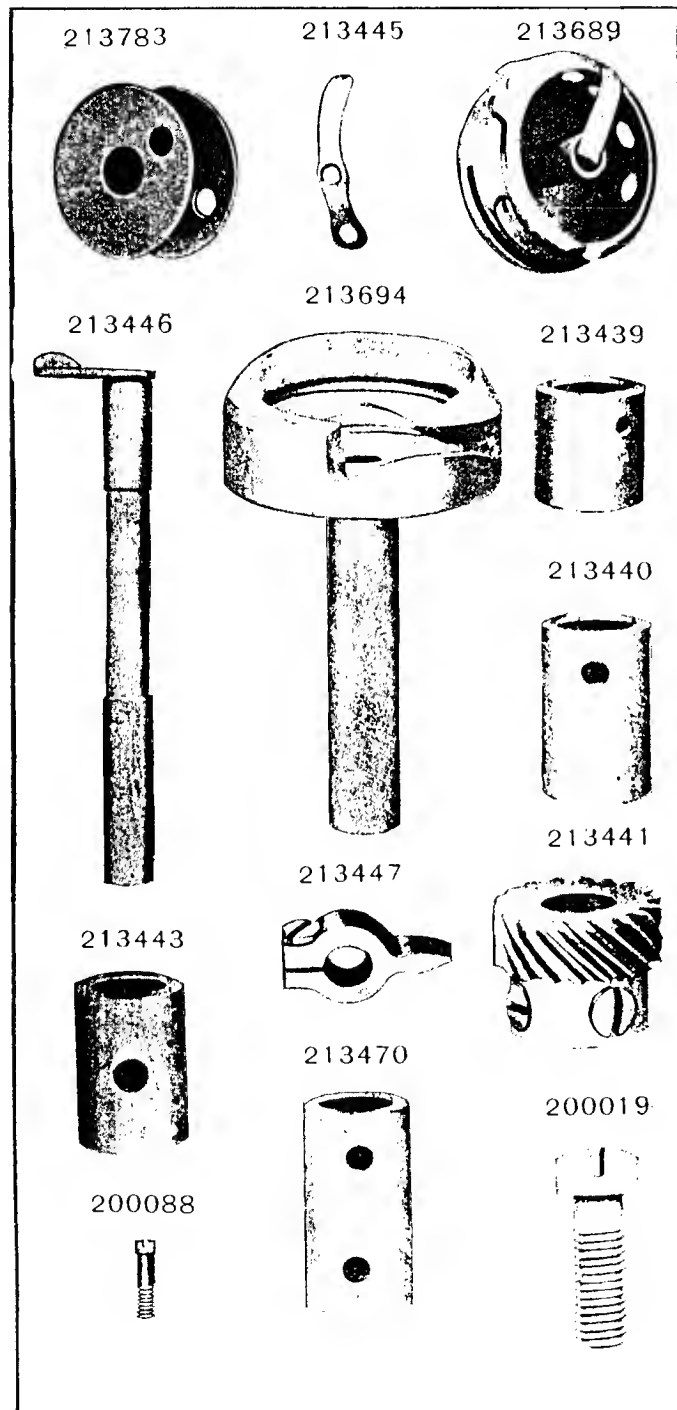 


PLATE 11066-FULL SIZE


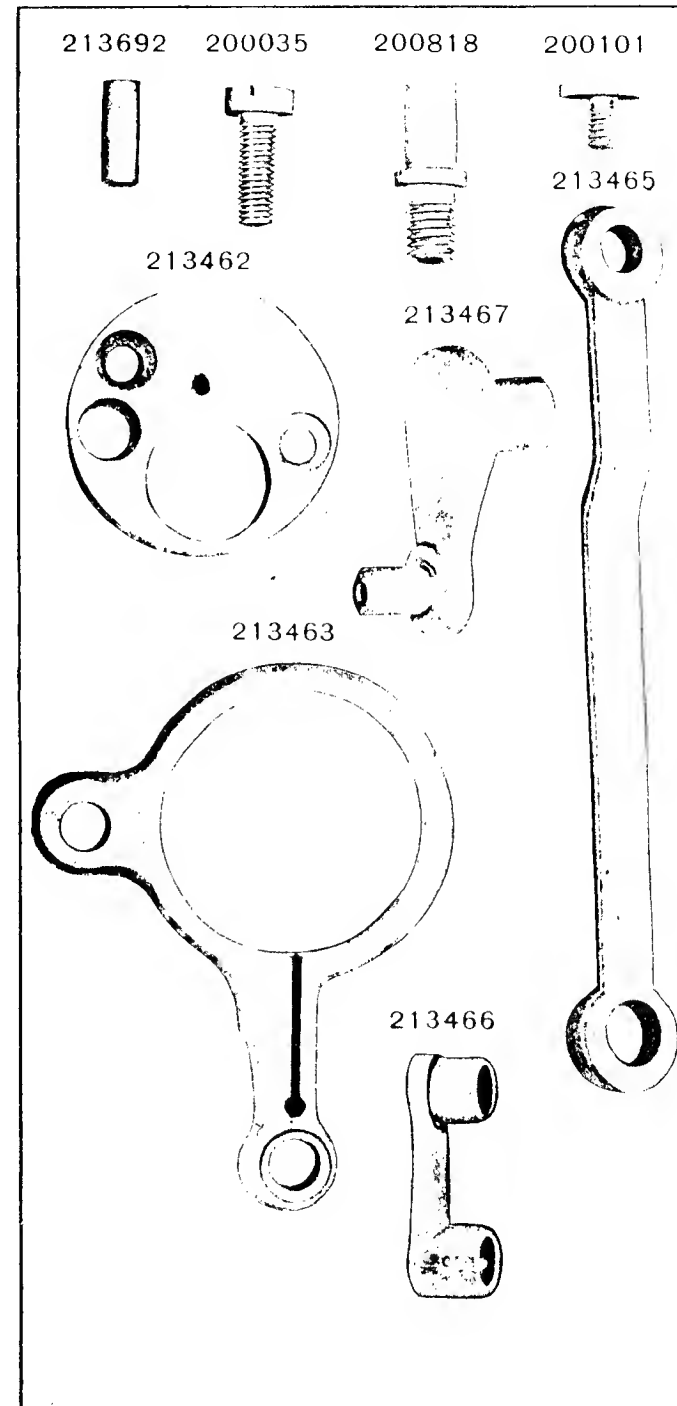 


PLATE 11067—FULL SIZE

 225832



213461

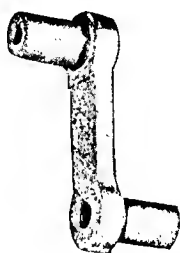

213696



200095



200681



213494

213496


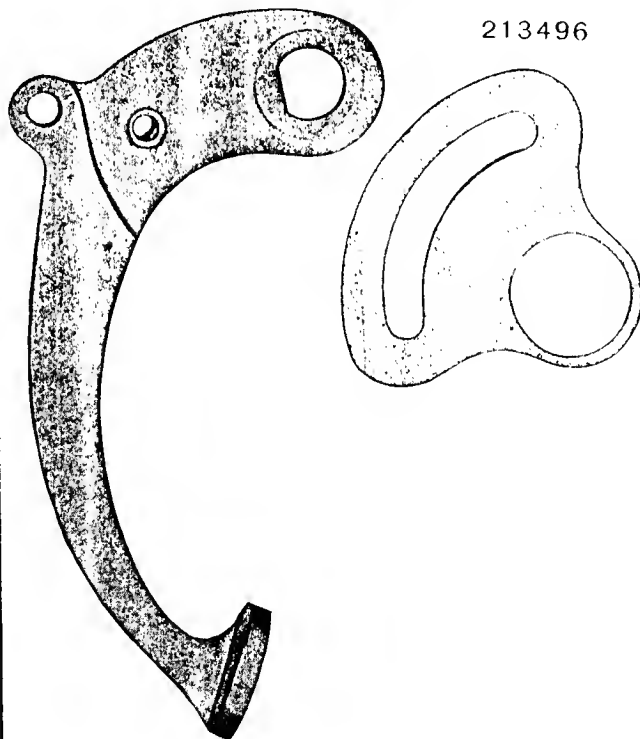 


PLATE 11069—ONE-HALF SIZE

 221576




213442

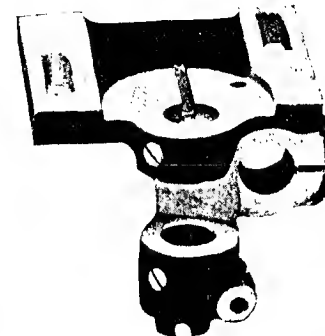


213497



 213521

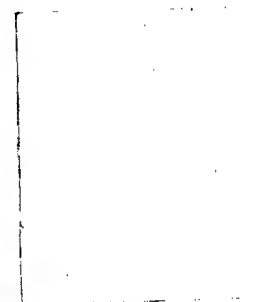

213616

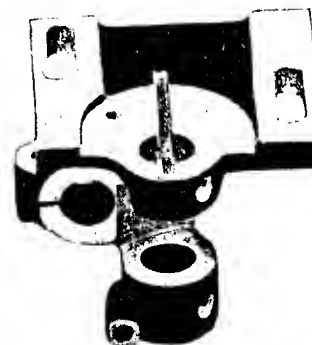 

213522



PLATE 11070—FULL SIZE

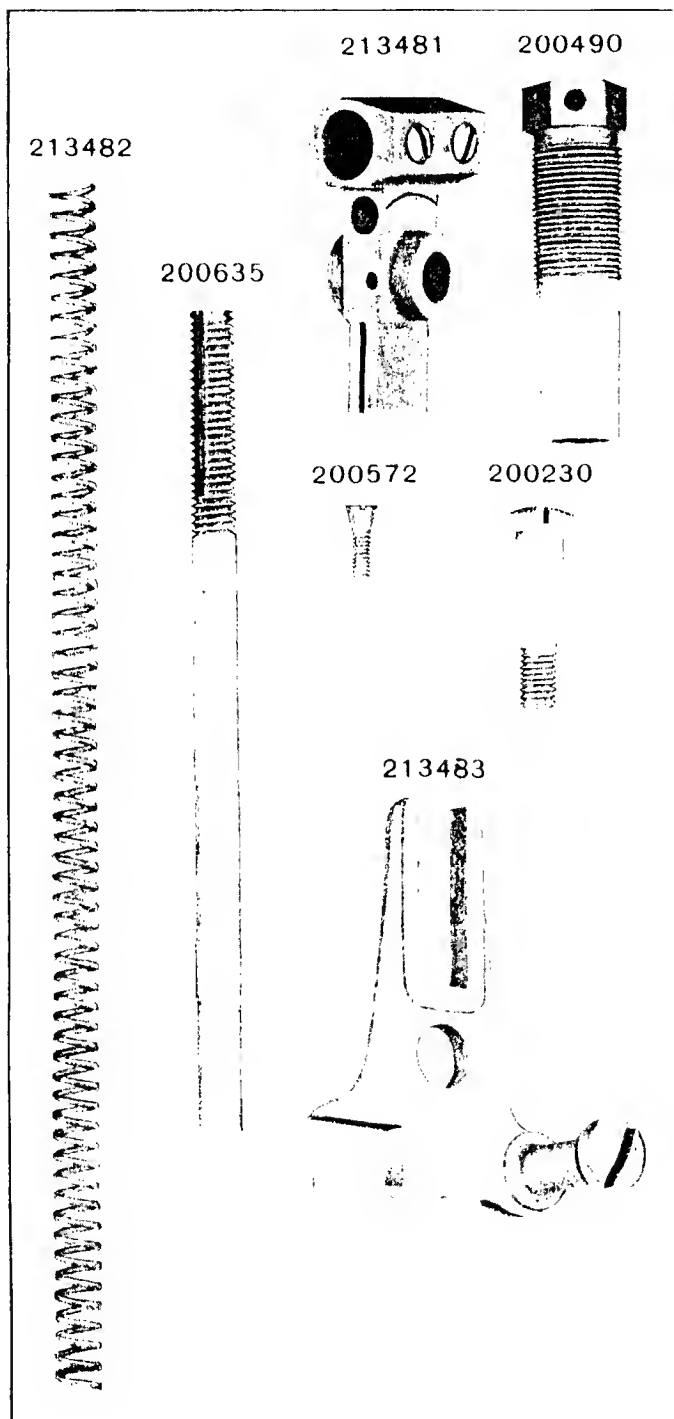 


PLATE 11071—FULL SIZE

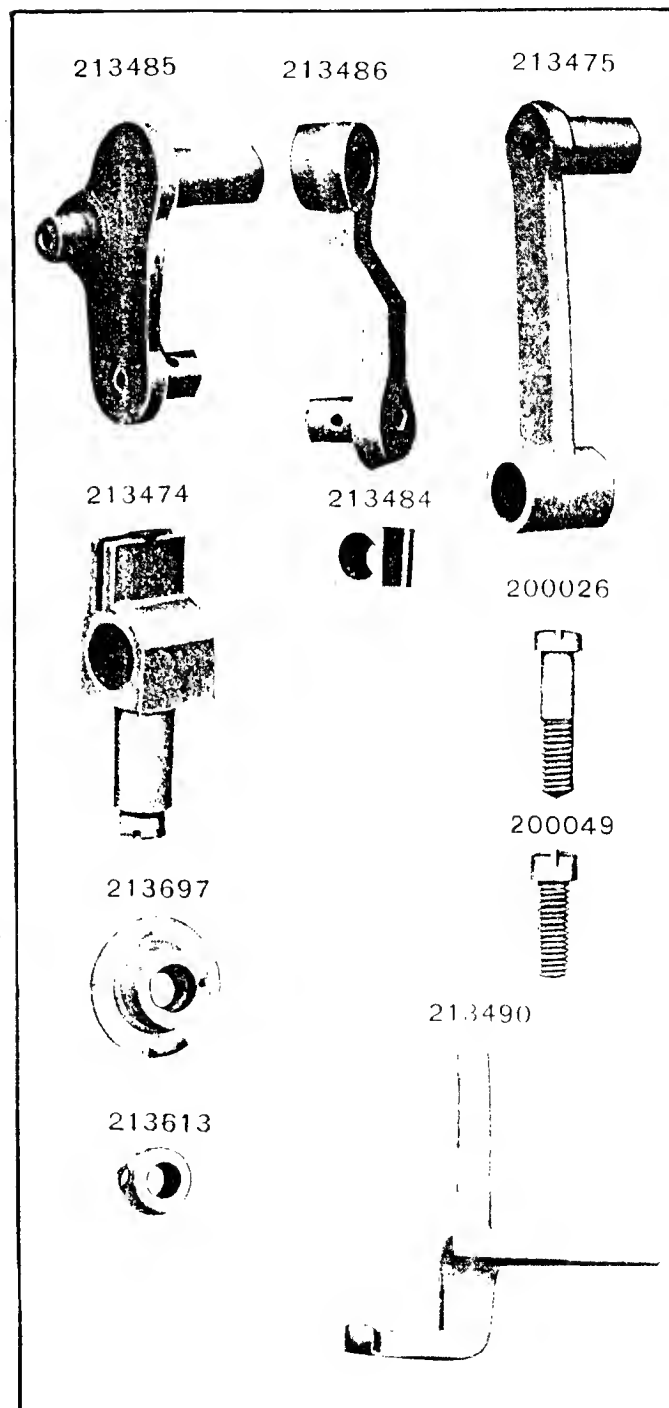 


PLATE 11072—FULL SIZE

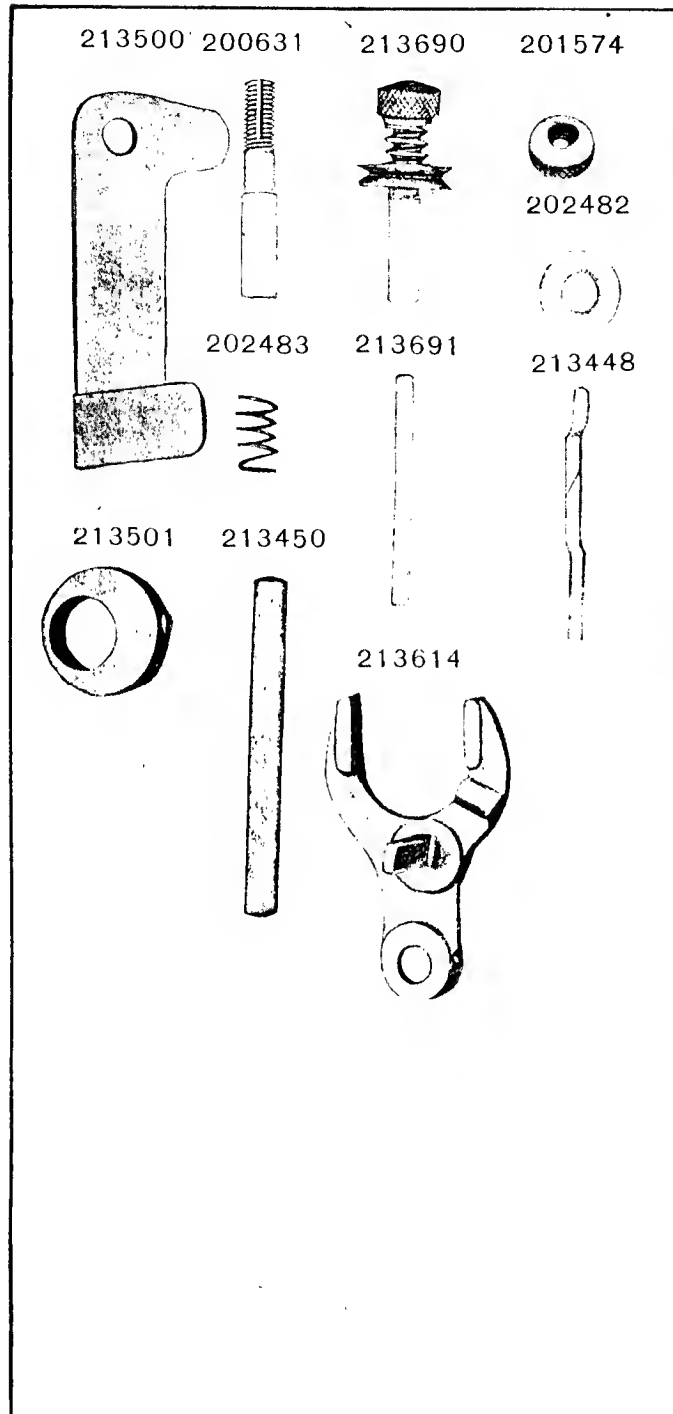 


PLATE 11073—FULL SIZE

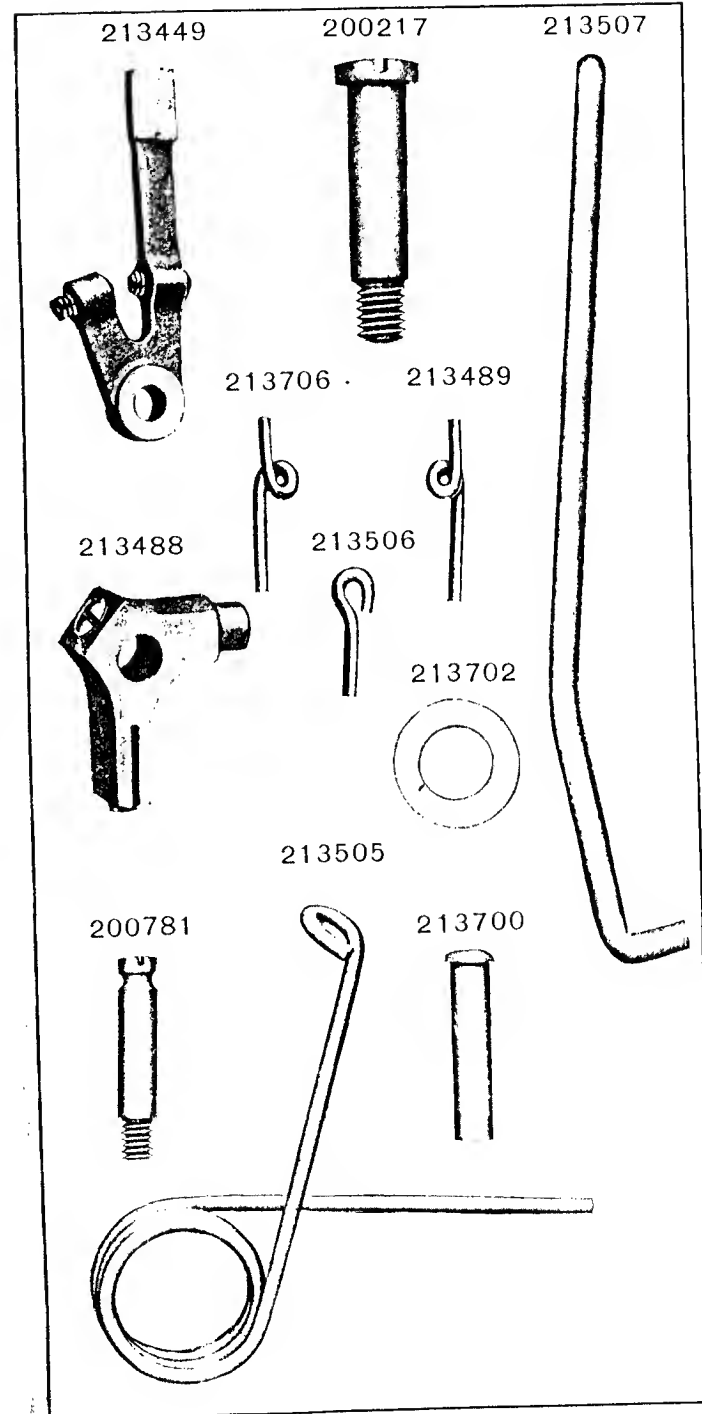 


PLATE 11074—FULL SIZE

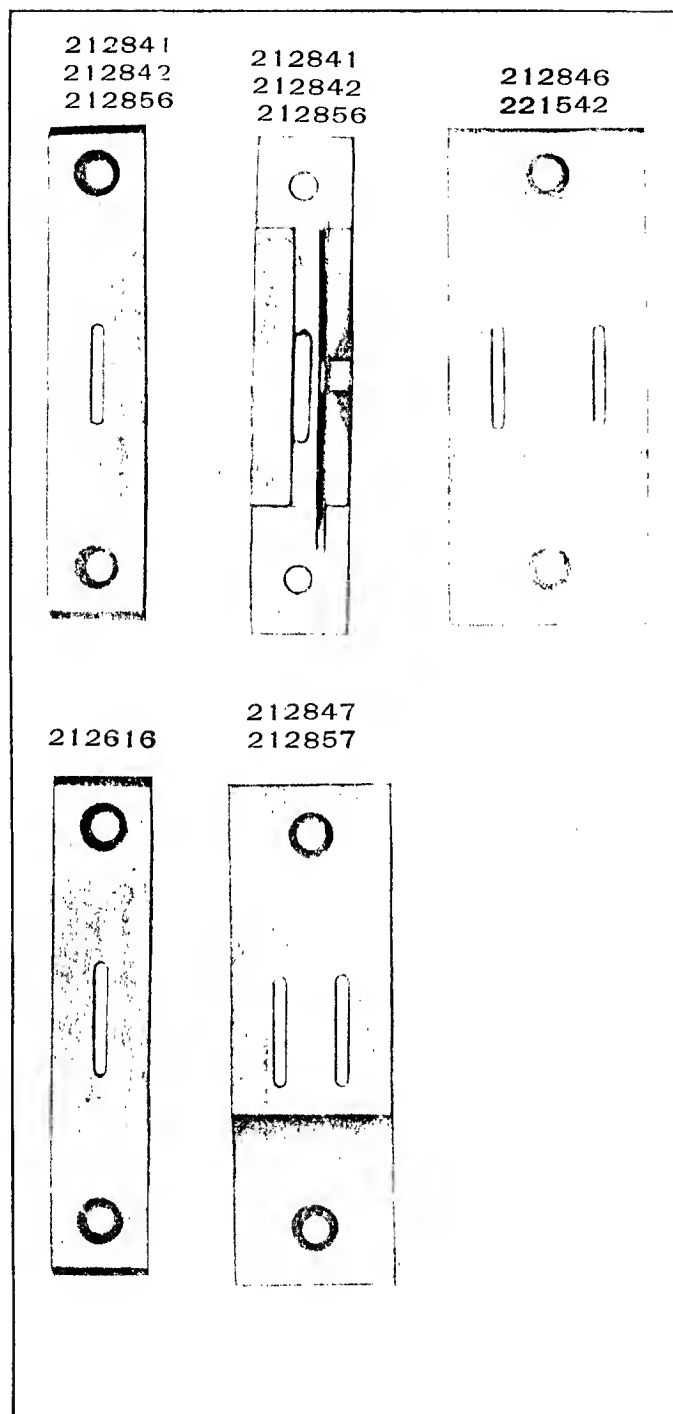 


PLATE 11077—ONE-HALF SIZE

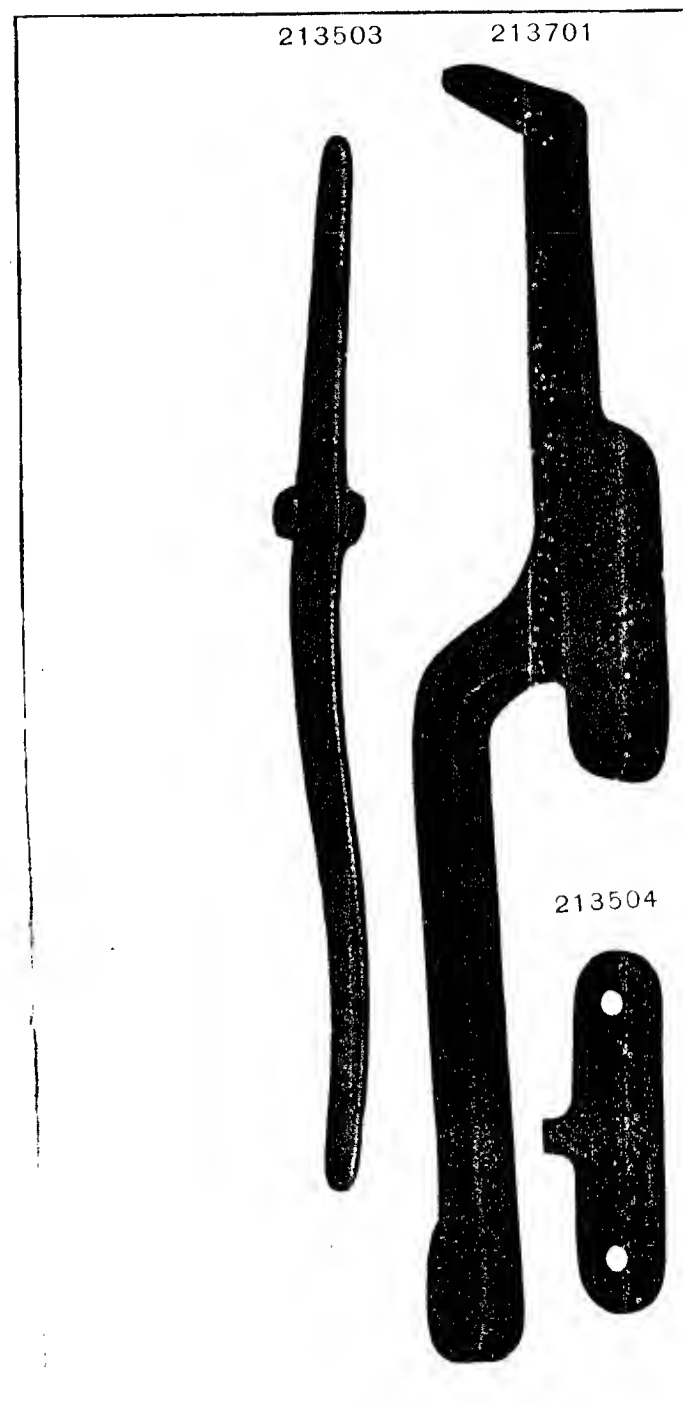 


PLATE 11078—FULL SIZE

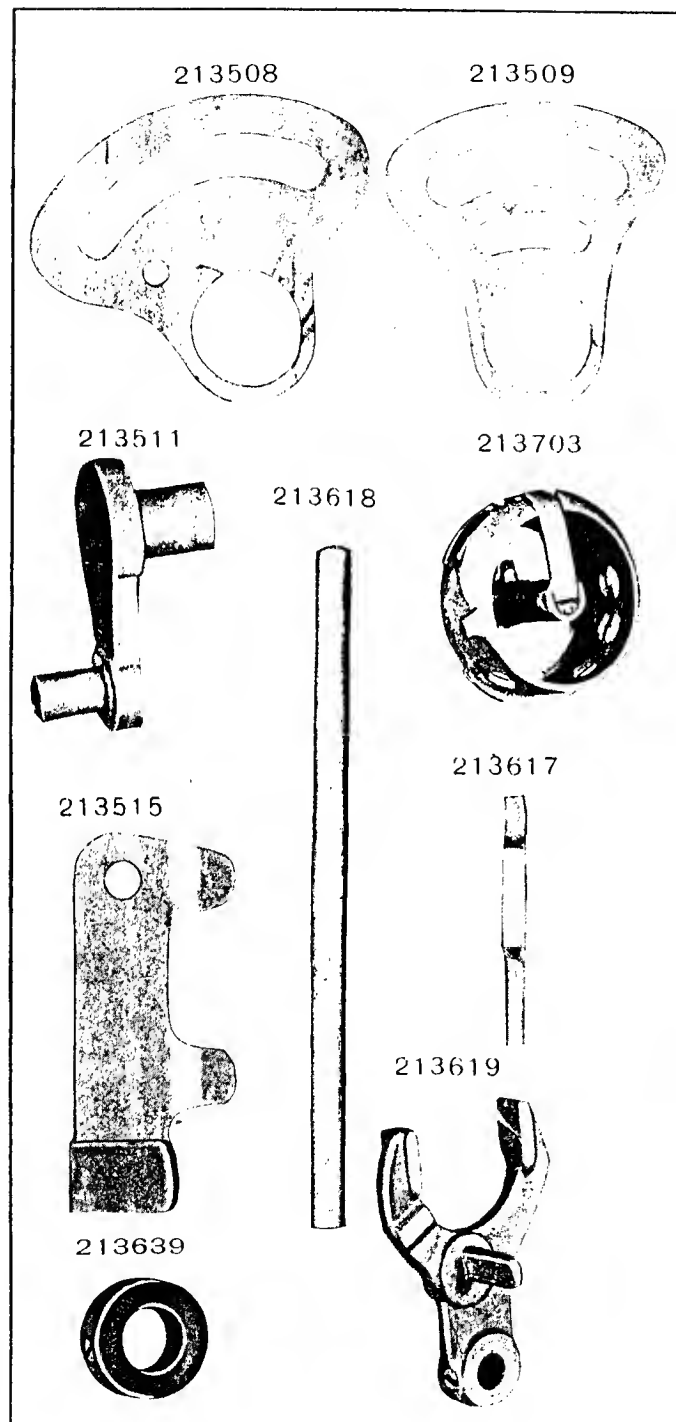 


PLATE 11079—FULL SIZE

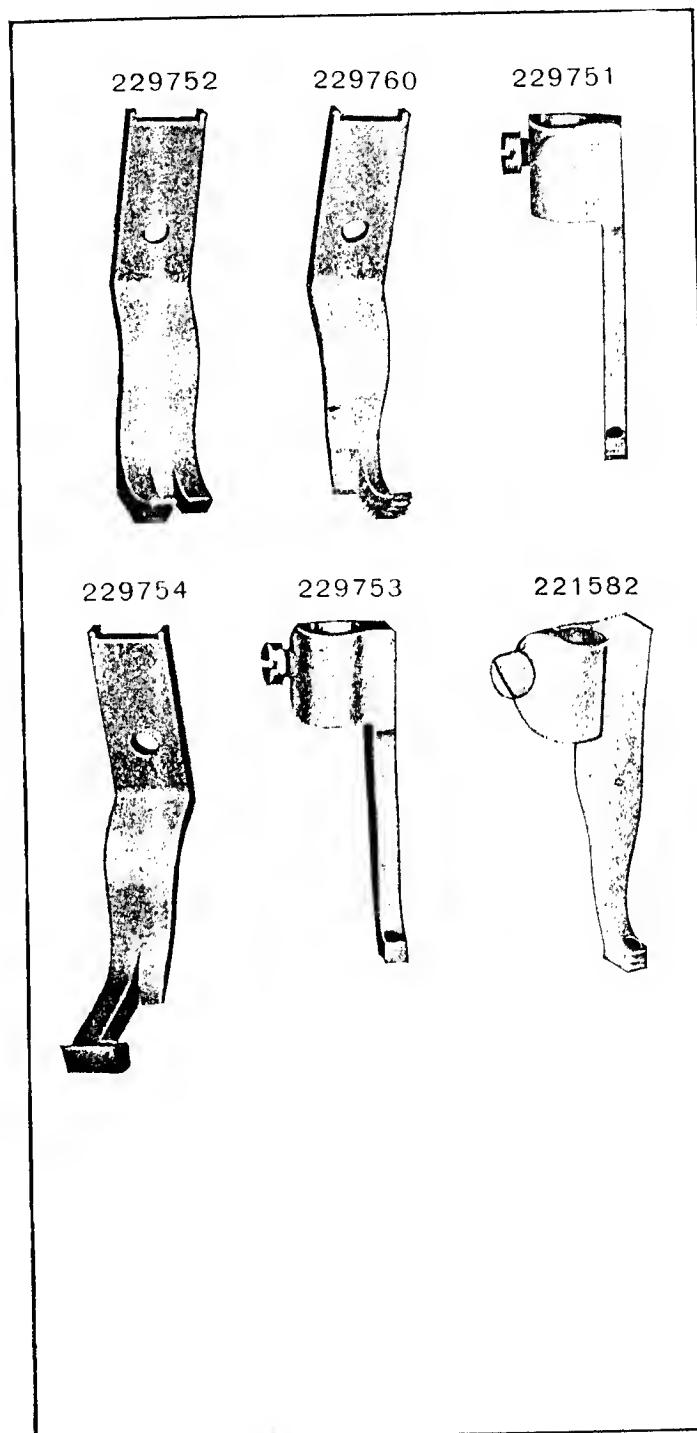 


PLATE 11080—FULL SIZE

229756



229755



229757



221611  
229758



229762



229759

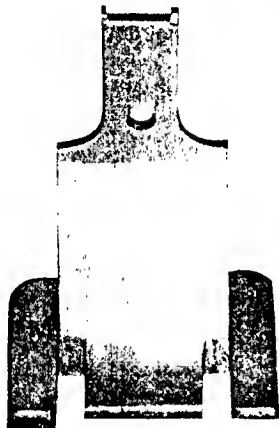 


PLATE 11183 ONE-FOURTH SIZE

213458



 
213459



213491



213471

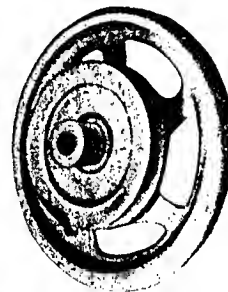

221581



PLATE 11185—ONE-HALF SIZE

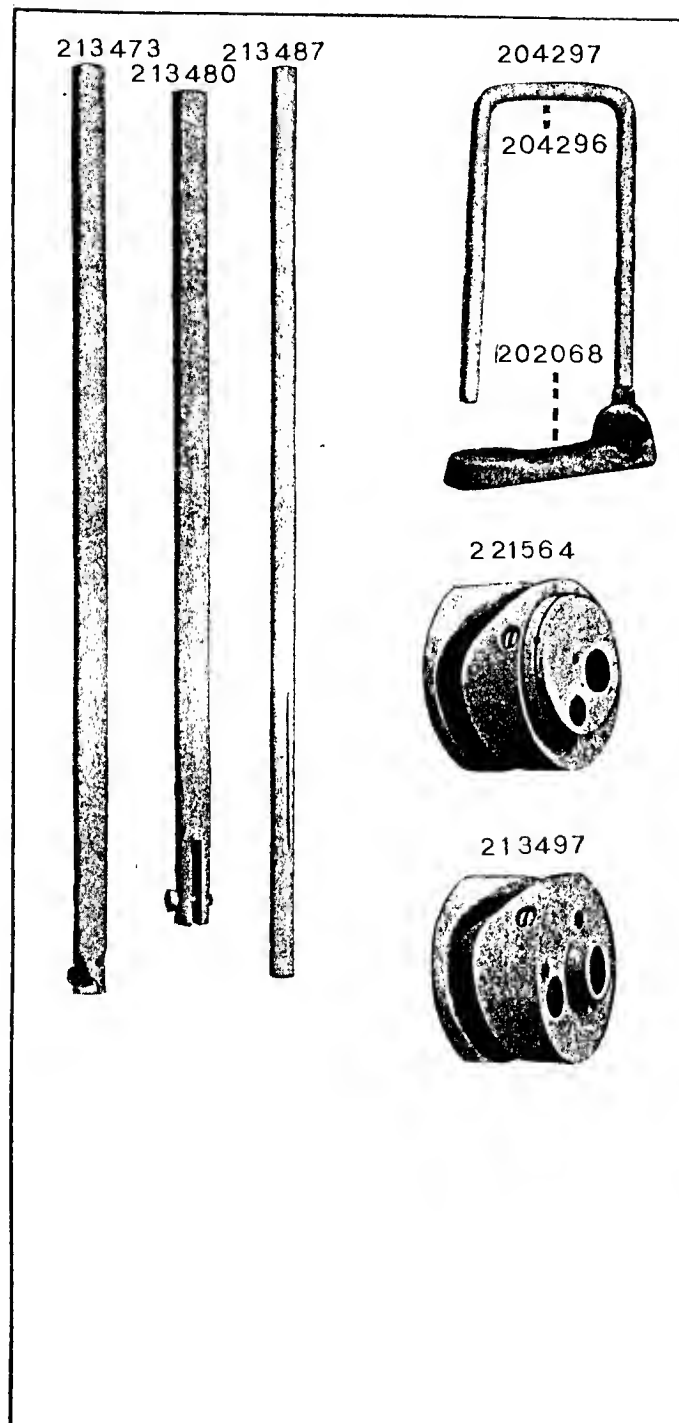 


PLATE 11701—FULL SIZE

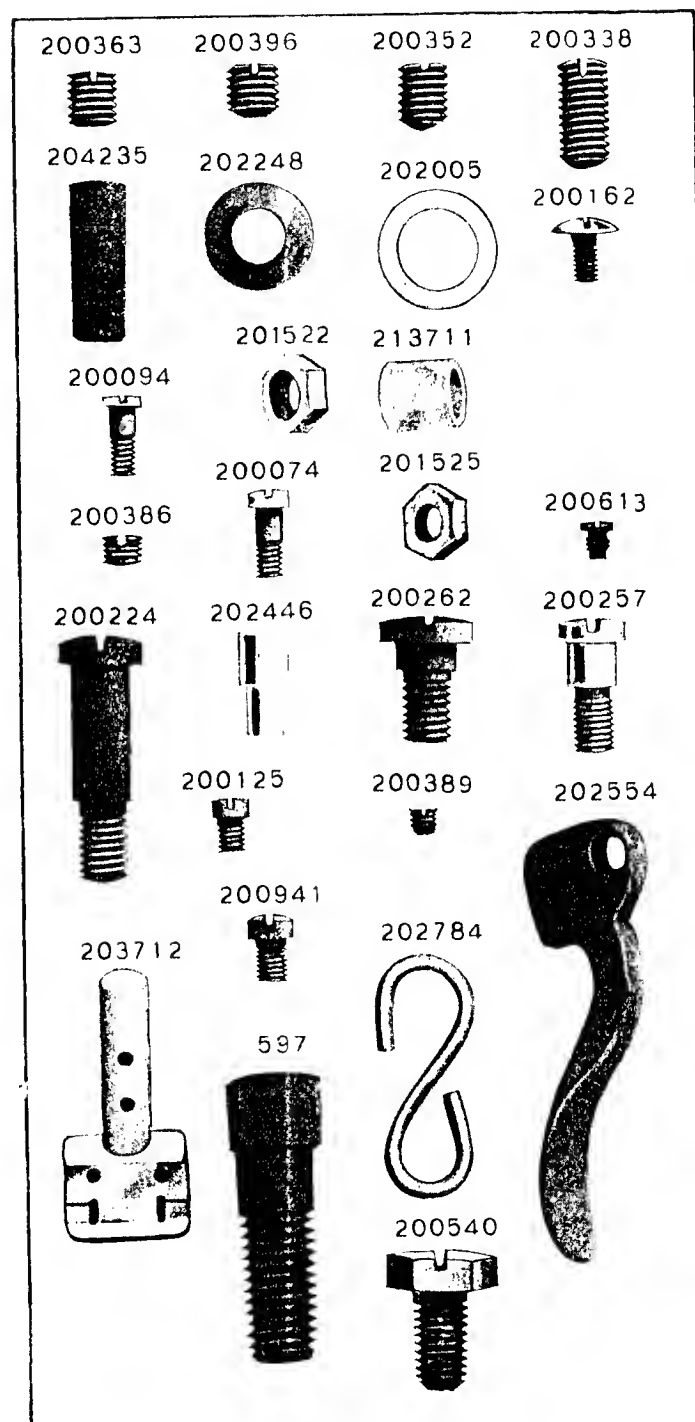




 PLATE 11702 -ONE-HALF SIZE

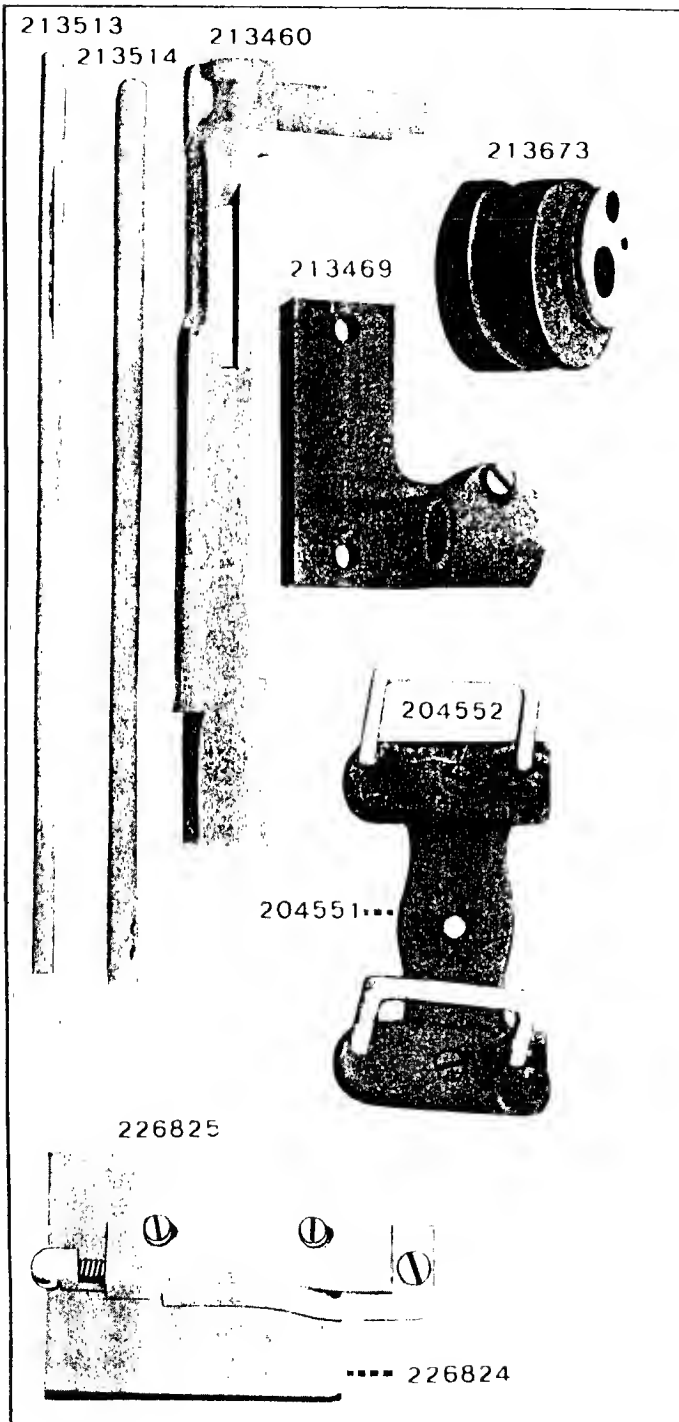 


PLATE 11703—FULL SIZE


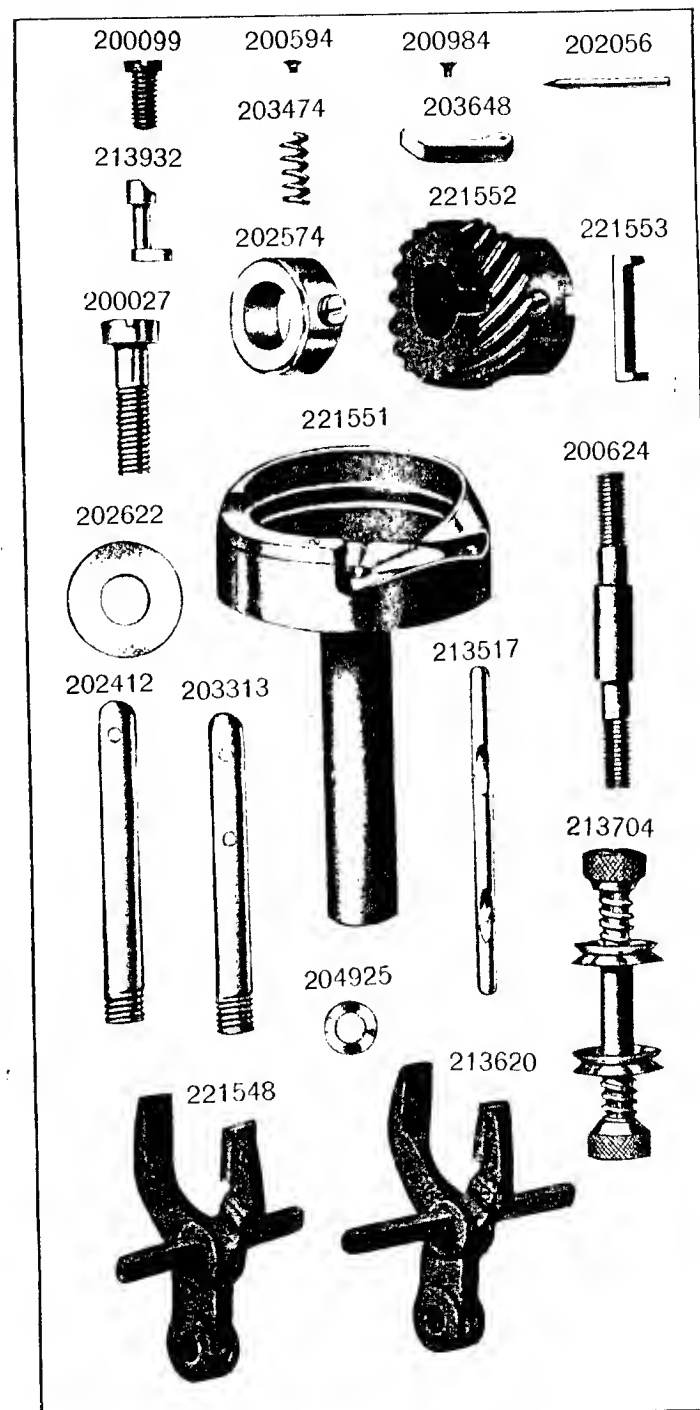 


PLATE 11704--ONE-HALF SIZE

 221555



221556

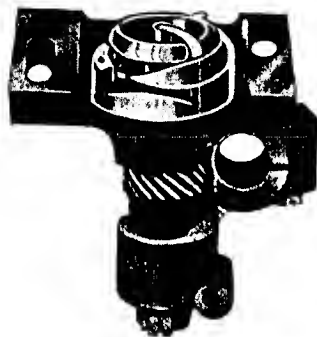

227678



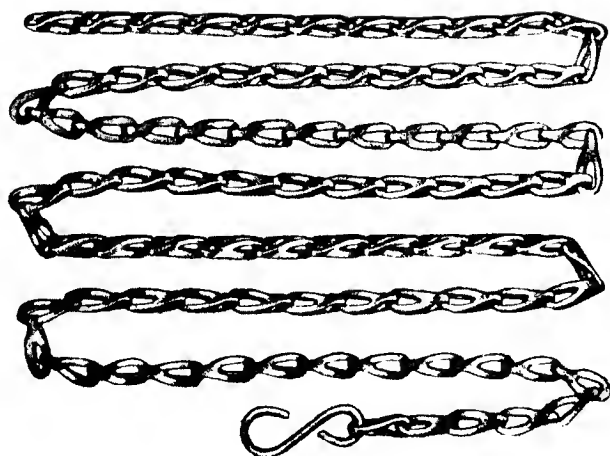 


PLATE 11705--FULL SIZE

 213498

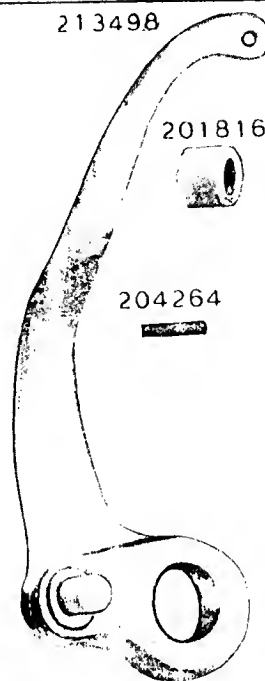

213499

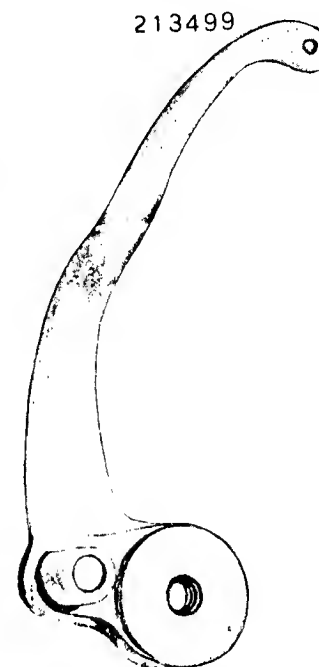 


201816



204264



 213705

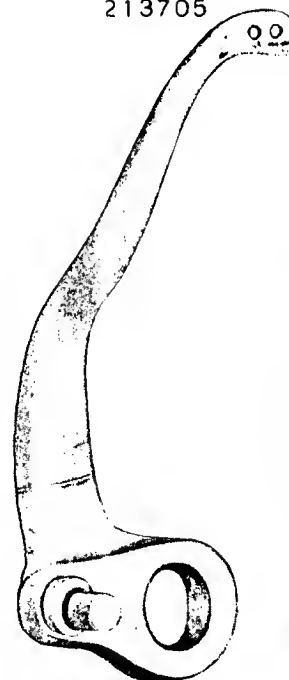

213516

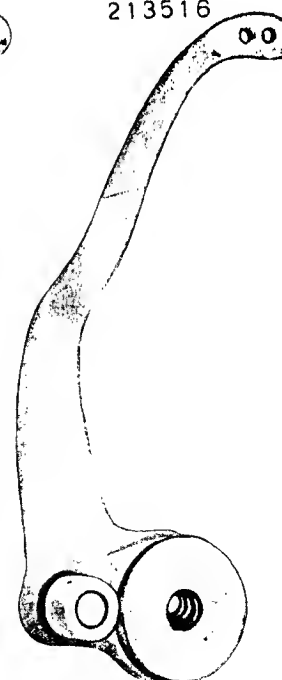 


PLATE 11706—FULL SIZE

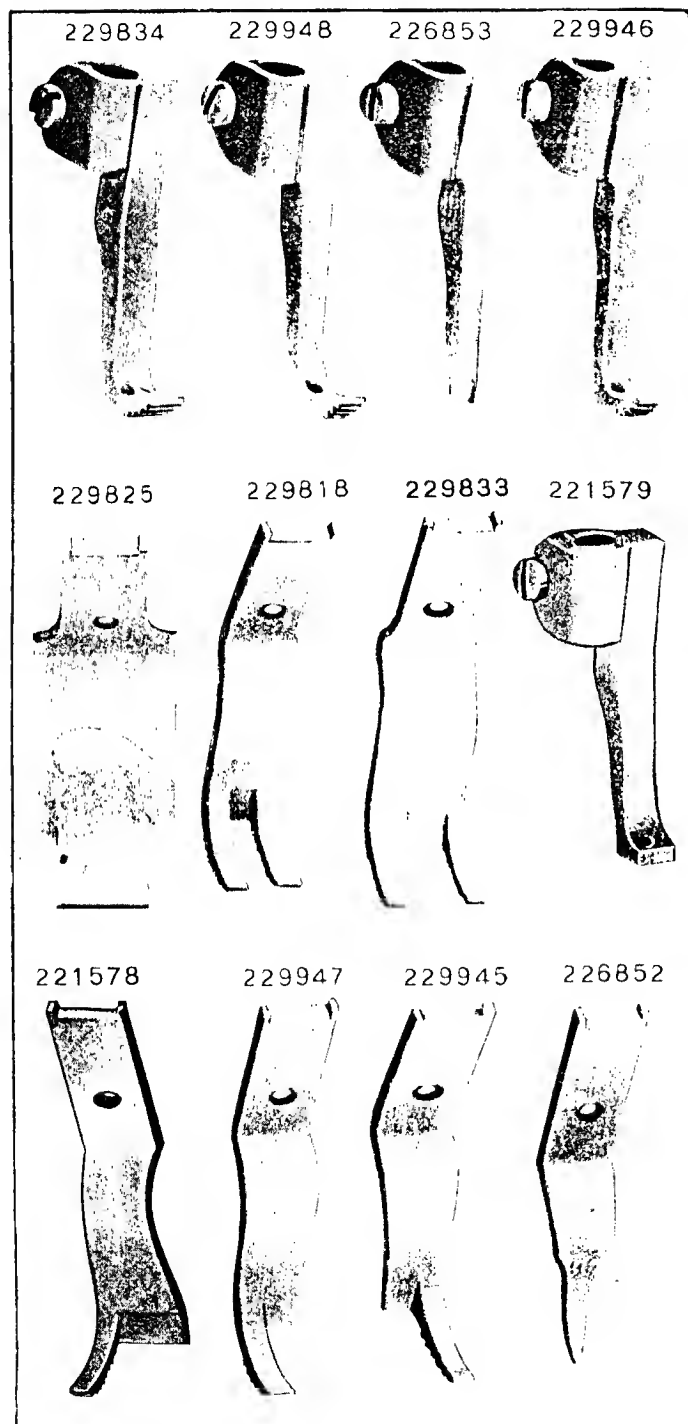 


PLATE 11707—ONE-FOURTH SIZE



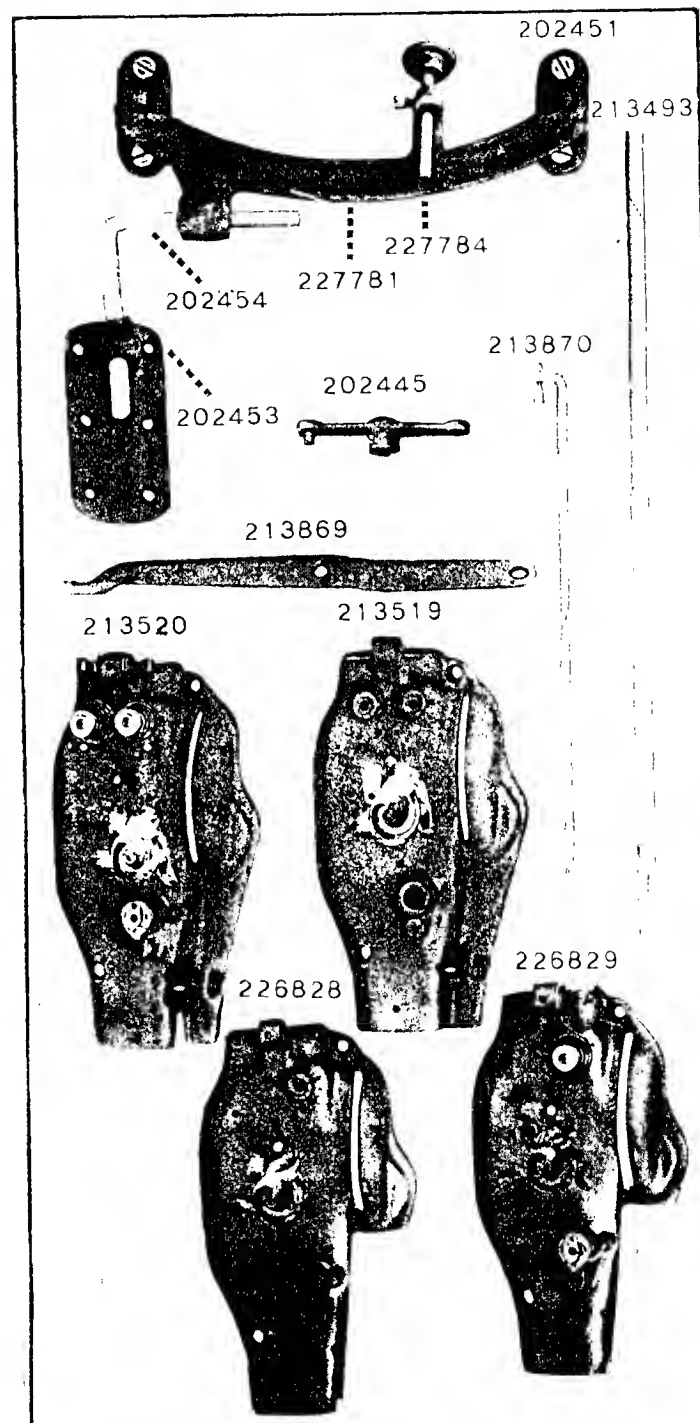 


PLATE 11708—FULL SIZE

 230054

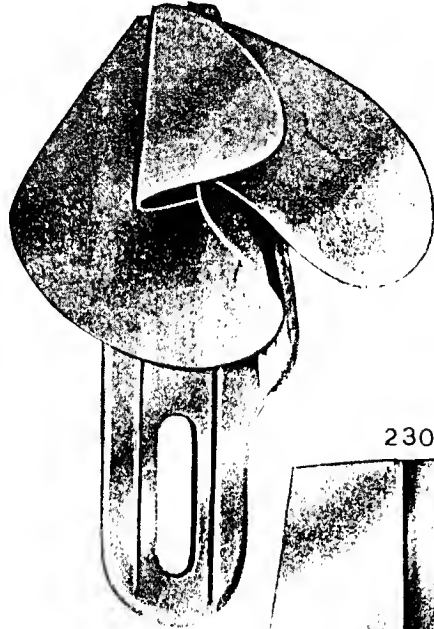

230709

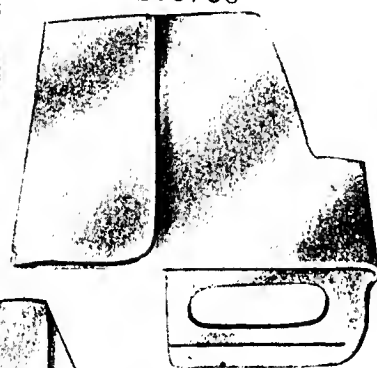 

230053


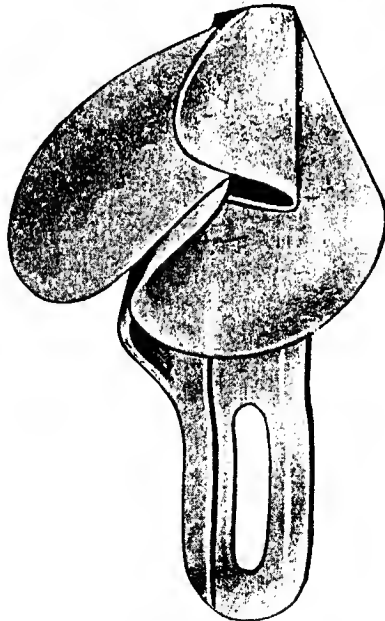 


PLATE 11709—FULL SIZE

 
230455



200170

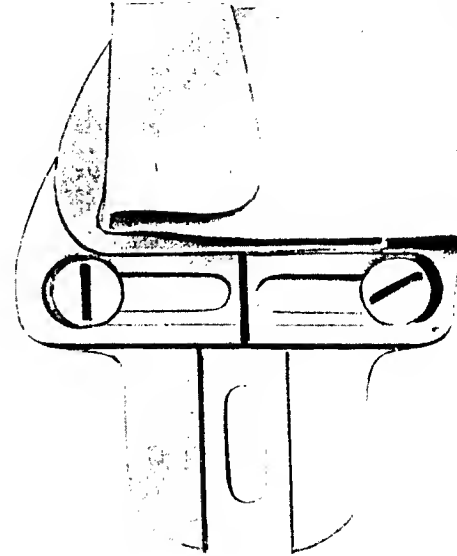

 230710

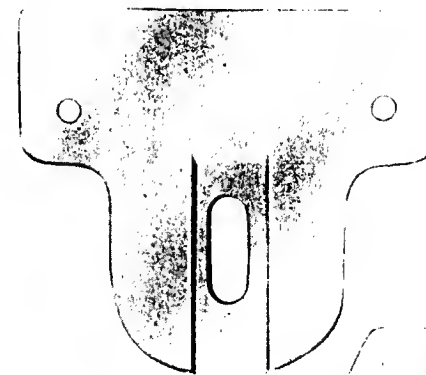

230708

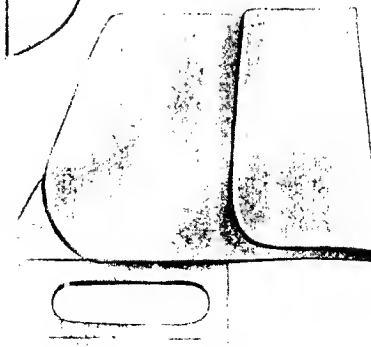 


PLATE 11710-FULL SIZE

200281 200172 200103 200164



200058 200077 204190 206216



226848



226847



226843



226842





226845



PLATE 11711-ONE-HALF SIZE

  226841 226844 226849

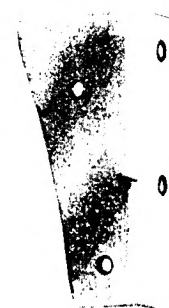

221577

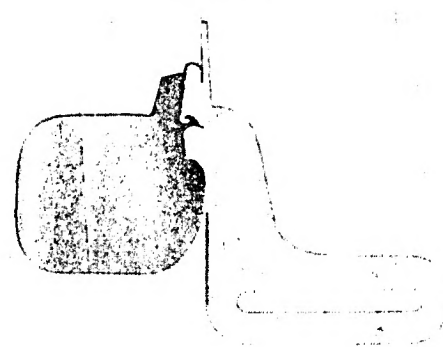 


PLATE 12153—ONE-HALF SIZE

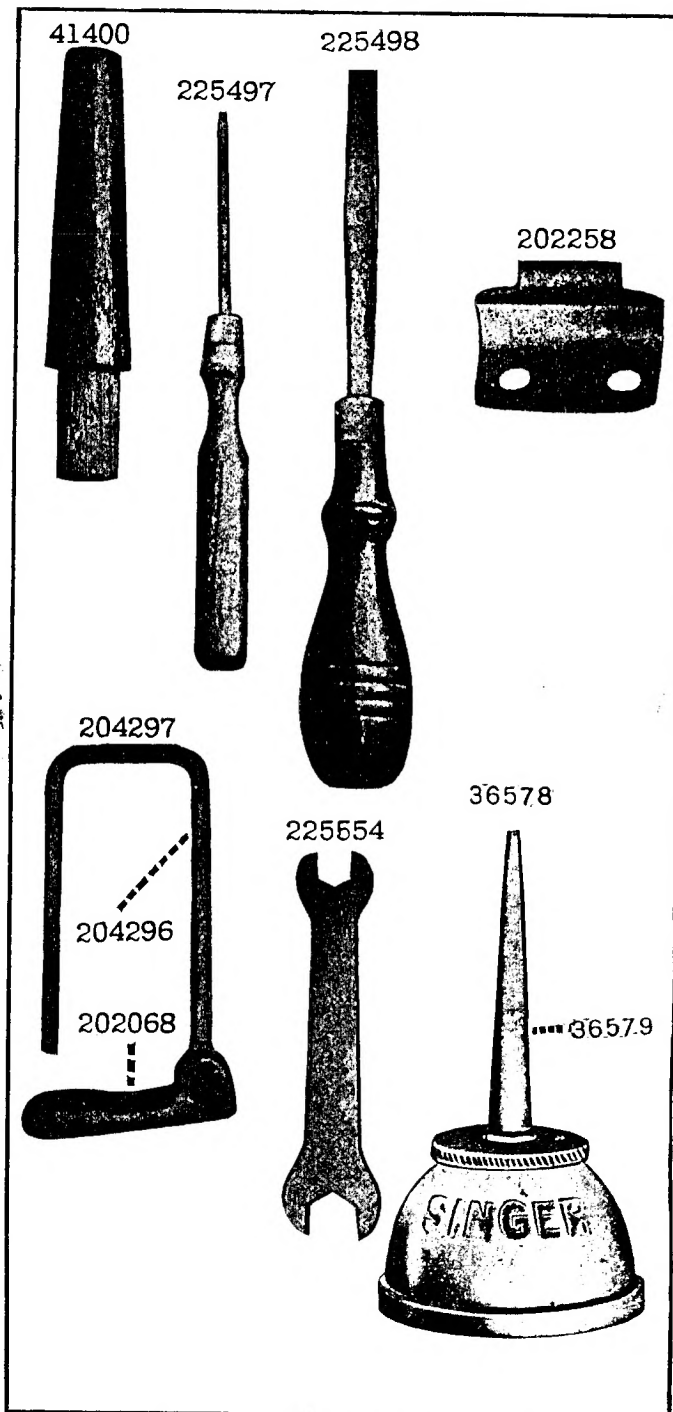 


PLATE 12311—FULL SIZE

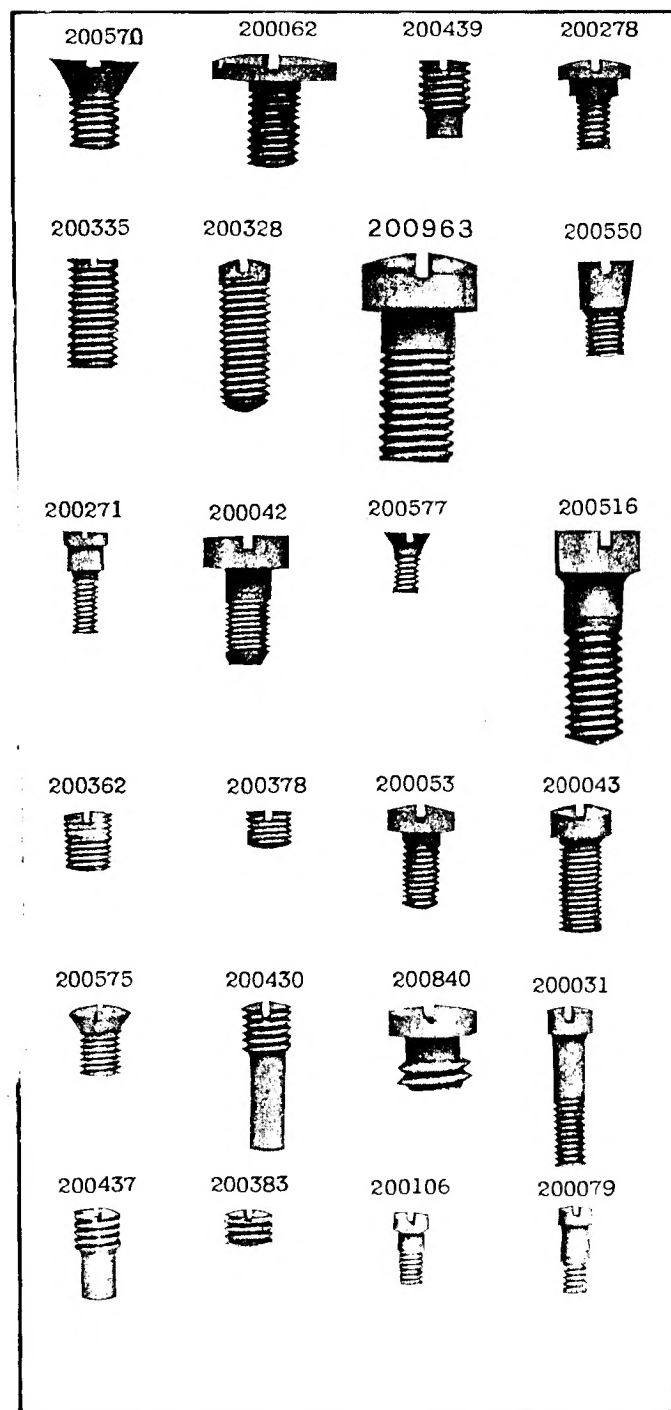 


PLATE 12319 -FULL SIZE

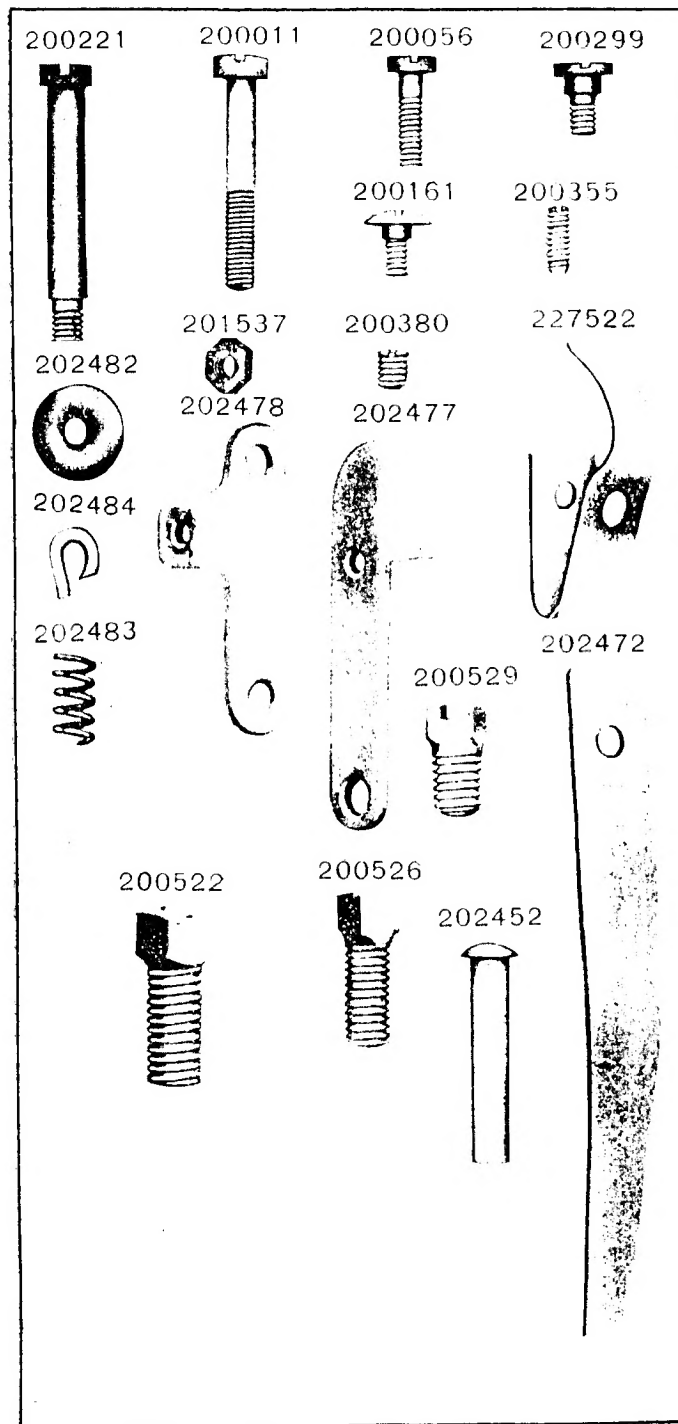 


PLATE 12320-ONE-HALF SIZE

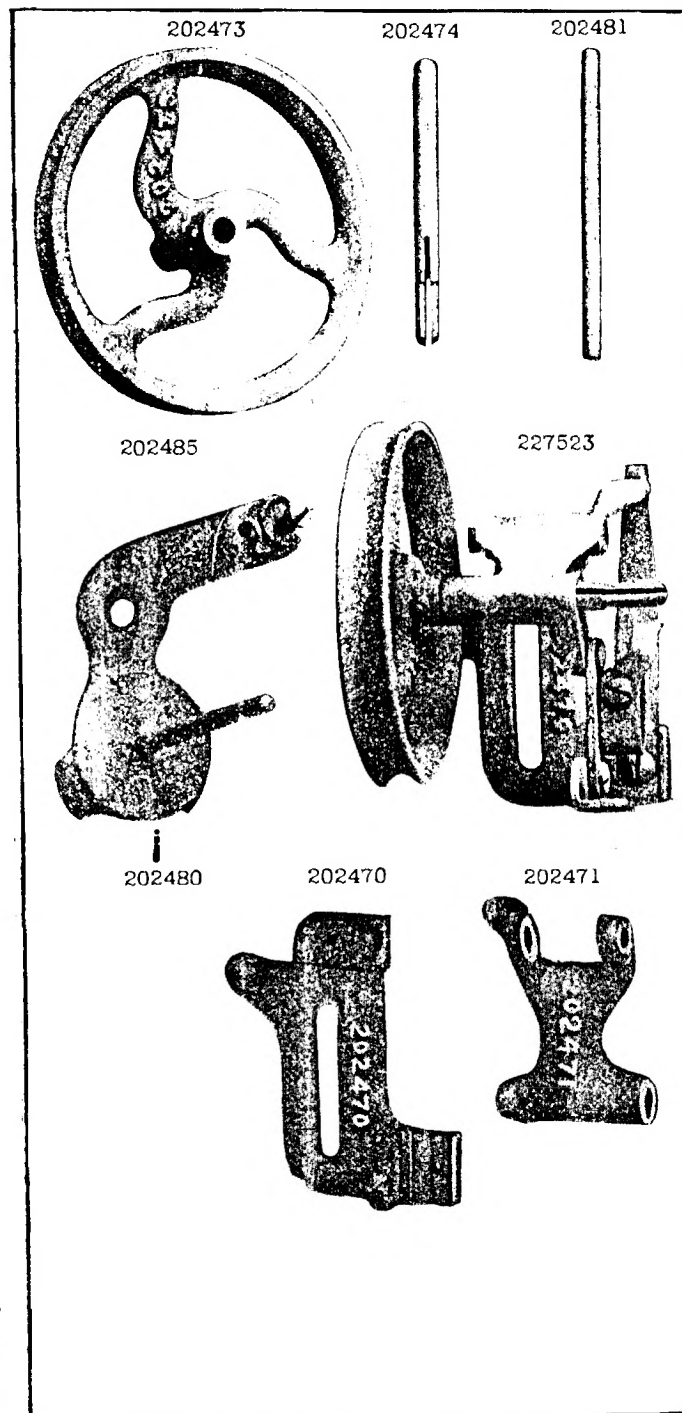 


PLATE 12349-FULL SIZE

